

3D PINBALL

★ Relive Classic 3D Pinball With Our Retro Machine ★

EG01

Assembly Instruction



ROKR



★ BONUS ★
200 POINTS
600 POINTS







14+

Part List





Bag No. 1

(Due to plenty of parts, suggest to keep them in a box properly to prevent loss during the assembly)

ROKR

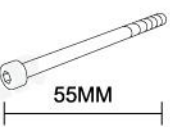Item	Screwdriver	M4 Hexwrench	M3 Hexwrench	Stud	Screw	Screw	Screw	Hexagon screw	Hexagon screw	Steel shaft
Item number	P1	P2a	P2b	P3	P4	P5	P6	P7	P8	P9
Illustration										
Quantity	1	1	1	2	2	2	1	7	1	4


Bag No. 2

Steel shaft	Steel shaft	Spring	Spring	Spring	Connecting rod	Flange nut	Bakelite ball	Nut	Angle iron	Steel ball
P10	P11	P12	P13	P14	P15	P16	P17	P18	P19	P20
Illustration										
Quantity	1	2	1	1	2	3	1	1	2	6

Bag No. 3

O-ring	O-ring	O-ring	Button
P21	P22	P23	P24
Illustration			
Quantity	7	2	2

Bag No. 4

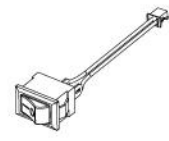DC cord	Switch	3P Flat Cable
P25	P26	P27
Illustration		
Quantity	1	2

Bag No. 5

Score board
P28
Illustration

Quantity
1

Bag No. 6

Track light A
P29
Illustration

Quantity
1

Bag No. 7

Track light B
P30
Illustration

Quantity
1

Bag No. 8

Infrared monitoring A
P31
Illustration

Quantity
1

Bag No. 9

Infrared monitoring B
P32
Illustration

Quantity
1

Bag No. 10

Infrared monitoring C
P33
Illustration

Quantity
1

Bag No. 11

Light string
P34
Illustration


Quantity
2

Bag No. 12


Light string
P35
Illustration

Quantity
1

Bag No. 13

Loudspeaker
P36
Illustration

Quantity
1

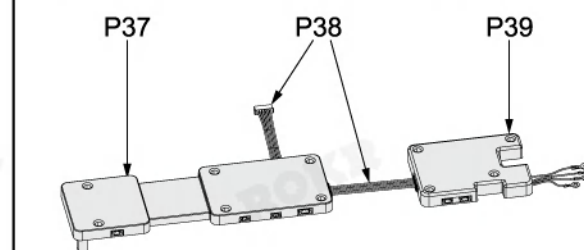Center control of power supply



Bag No. 14

Conductive cloth
P40
Illustration

Quantity
1

Bag No. 15

Bell
P41
Illustration


Quantity
2

Bag No. 16

Nut
P42
Illustration

Quantity
20

Bag No. 17

Brass screw
P43
Illustration

Quantity
20

Bag No. 18

Black screw
P44
Illustration


Quantity
12

Bag No. 19

Brass screw
P45
Illustration

Quantity
21

Bag No. 20


Screw
P46
Illustration

Quantity
6

Bag No. 21

Black screw
P47
Illustration

Quantity
6

Bag No. 22

Hexagon Screw
P48
Illustration

Quantity
32

Bag No. 23

Hexagon Screw
P49
Illustration


Quantity
17

Bag No. 24

Shaft sleeve
P50
Illustration

Quantity
11

Bag No. 25

Electromagnet
P51
Illustration

Quantity
3

Bag No. 26

Saucer-shaped part
P52
Illustration

Quantity
3

USB Power cable

P53
Illustration

Quantity
1

Red curtain A

P54
Illustration

Quantity
1

Red curtain B

P55
Illustration

Quantity
2

Double-sided tape

P56
Illustration

Quantity
3

Transparent tape

P57
Illustration

Quantity
1

Clippers

P58
Illustration

Quantity
1

Wax

P59
Illustration

Quantity
1

3D PINBALL

★ Relive Classic 3D Pinball With Our Retro Machine ★

ROKR

EG01

Assembly Instruction



BONUS
200 POINTS
600 POINTS

WMMO

14+

WARNING:

The product is for who is over 14 years old. Kids should assemble under the guidance of adults.
The product not suitable for children under 3 years.
The product shall only be used with a transformer for product or a power supply for it.
The product shall be used with the power supply supplied, if the transformer is supplied with the product.
The transformer or power supply is not a toy or model.
Products liable to be cleaned with liquids are to be disconnected from the transformer or power supply before cleaning.
The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
Do not connect the wire to output socket.
The product is not to be connected to more than the recommended number of power supplies.
The instruction must be retained since it contains important information.

MAINTENANCE:

1. Keep the product away from the source of ignition and water to prevent any damage.
2. Don't use chemical reagents like alcohol, ammonia water to clean the product.
3. Use clean and soft fabric to clean the product if necessary.

*CUSTOMER SERVICE


ROKR Facebook: @rokrofficial Email: service@robotima.com
Please contact us on Facebook or email if you have any questions.

ATTENTION

1. Take off the pieces from the board according to each step before assembling, and place them properly in case of missing.
2. According to the instructions when you assemble all the pieces. Keep properly the instructions and validated after assembly.
3. Polish the parts with sand paper, enhance aesthetic feeling and gear lubrication.
4. Repair with glue prepared by yourself if the wooden pieces would be break.
5. There are letters on some parts as shown, assemble them together with same letters.
6. Scan the QR code with remind for assembly video.
7. There is a little different from several parts and the pictures on instruction, subject to parts number.
8. There are spare parts on wooden board.



Product Display

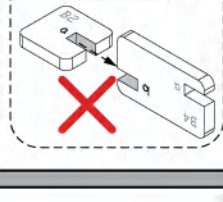

FAQ:

Problem	Cause	Solution
1. It's hard to assemble parts. What should I do?	1. Some parts related to transmission will be slightly tight, and tools can be used to assist in pressing.	1. Check for assembly errors; check if the protrusion is aligned and inclined. 2. Use tool K7 to press parts.
2. After connecting the power supply, the lighting and scoring are not displayed according to the rules.	1. USB power adapter does not match. 2. The circuit board is improperly connected with the wire, and the terminal is not inserted or inserted in the wrong slot.	1. Replace a USB power adapter. 2. Remove L7/L9/L1 parts, try to plug again to observe whether the interface is loose or reversed, and then reinstall L7/L9/L1 after troubleshooting.
3. The steel ball cannot complete the track and stop halfway.	1. Check if the protrusions are pressed in place.	1. Confirm that the protrusions of each track are pressed in place.
4. The electromagnetic ball-hitter is not sensitive.	1. The contact between the flying saucer-shaped parts and the steel ball is poor.	1. Check whether the flying saucer-shaped parts are assembled according to the instructions. 2. Use tissues to wipe the steel ball and the flying saucer-shaped parts.

Remove the plastic film on surface

Polish the gray parts with the sandpaper

Perspective conversion

Flip over the assembly

Assembly tips

Assemble the part symmetrically

Special attention in assembly

Complete 2 same parts

Wax the gray parts with remind

Part P18 in Bag No.1

Printed side

Blank side

Step 1

Step 2

Polish the cutting points with the sandpaper stick

Parts Instruction:

B8

This is the spare part of B8.

C12

Both of two parts are C12. One is a spare part.

Instructions of using the nipper plier

When cutting, make sure the nipper plier fit tightly to the parts.

Polish the leftover cutting points with the sandpaper stick.

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58

P58


P58

P58


P58

5

A5 x4
A8
B11 x2
D8
G20
G21

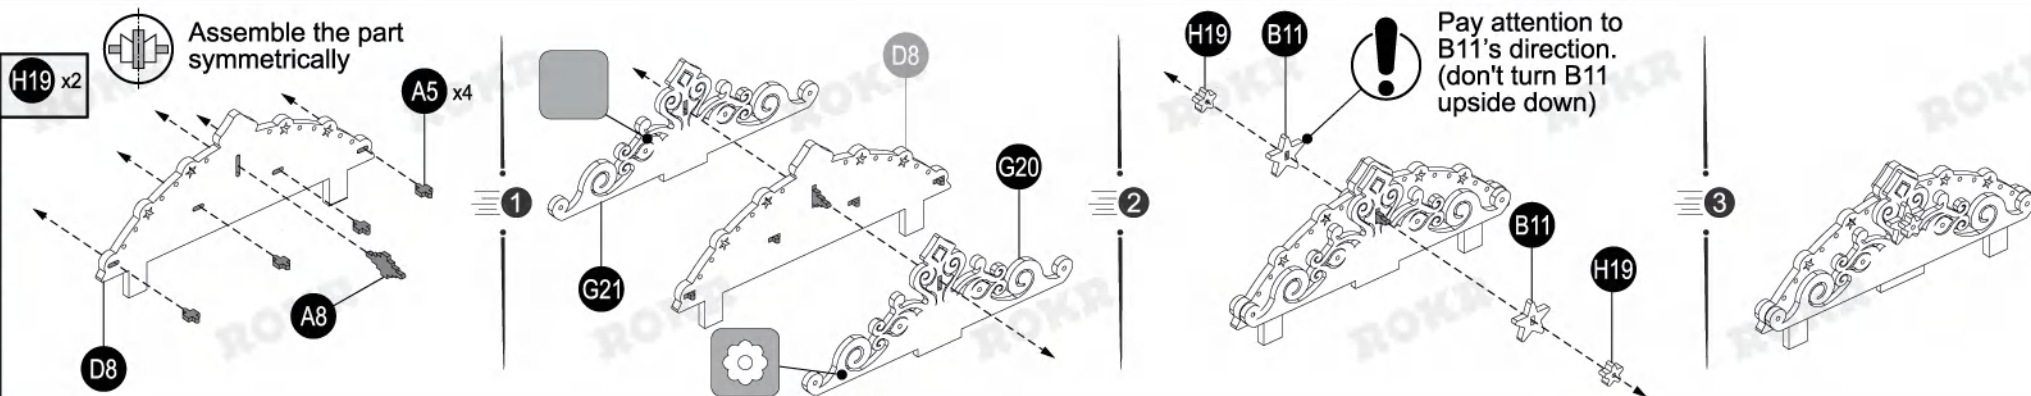

B4 x2
B17 x2
B18 x2

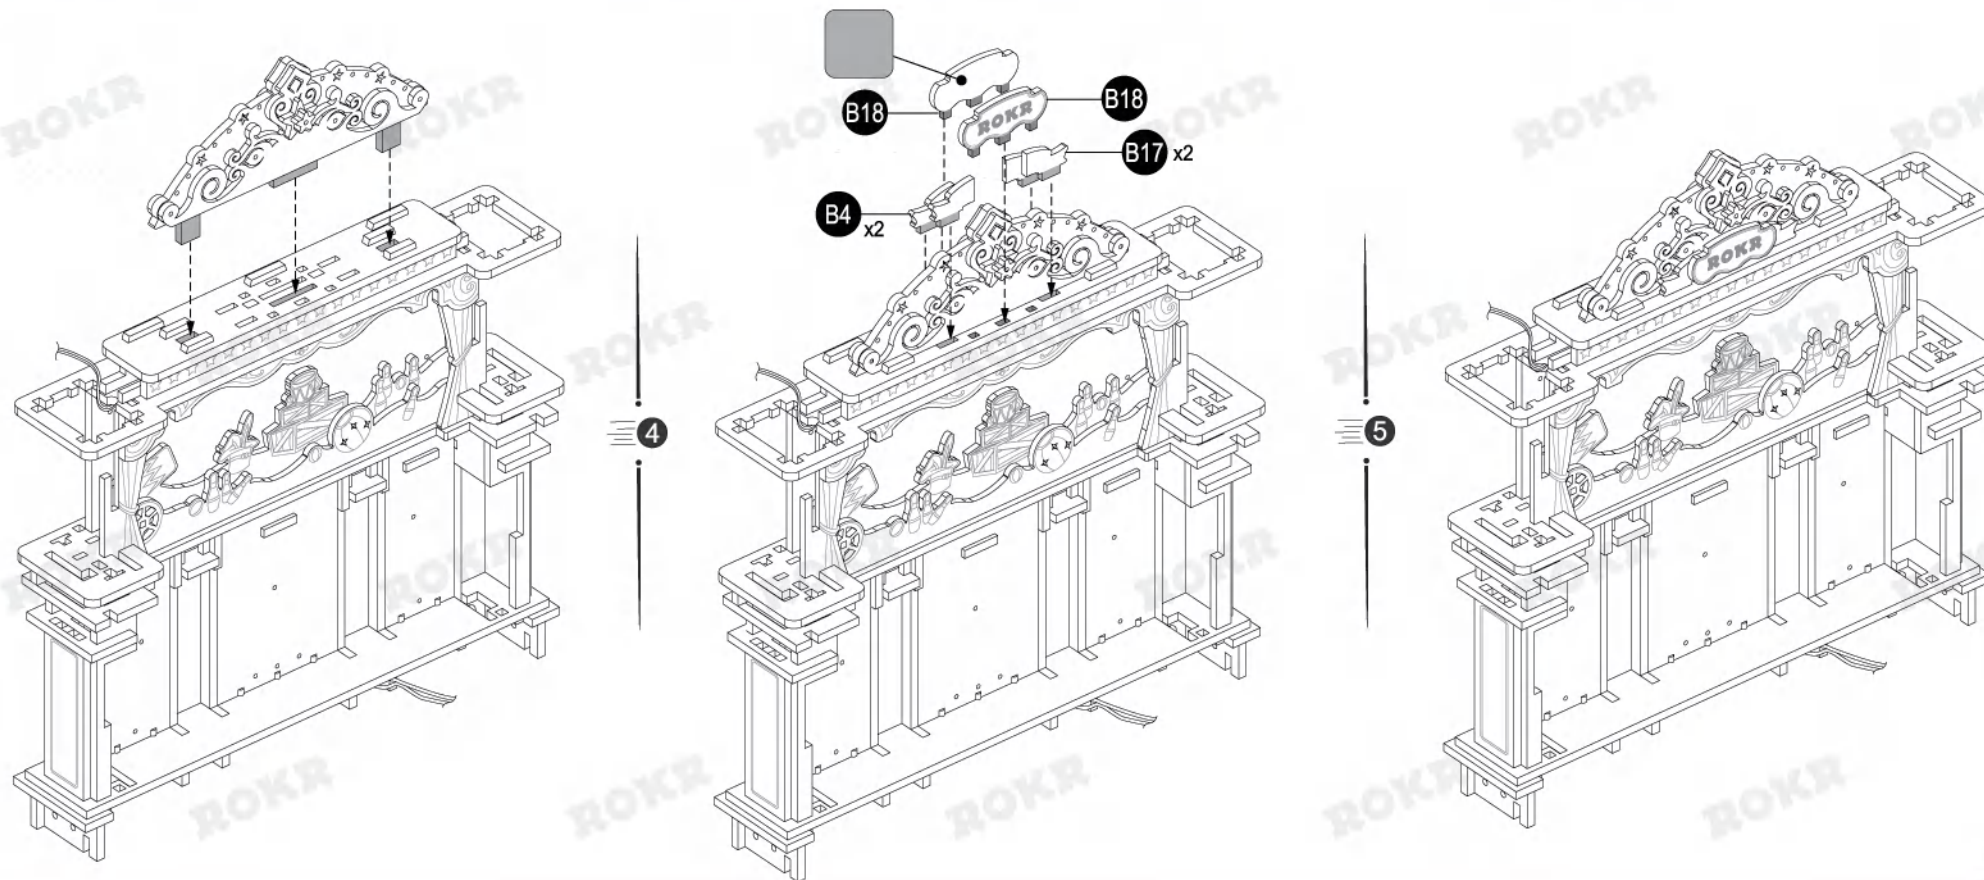



Scan for assembly videos

First pass the wire out of this hole, and then straighten it downwards (Do not pull with force). The groove do not clamp wires.

A6 x2

A14 x2

D1 x2

D2




D3

I10


I15 x2

I16 x2

I18

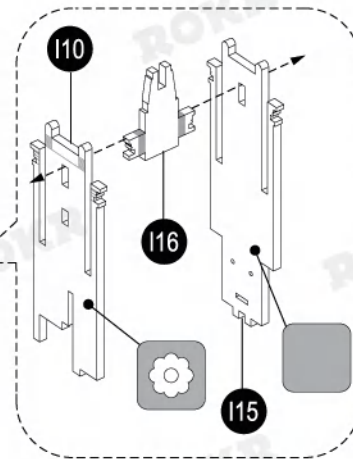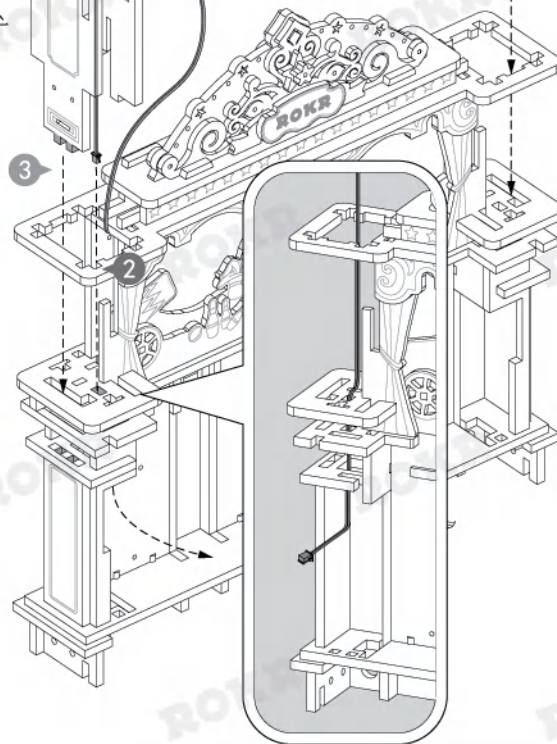
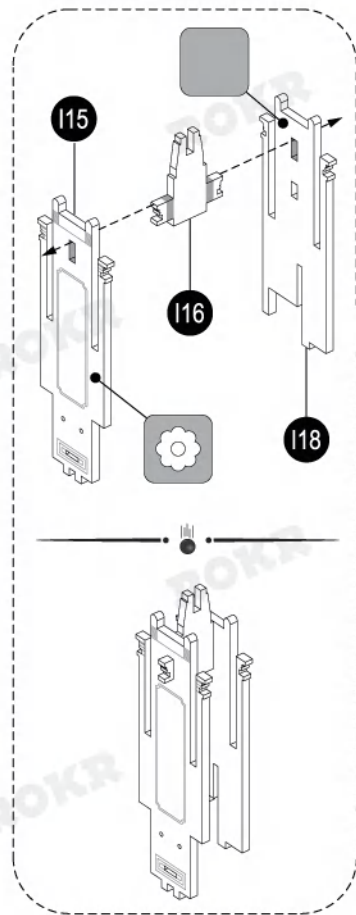


1

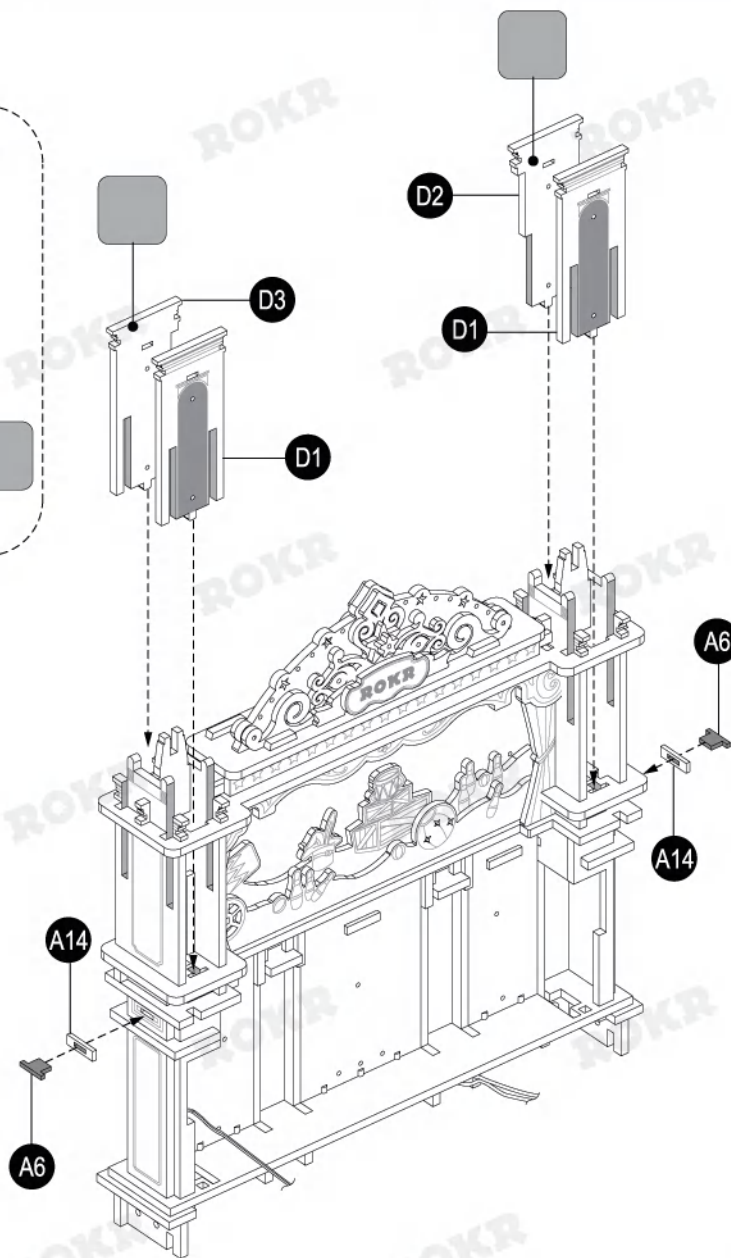


- A2 x2
- A3 x2
- F1 x8
- K7

Suggest to press with the tool **K7**.

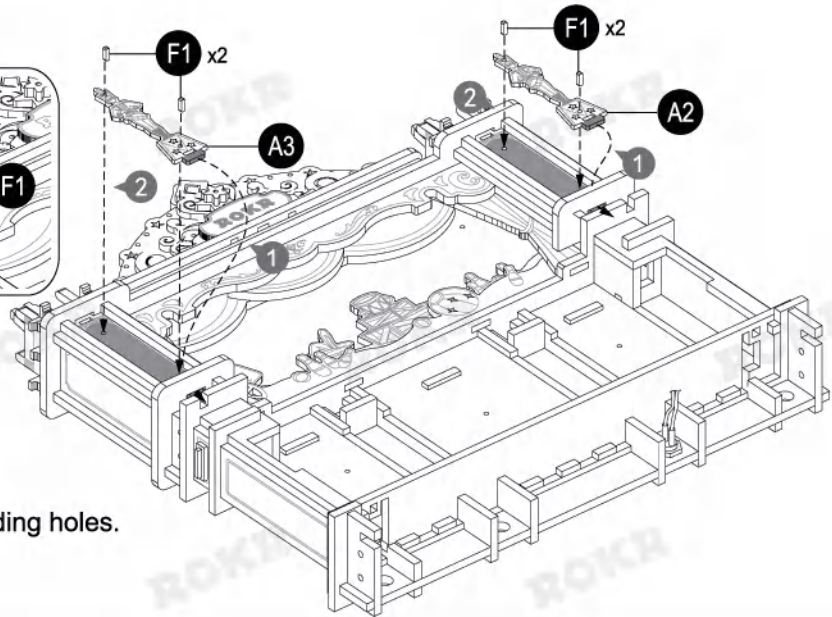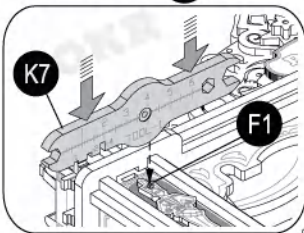



Align with corresponding holes.

1

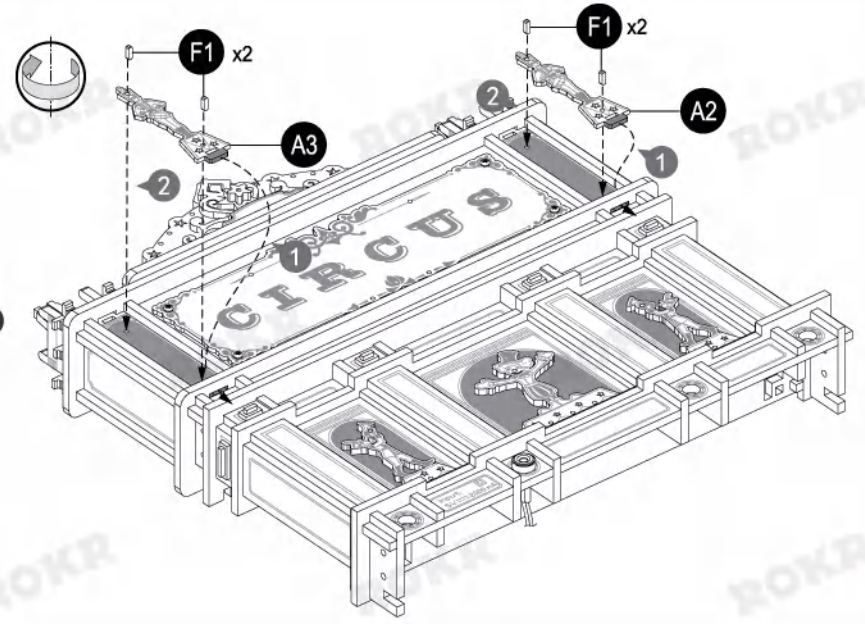


- A7 x4
- A11 x4

Suggest to press with the tool **K7**.

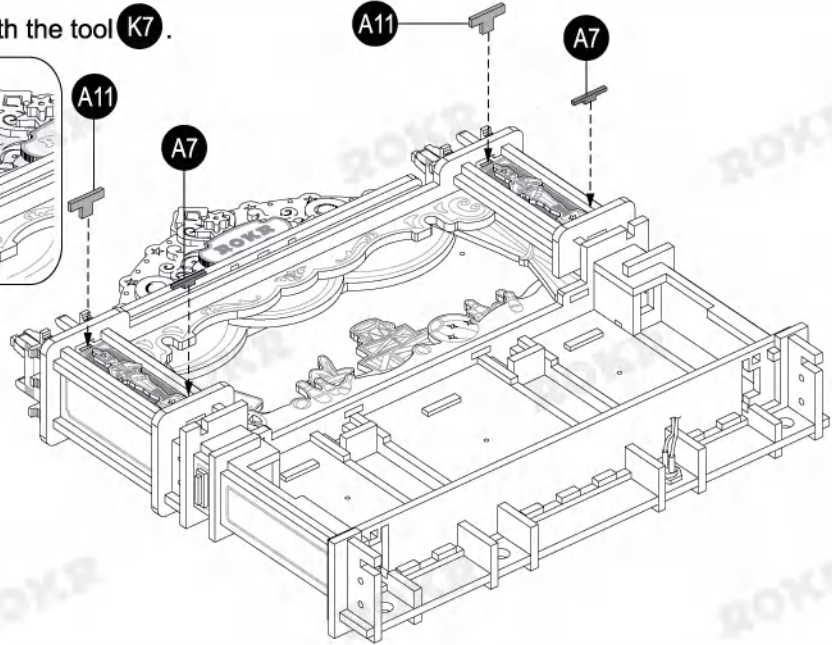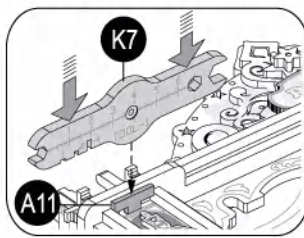

2

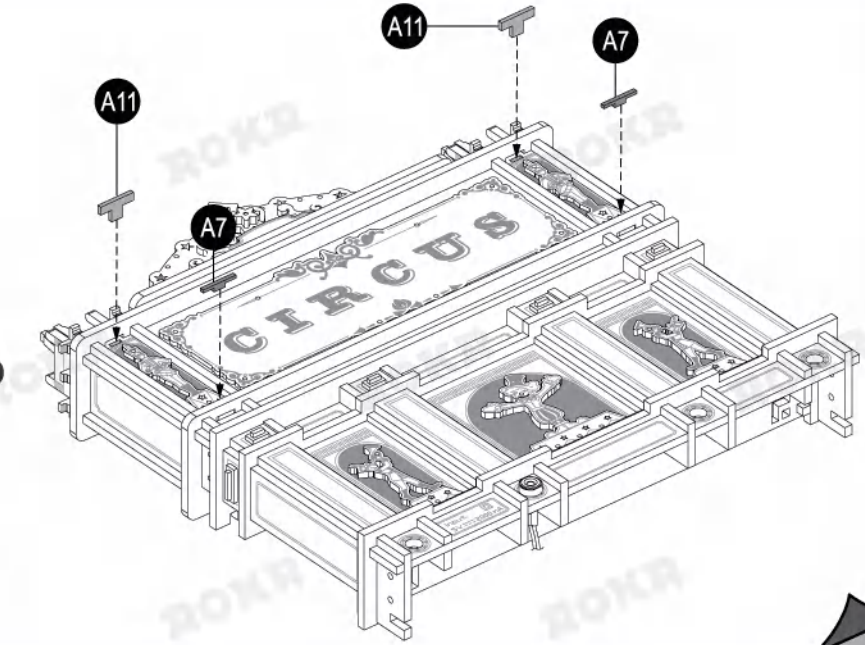

A13 x4

G7 x2


H7 x2

H10 x2




H15 x2

H18 x2


I11 x2

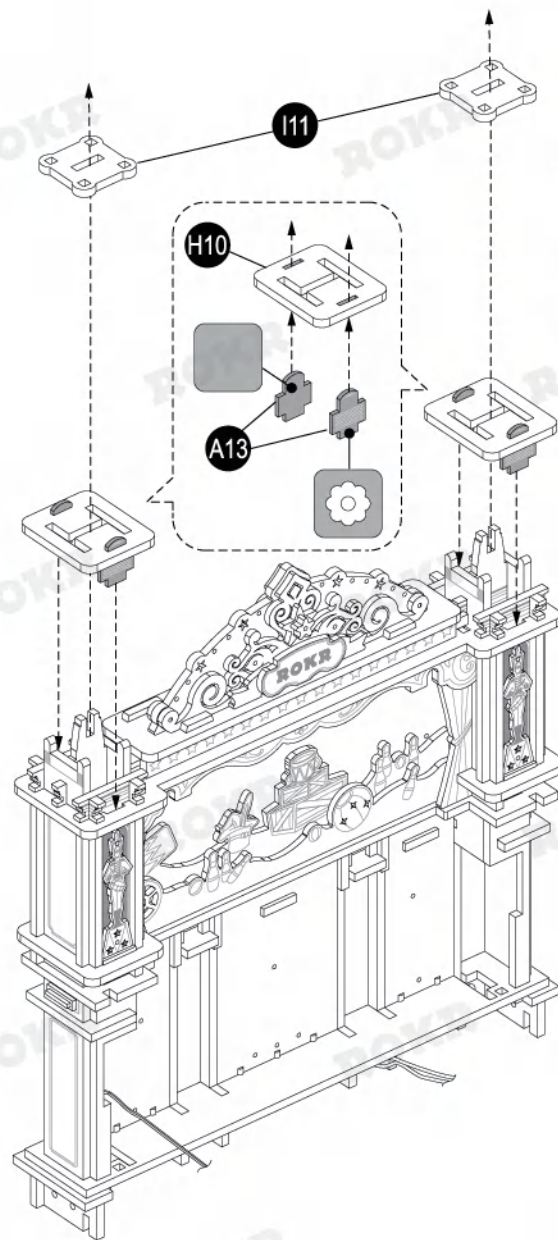



Complete as shown

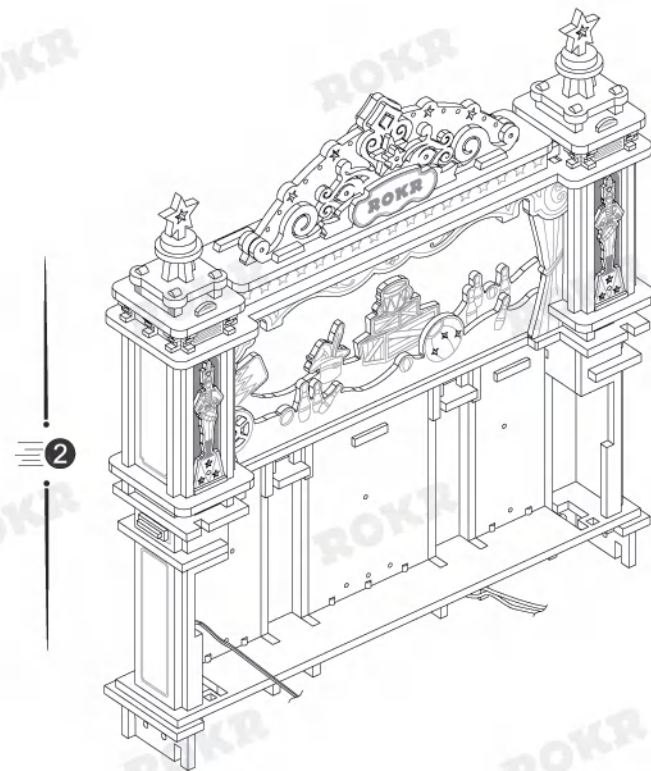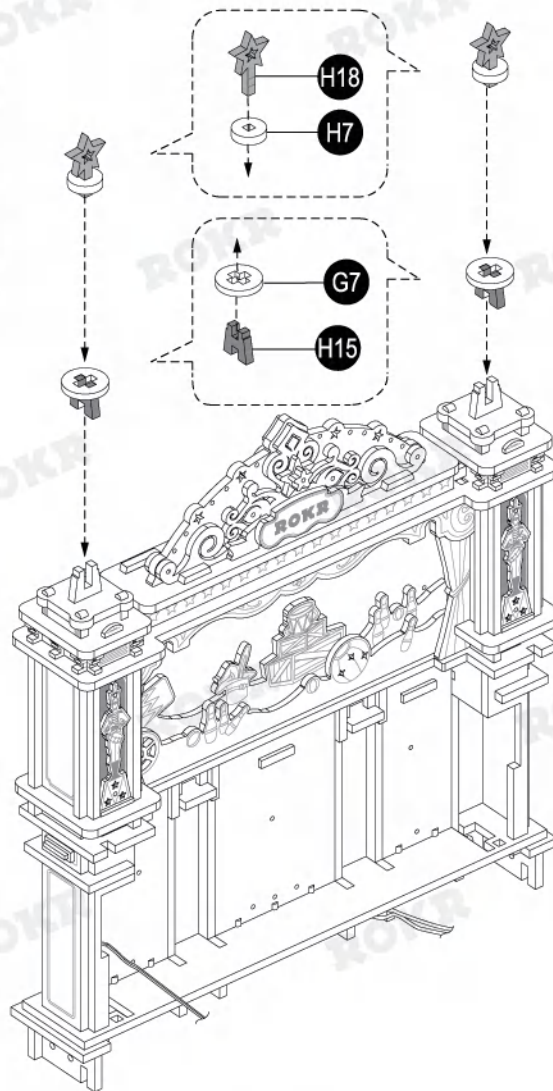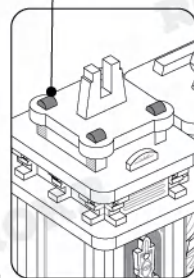

P56



- A4 x5
- A9 x3
- A12 x3
- B8
- B13
- B19 x3
- C20
- H4

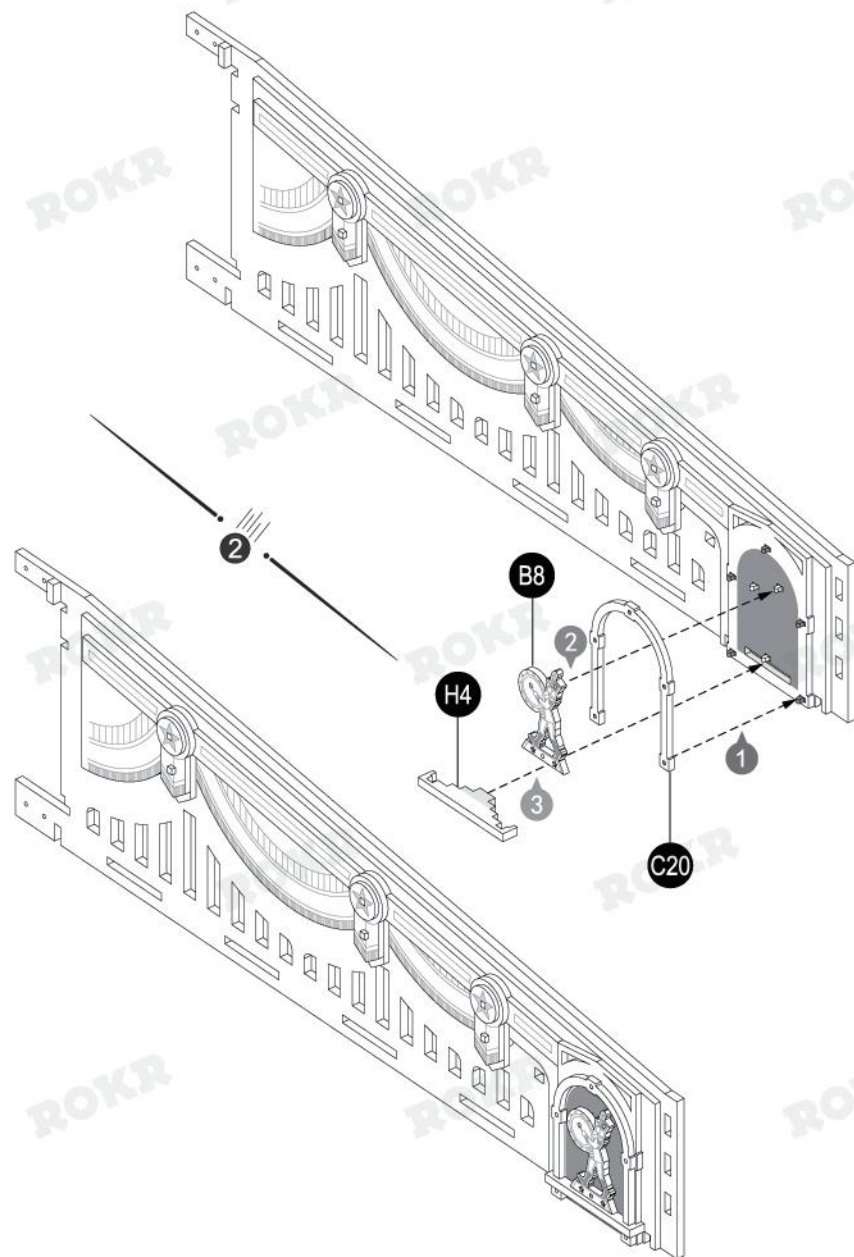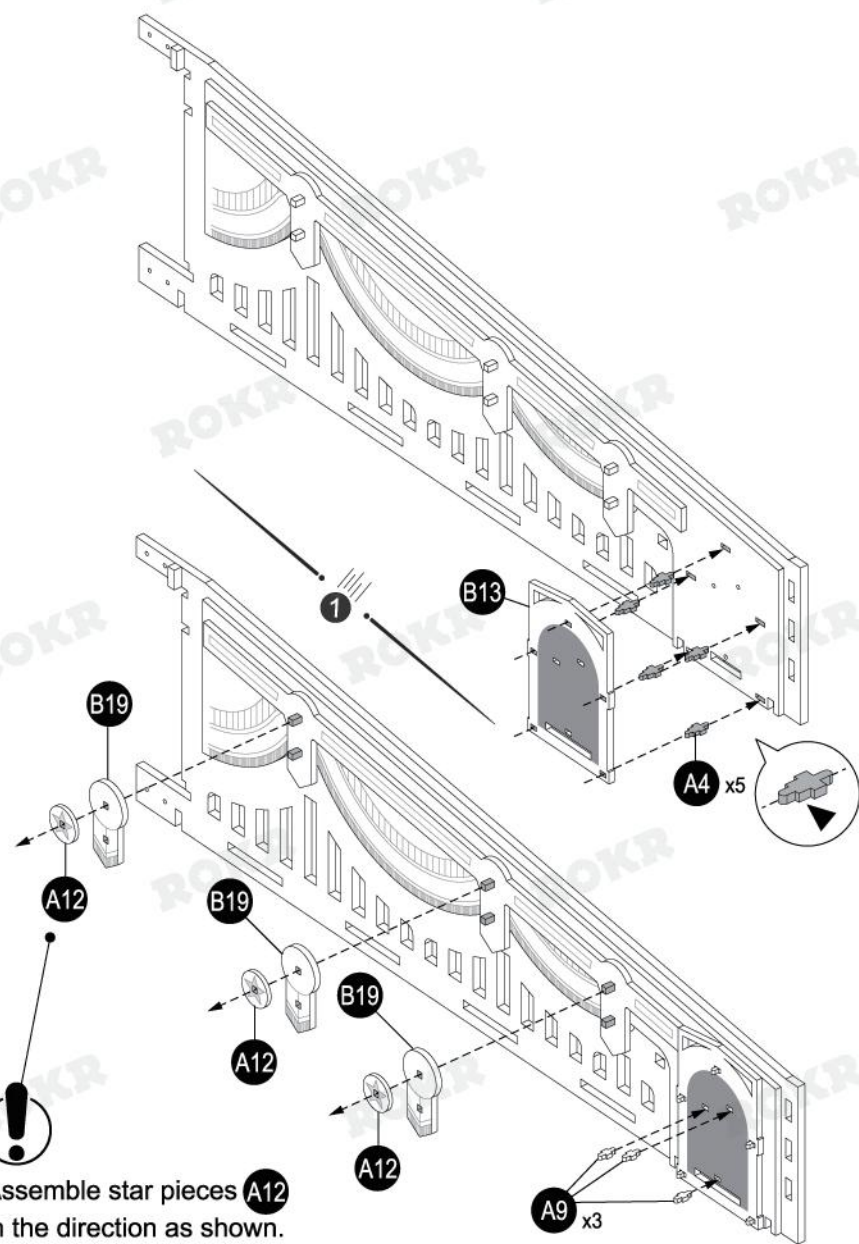

8

G9

G11


G14 x6

K1


K10

P55



P56

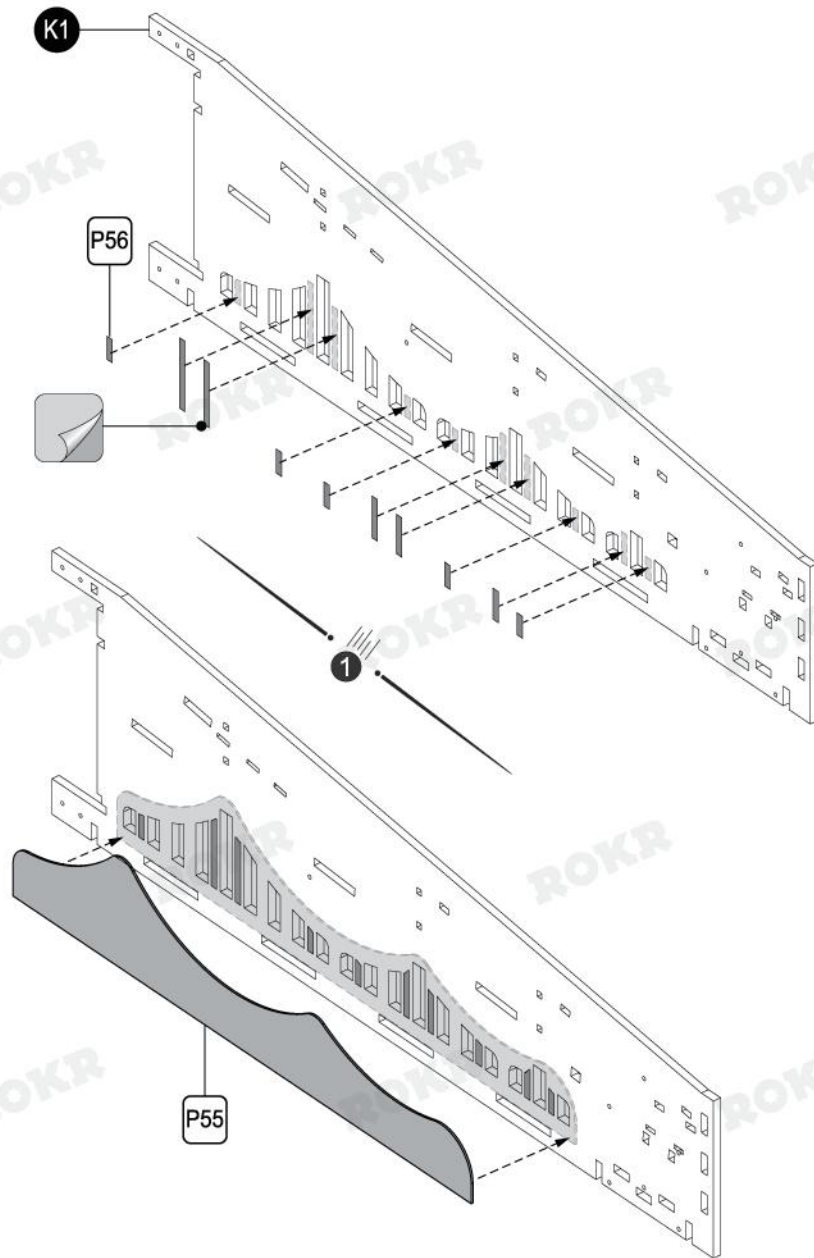

Flip over the assembly

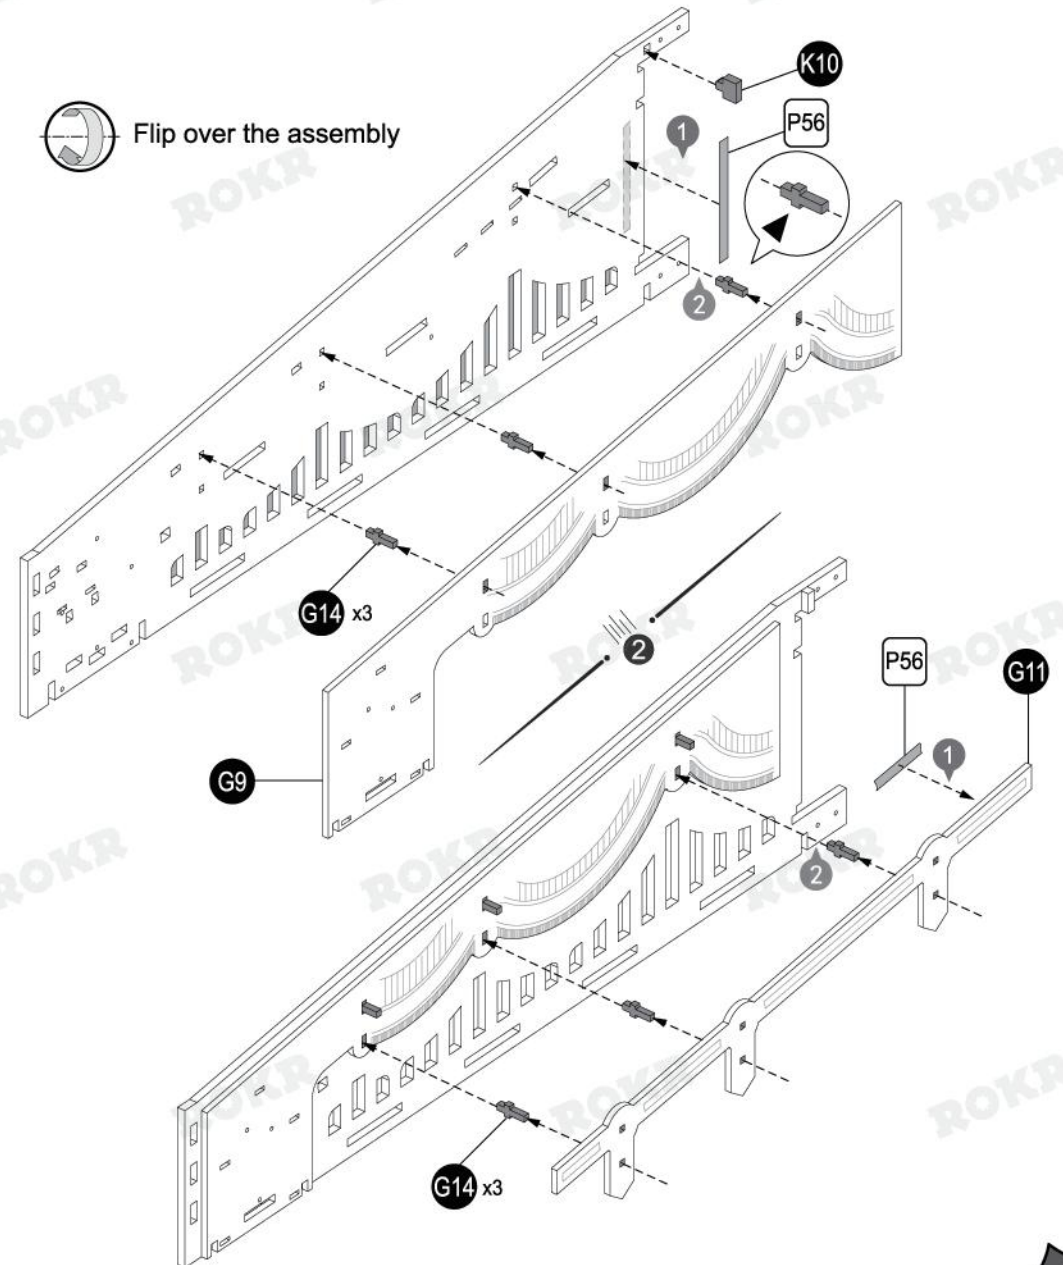

- A4** x5
- A9** x3
- A12** x3
- B6**
- B12**
- B19** x3
- C20**
- H4**

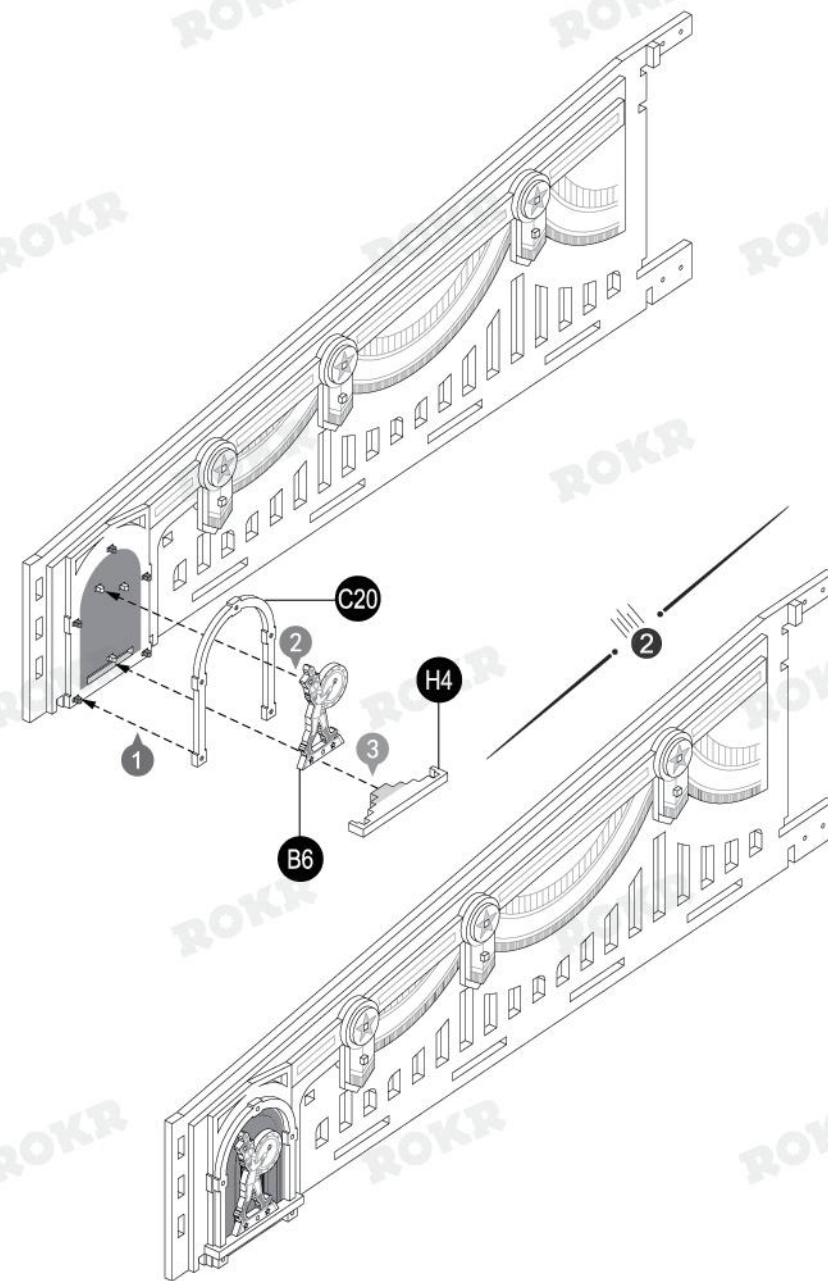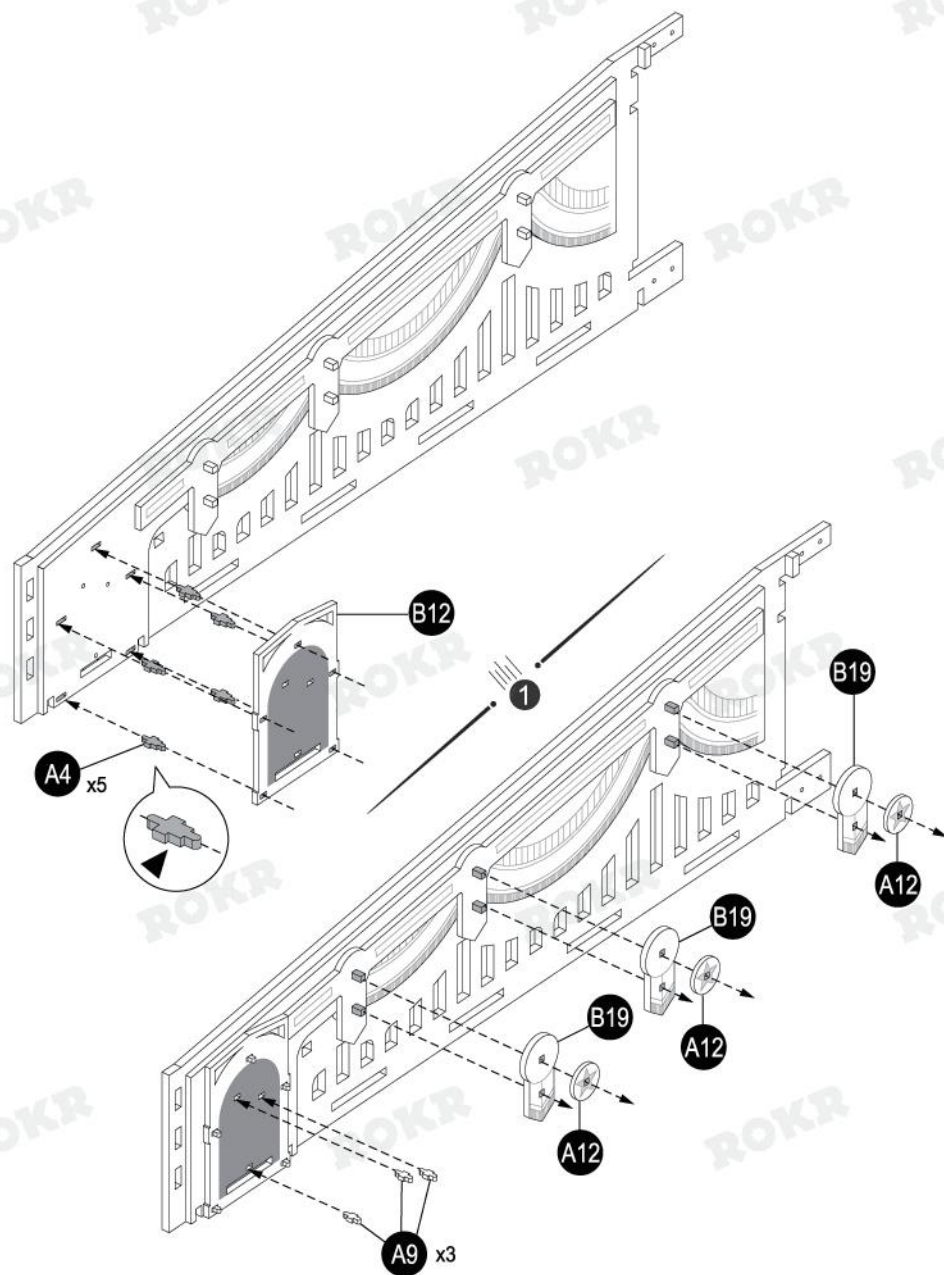

9

G16


G17

H6

H9

H11 x2

H14

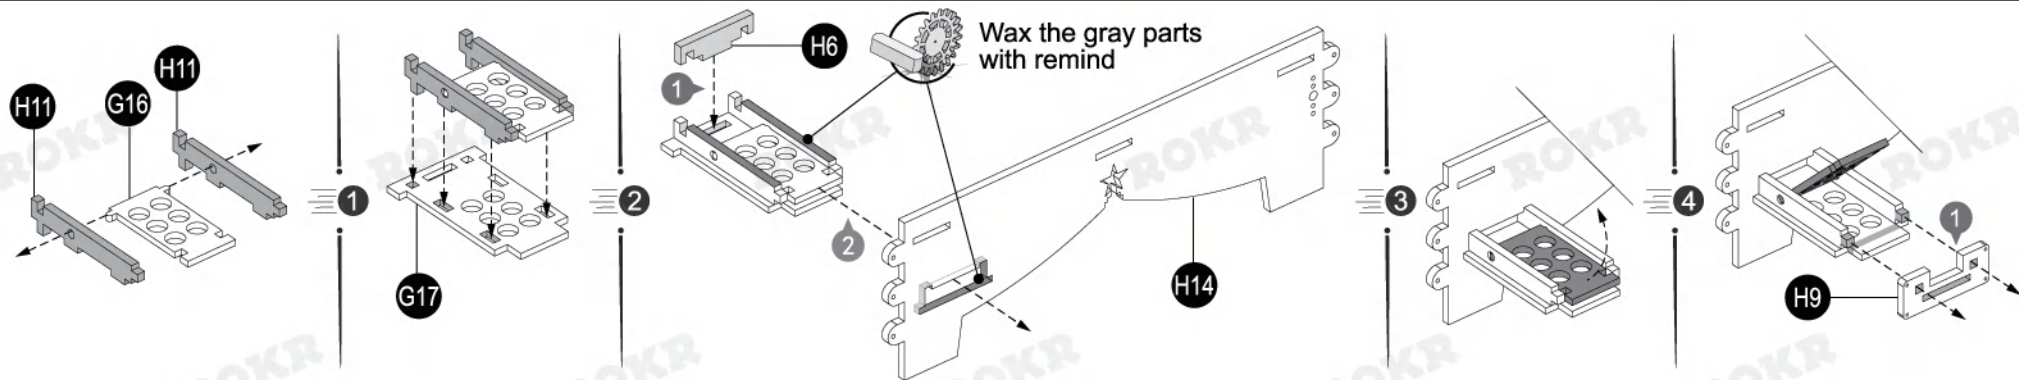

C23

C24

H17


1 P8

1 P13

1 P14

18 P44 x2

19 P45 x2

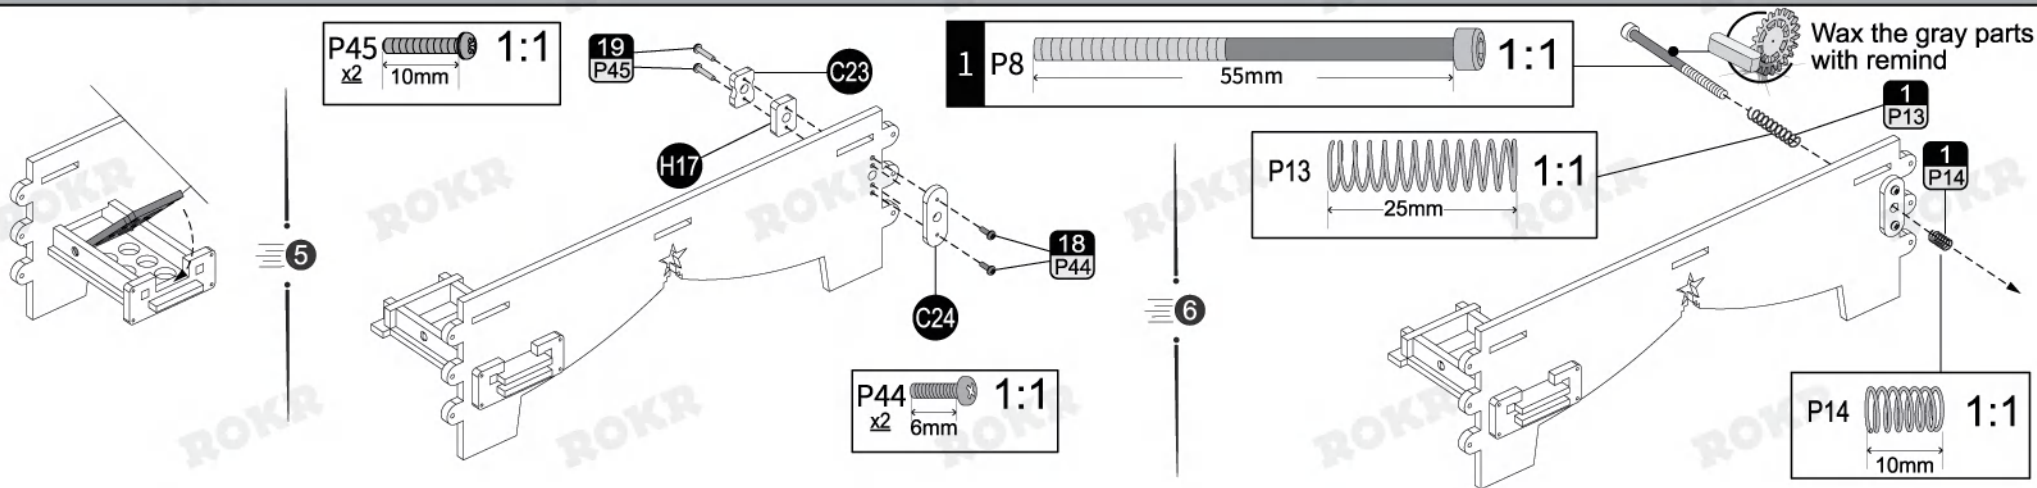


G3




G25

1 P2a

1 P17

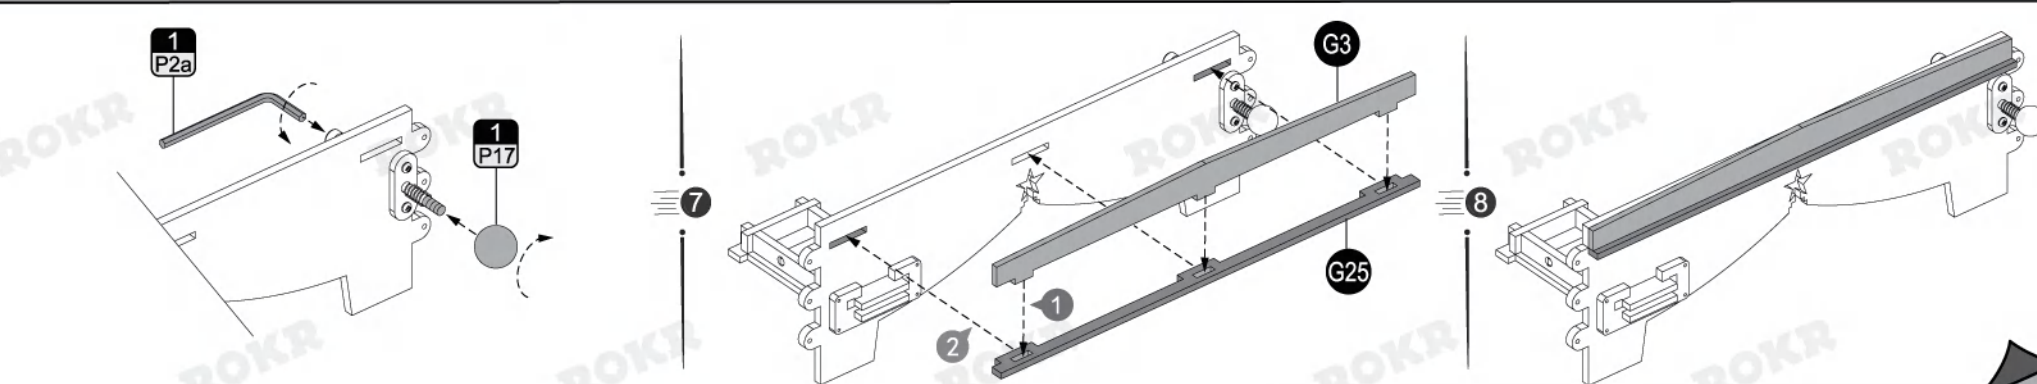

P45 x3 10mm 1:1

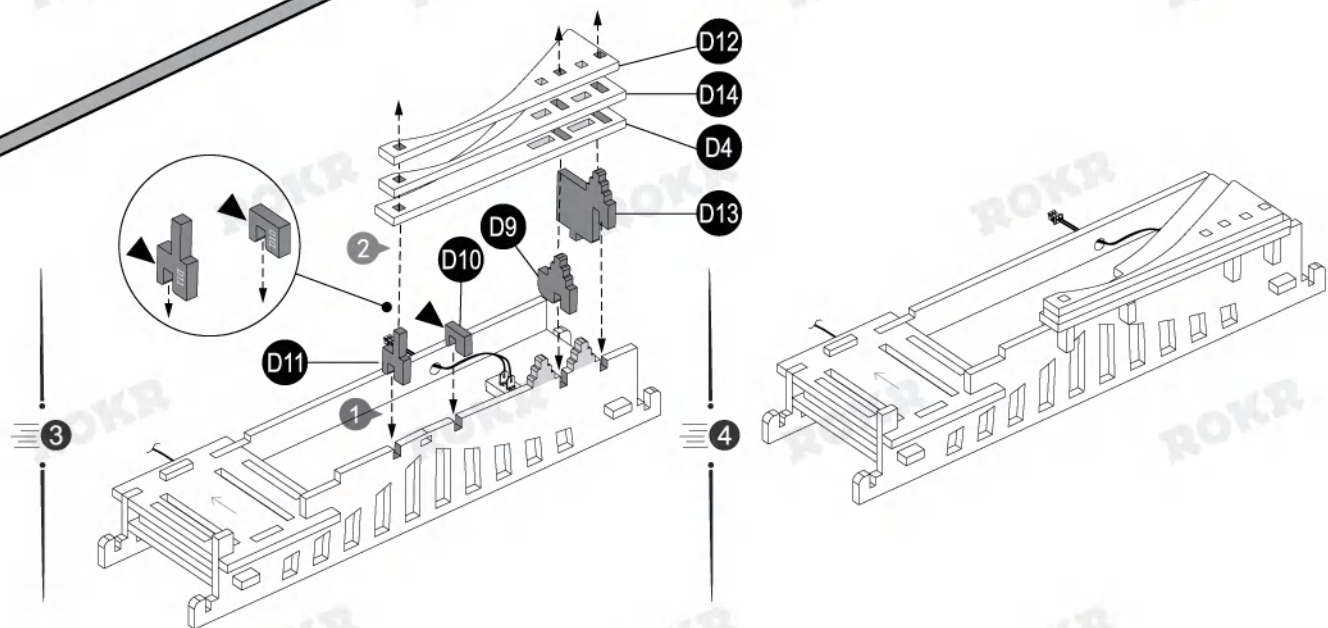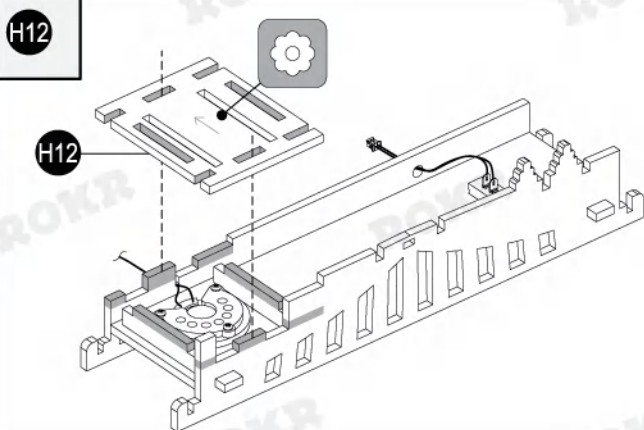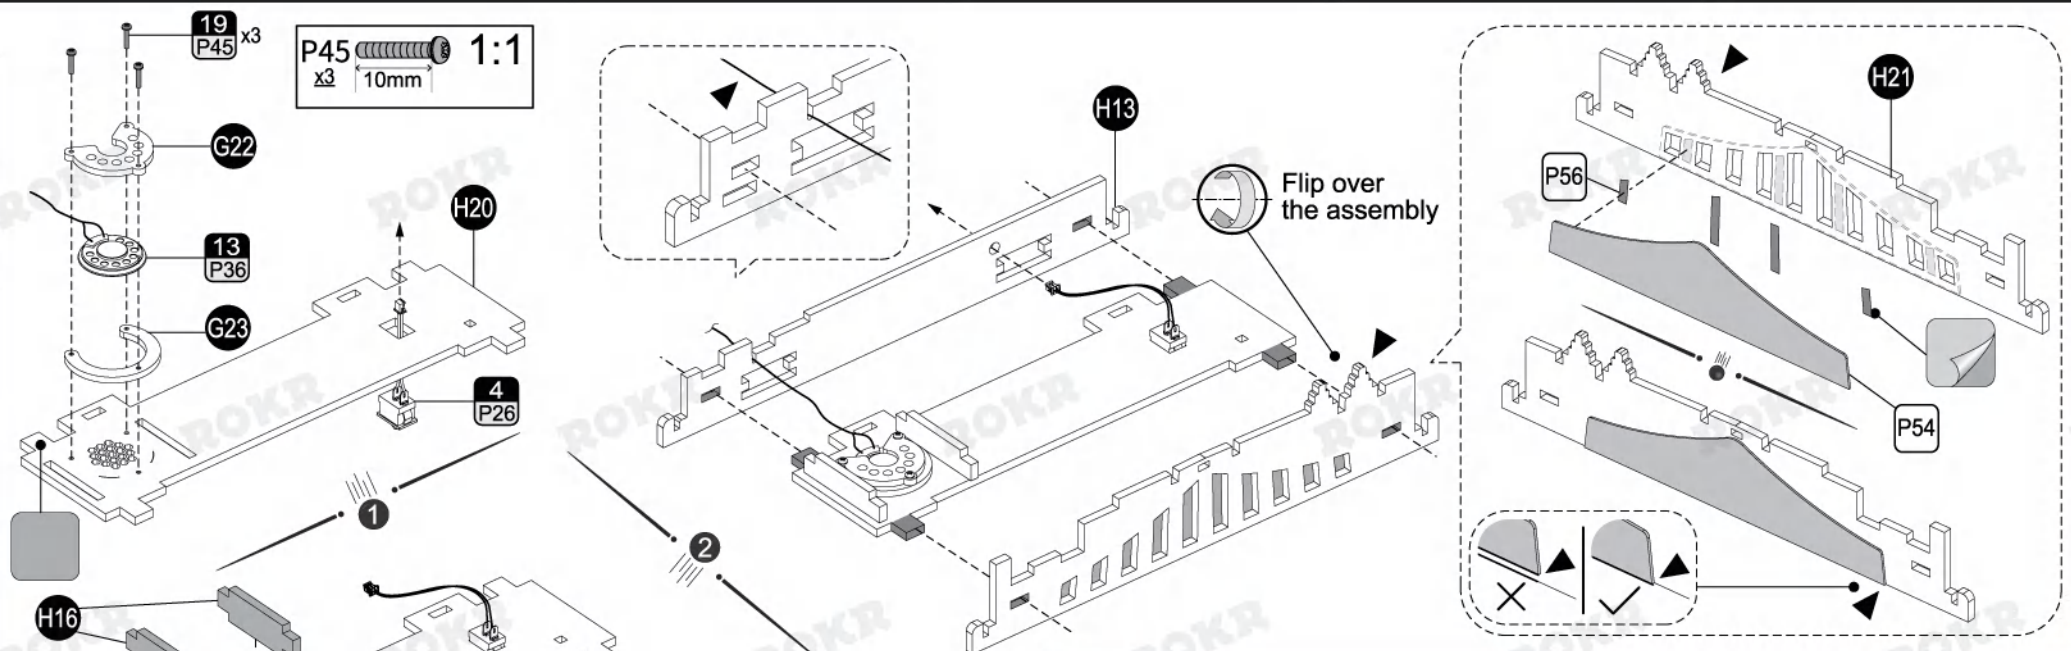

J1

K7

M1 x4


M2 x4

M3 x9

M4

M5


P58

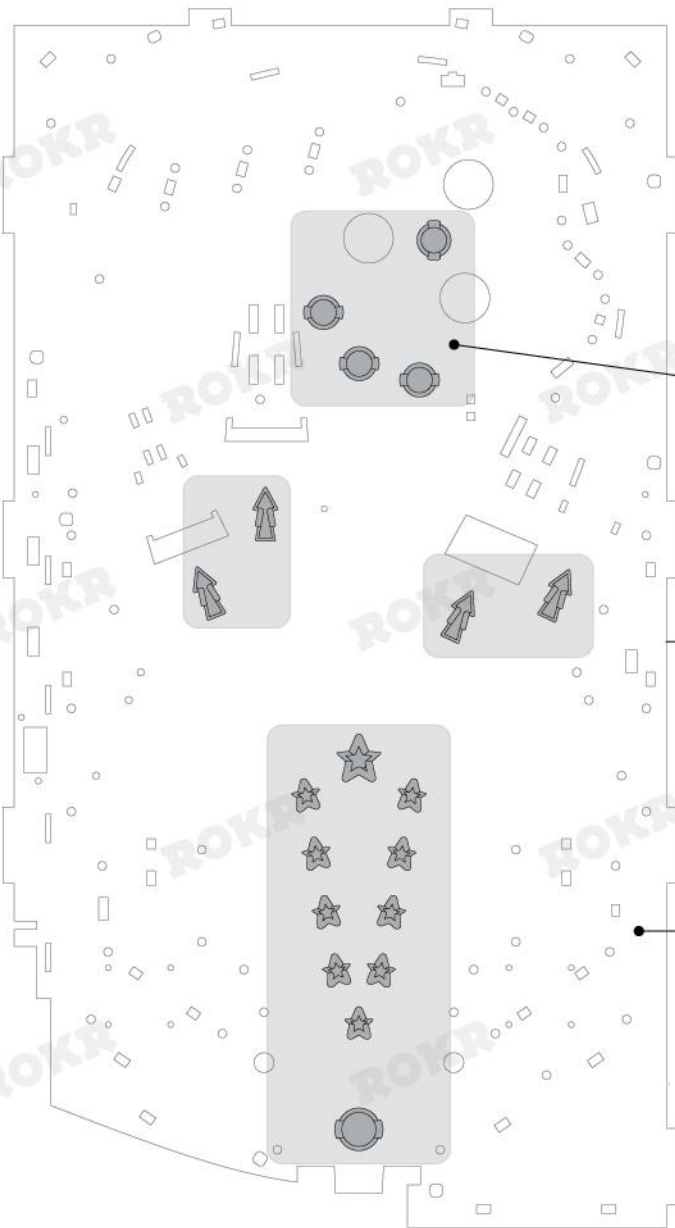


Instructions of using the nipper plier





When cutting, make sure the nipper plier fit tightly to the parts.

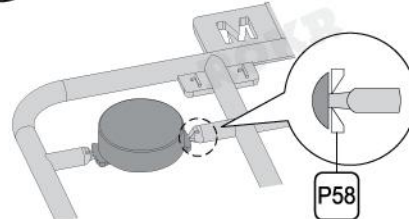

Polish the leftover cutting points with the sandpaper stick.

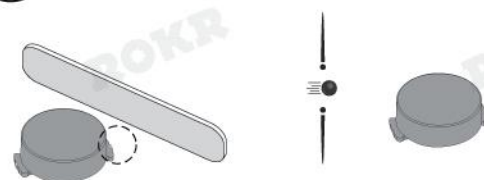

Suggest to press with the tool K7. Assemble all parts properly in the direction as shown.

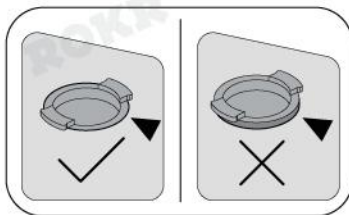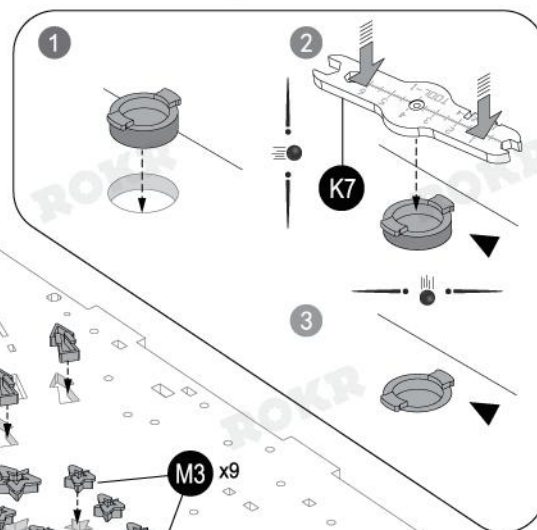

C10 x2

K7

1
P11
P3 x21
P4 x25
P2814
P4015
P41 x216
P42 x217
P43 x2

Scan for assembly videos


Flip over the
assembly

1. As shown, remove half of the film from the middle and then the other half. Slowly remove the film to ensure that the other side of the conductive cloth adheres to the film without wrinkles.
2. Turn over and paste the conductive cloth at the corresponding position of the board.
3. Remove the surface film after pasting.
4. Press the edge of the conductive cloth again to ensure the fit.

2



14
P40

1




Suggest to assemble screws with
the tool **K7** and **1 P1**.1
P415
P411
P3

x2


K7

1
P117
P435
P2816
P4216
P42Check if the part is pressed to
the proper position as shown.

E3
K7
K11
N1 x5
1
P2b
16
P42 x7
22
P48 x2
23
P49 x5

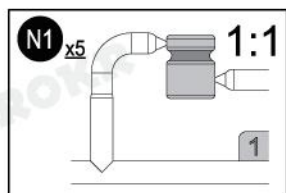

Assemble screws with the tool **1** **P2b** and **K7**. Pay attention to the corresponding position of **N1**.
 Notice! The grooved end needs to face upward.

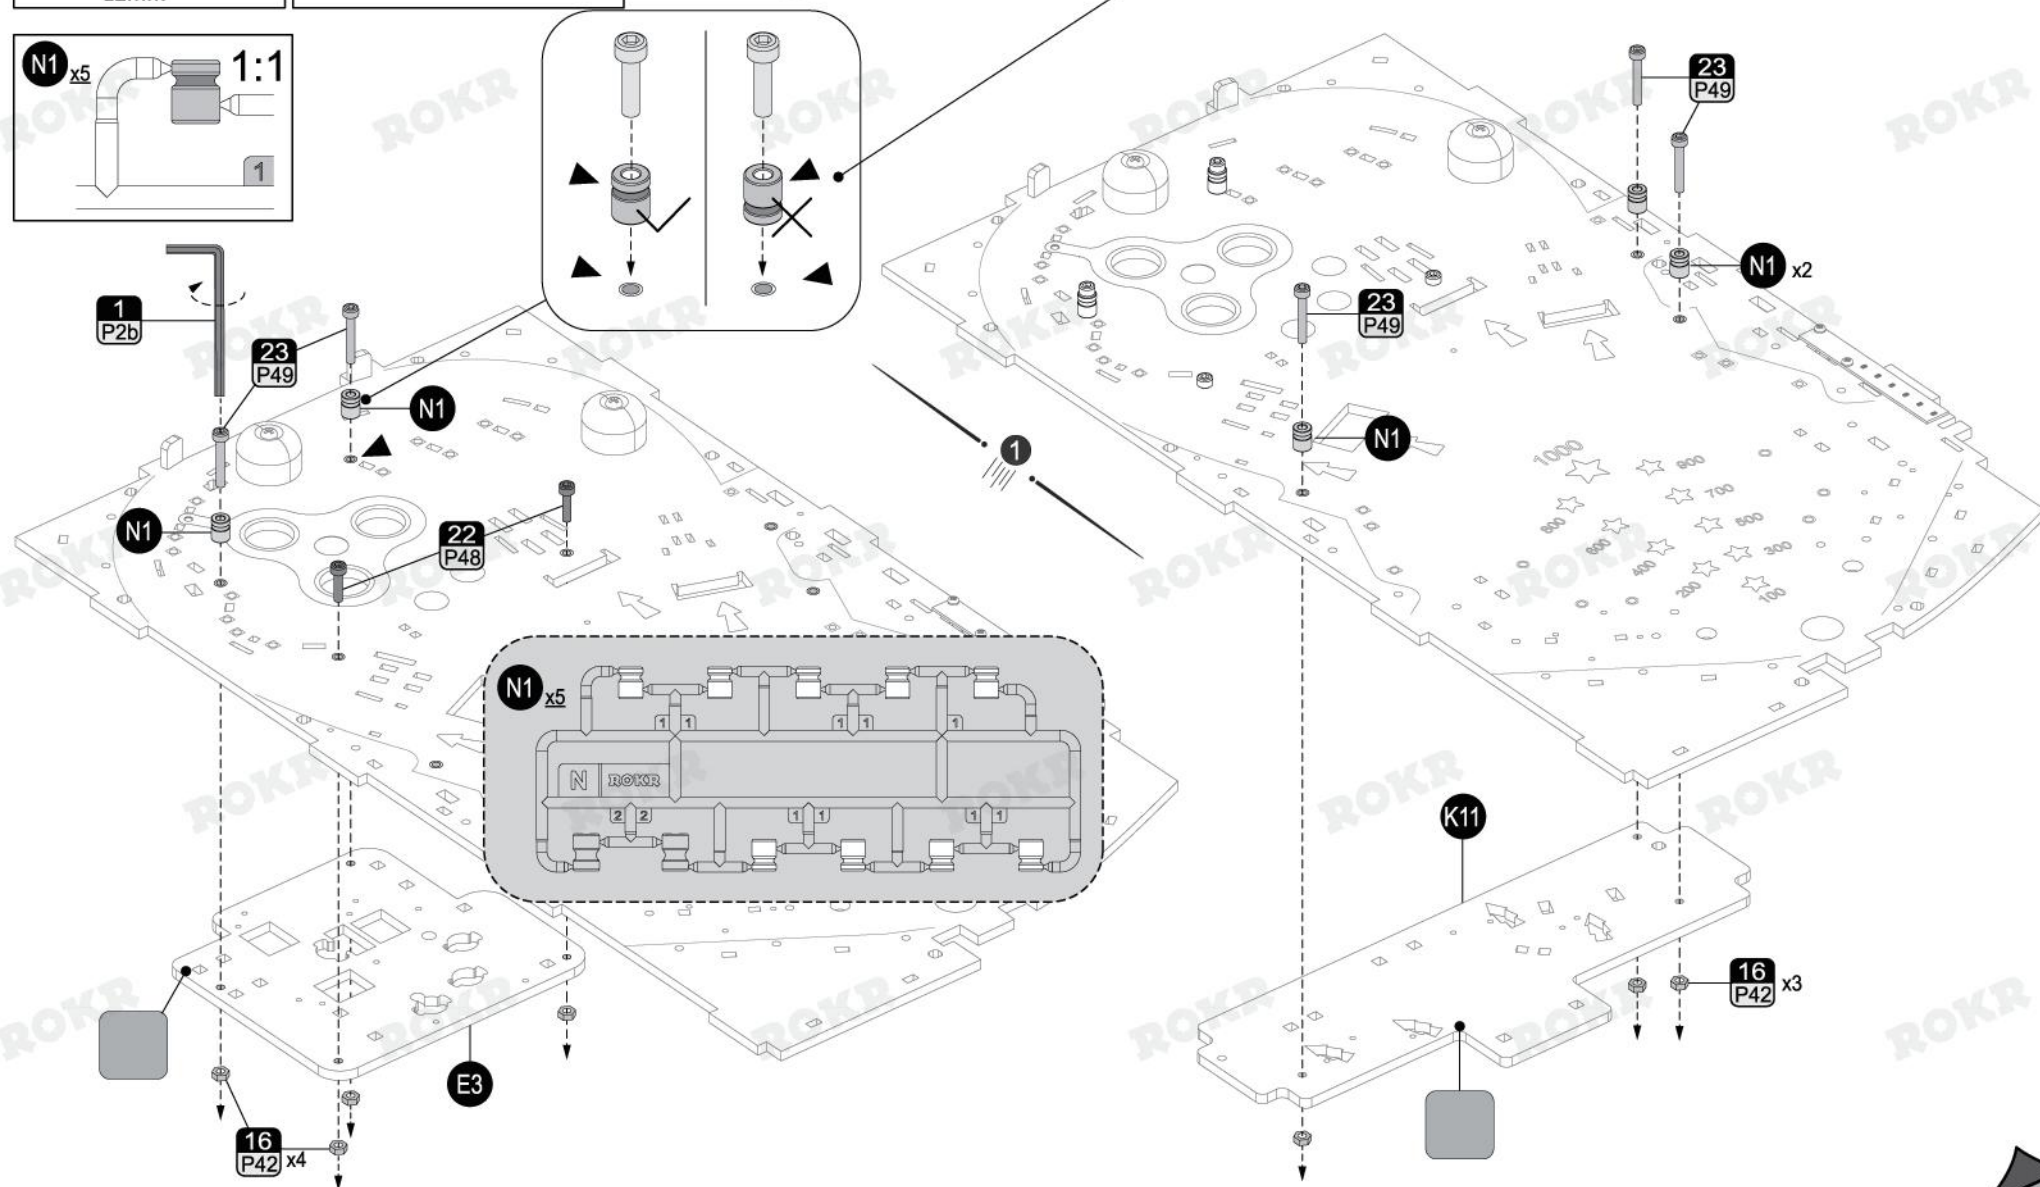

C31

C35

E5

N2 x6

1 P7 x4





16 P42 x6

23 P49 x2

P7 x4 25mm 1:1

P49 x2 20mm 1:1

N2 x6 1:1

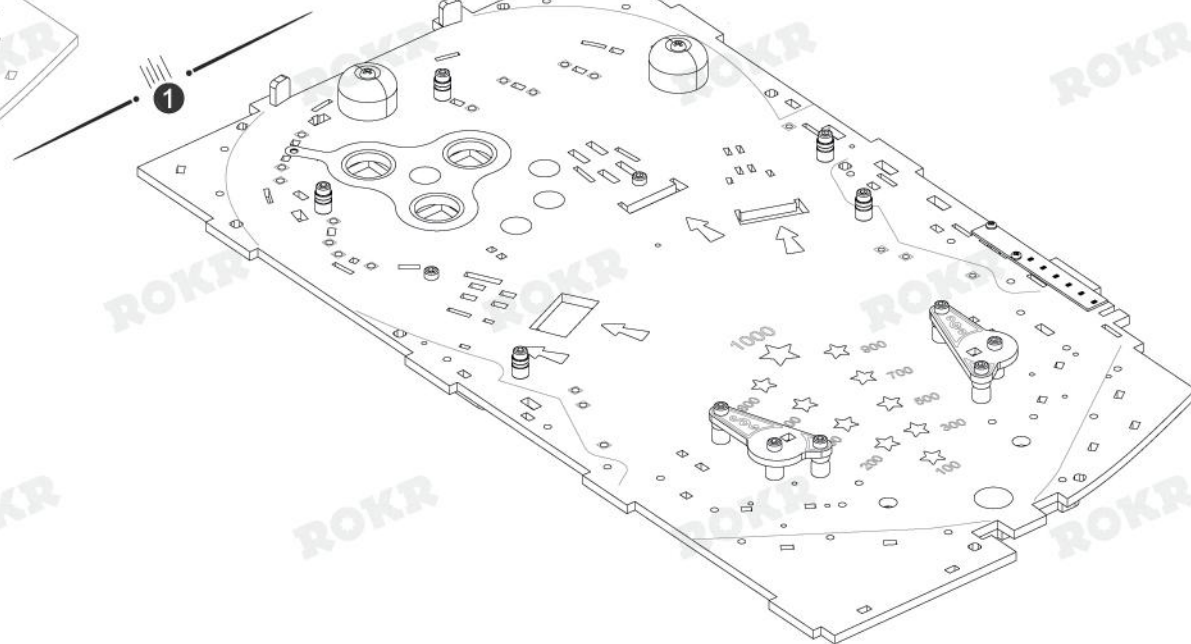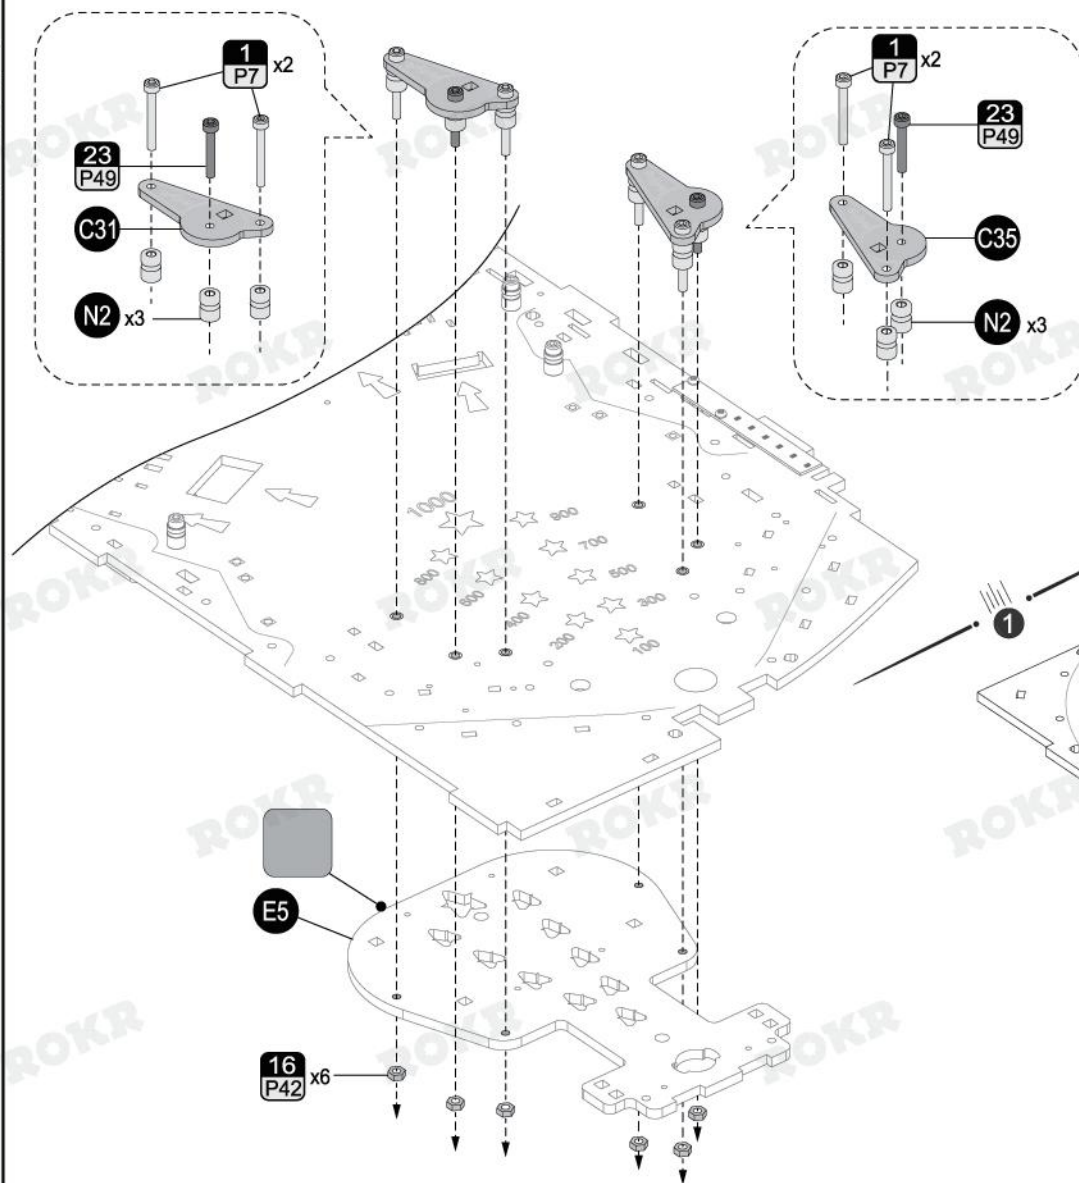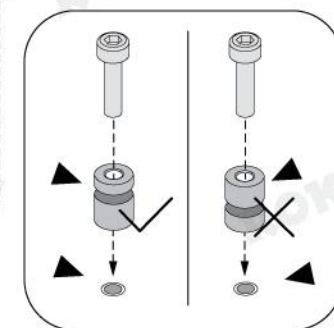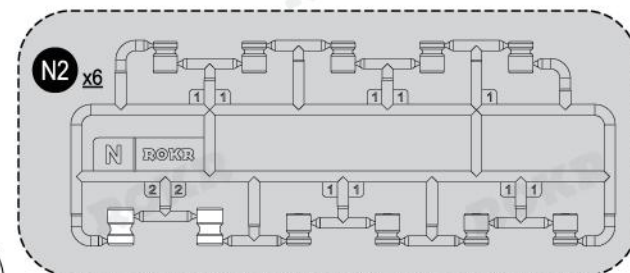

12

6
P297
P30

P37

P38



P39

17
P43 x618
P44 x10P44
x10
6mm
1:1

Do not tighten **17 P43** **18 P44** first, so that the screws can align with other holes. Tighten all the screws together after assembling other parts.

18
P44 x418
P44 x67
P30

P30

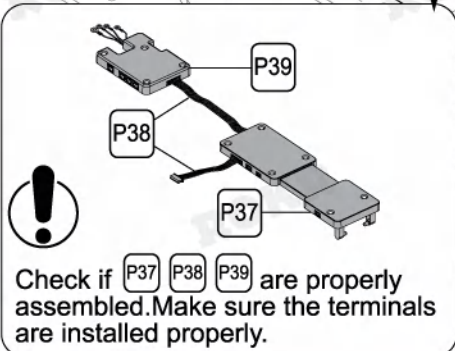17
P43 x317
P43 x36
P29P43
x6
4mm
1:1

1 Assemble carefully

08 x3

21
P47 x625
P51 x3P47
x6
5mm
1:1

Pay attention to the parts' direction. Make sure the round holes face downward.

21
P47 x6

08 x3



2





Pay attention to parts' directions.

25
P51 x3


- 1 P6
- 16 P42 x2
- 20 P46 x6

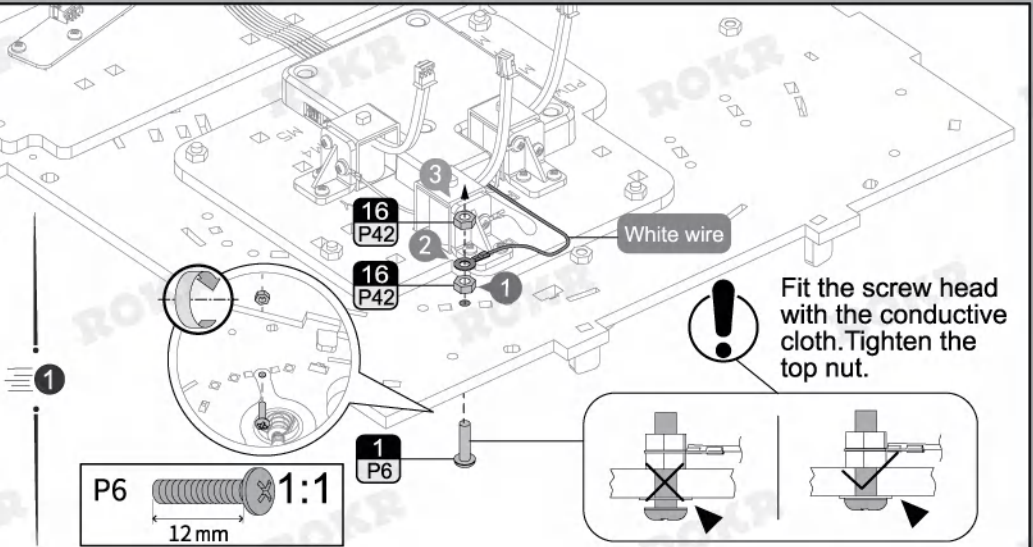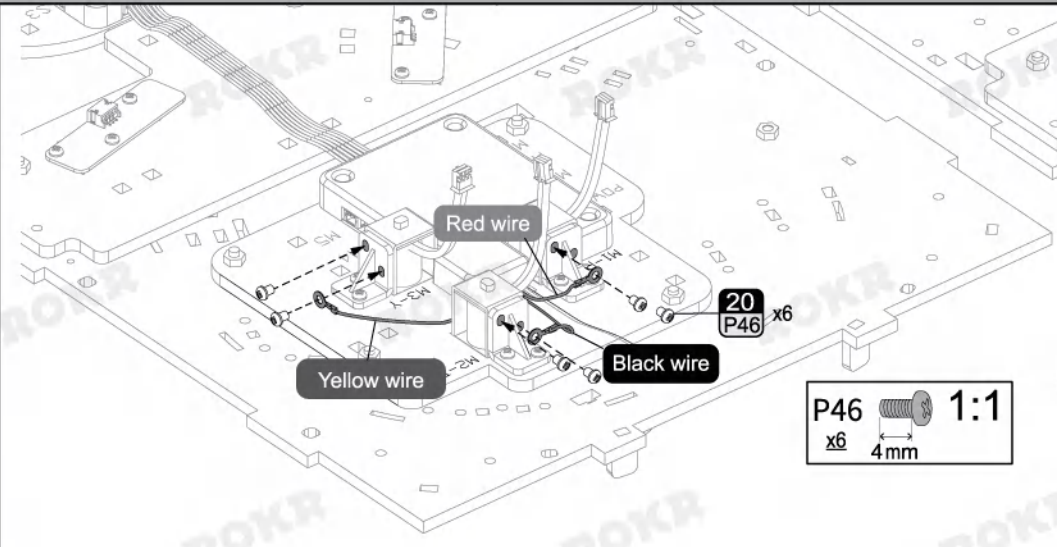


- K4 x2
- K5
- K12
- 4 P27 x2
- P38 x2

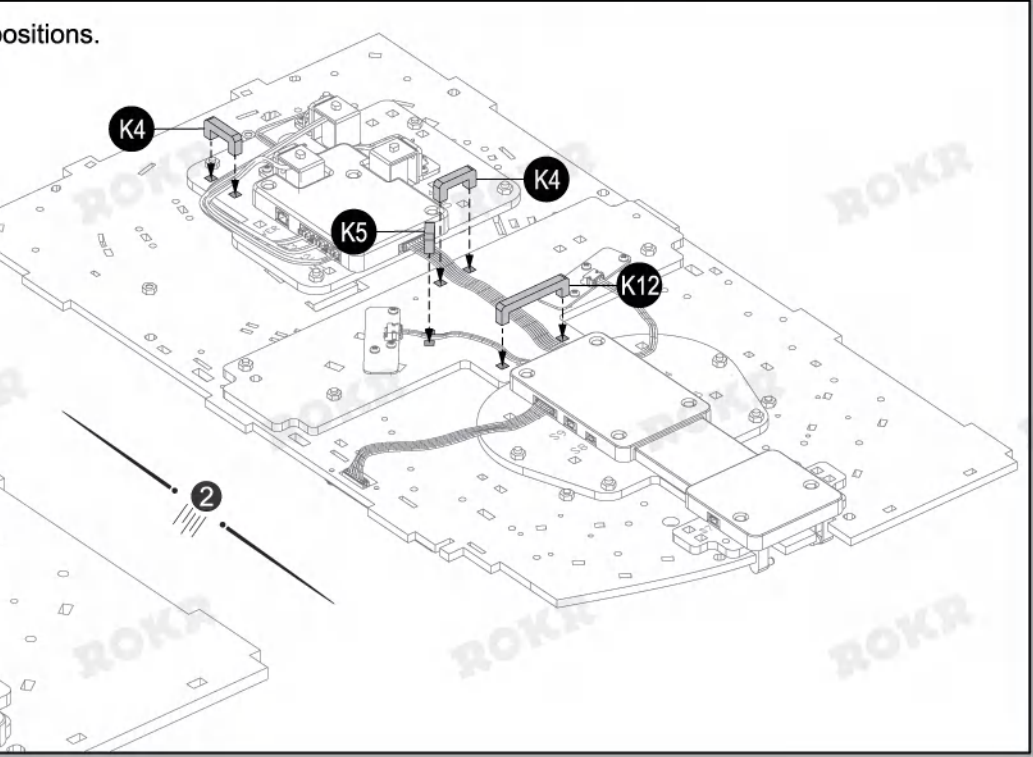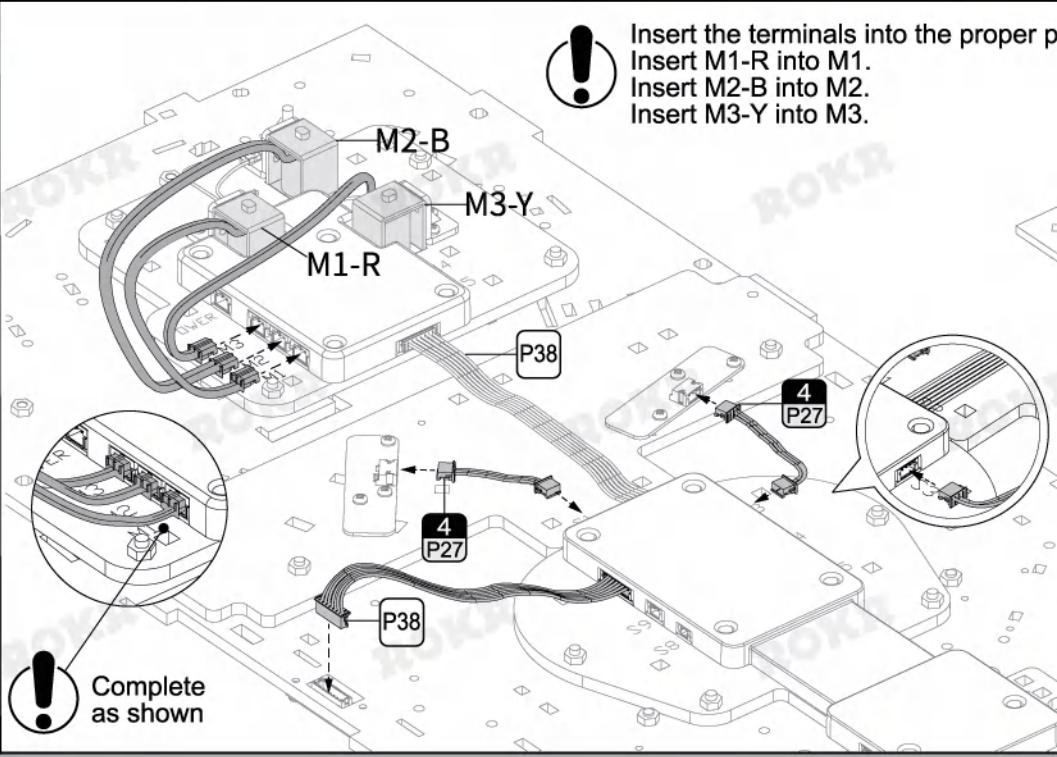


- D5 x2
- D6
- D7
- 1 P16 x3
- 26 P52 x3

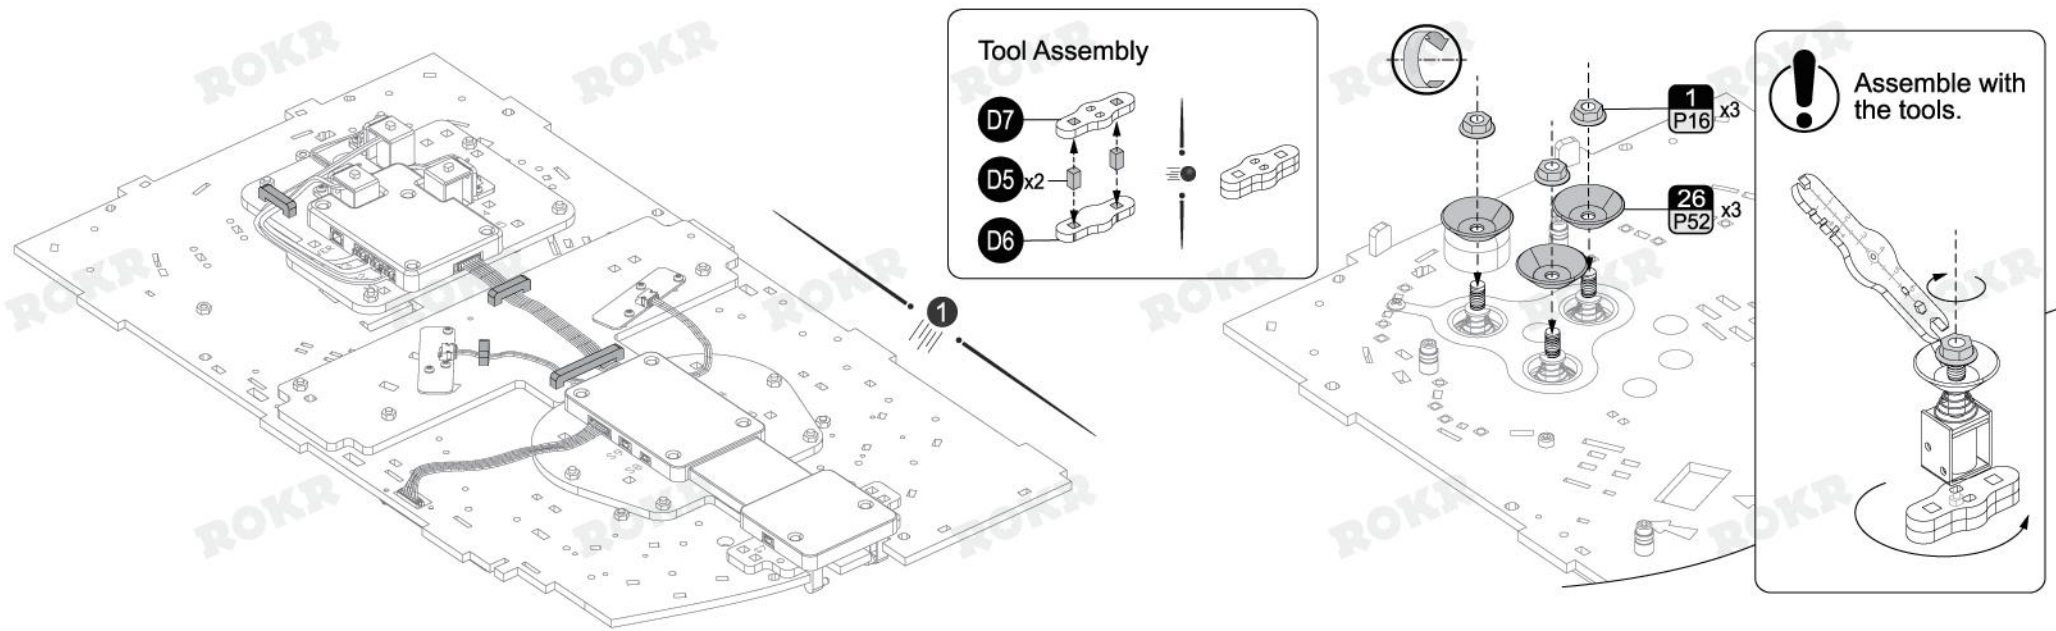

- F3 x3
- F4 x3
- F5 x9
- F6 x9

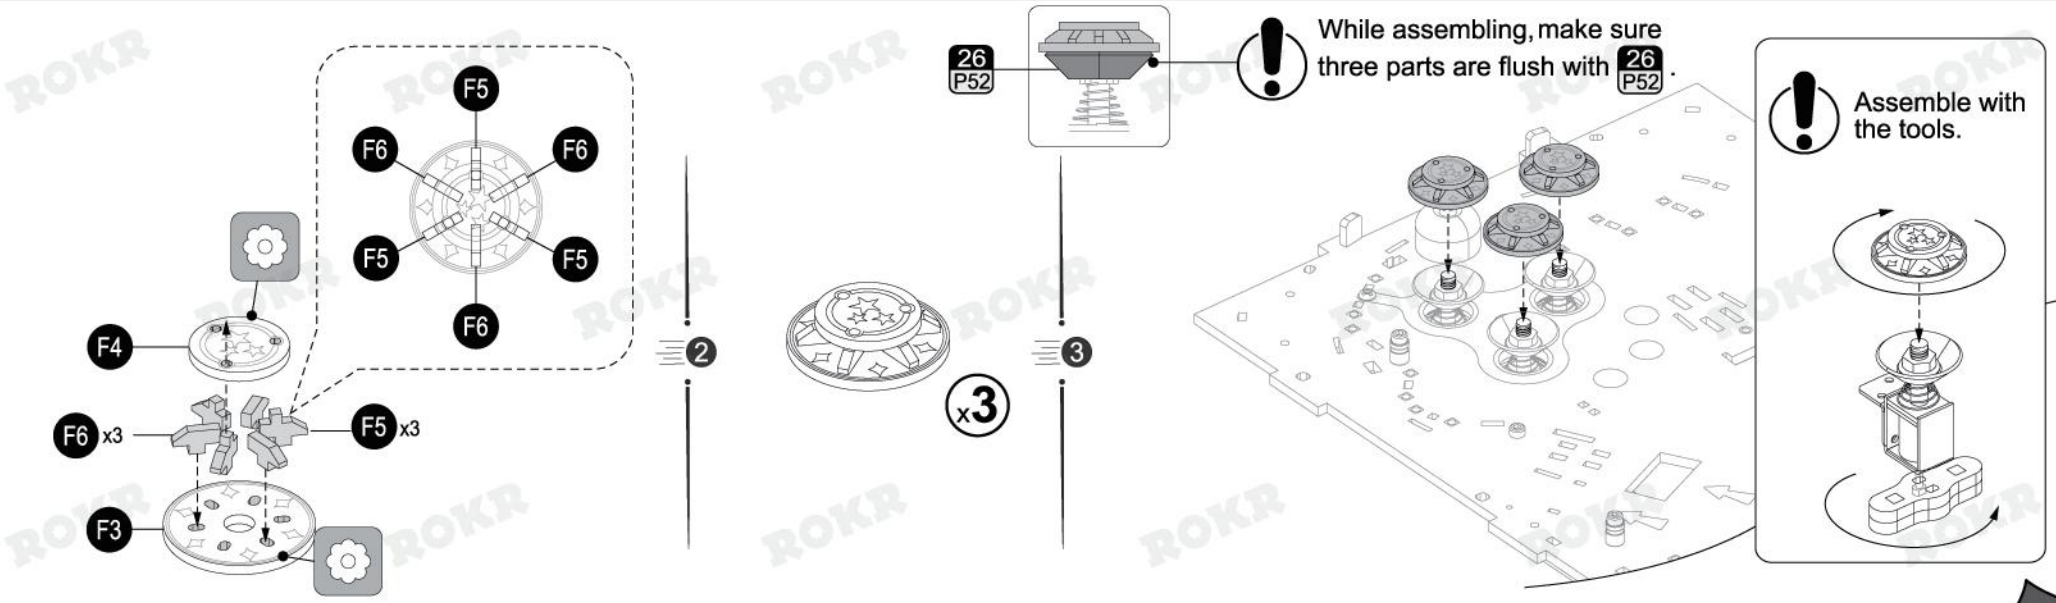


- E1
- E4
- E6
- G6 x10
- G13 x3
- J16
- L6
- L11
- Q4
- Q6
- Q7

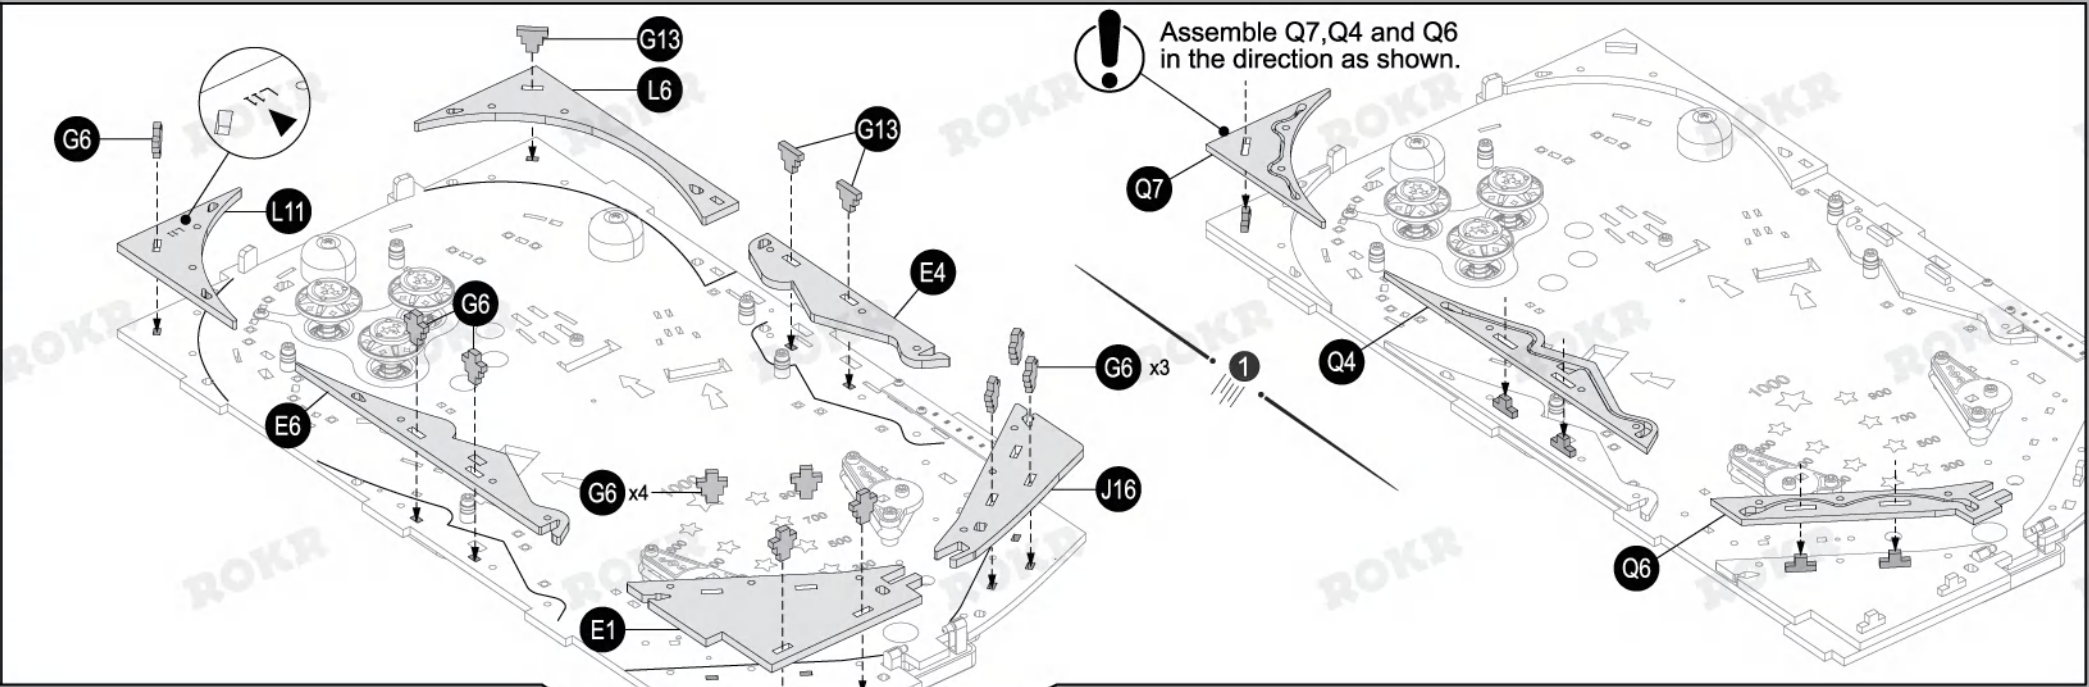

- K5
- 11 P34




Scan for assembly videos

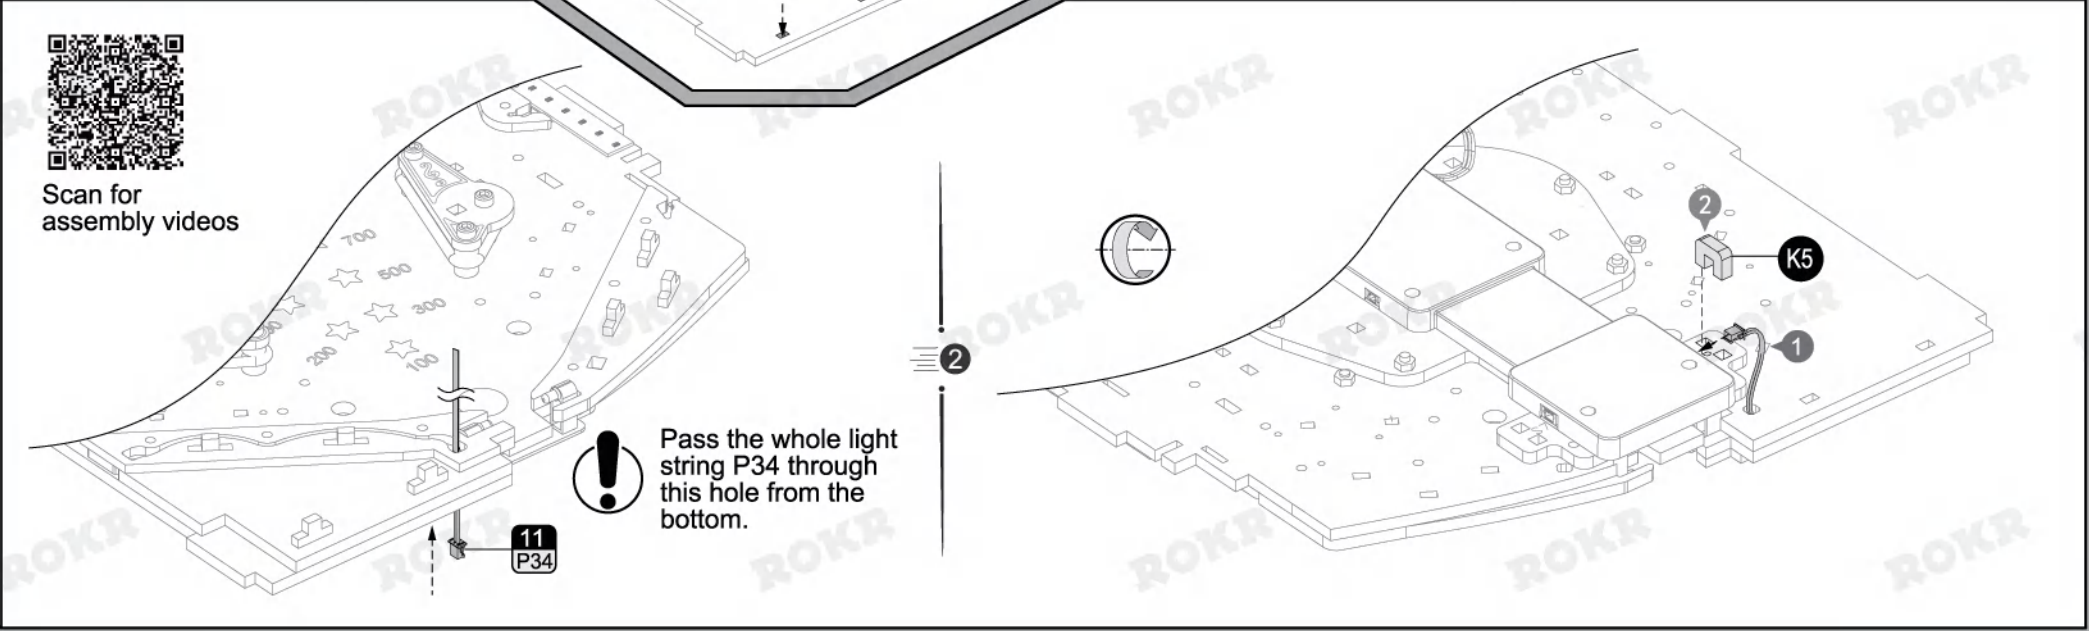


E2

E7

P57

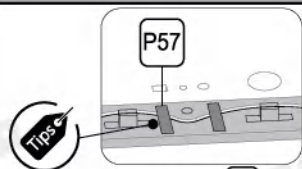


Suggest to use the P57 to prevent the upwarp of the light string. Do not cover the screw holes.

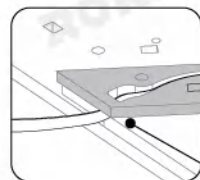

Pass the light string under the colored part.



Twist the light string slightly for easier assembling. The light beads face the score area.

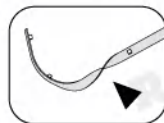



1



Bend the wire downward and put it into the groove. Please arrange it in order and then assemble E2.



Pass the light string under the colored part. Straighten the light string while assembling.

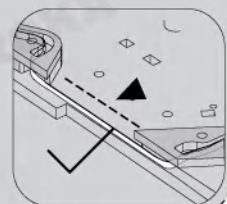
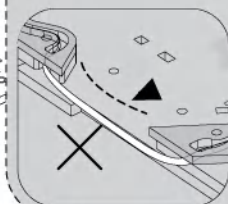


L10

Q3


Q5

Q8

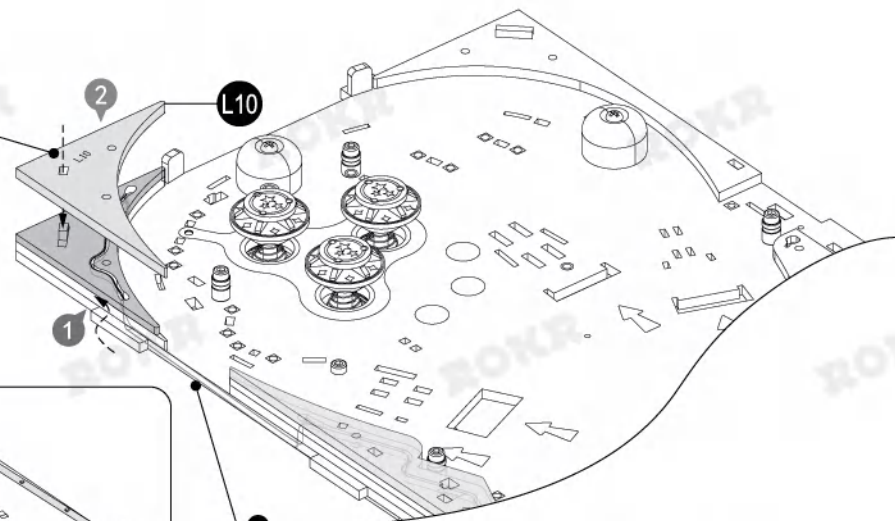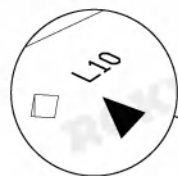

Pass the light string under the colored part.


2

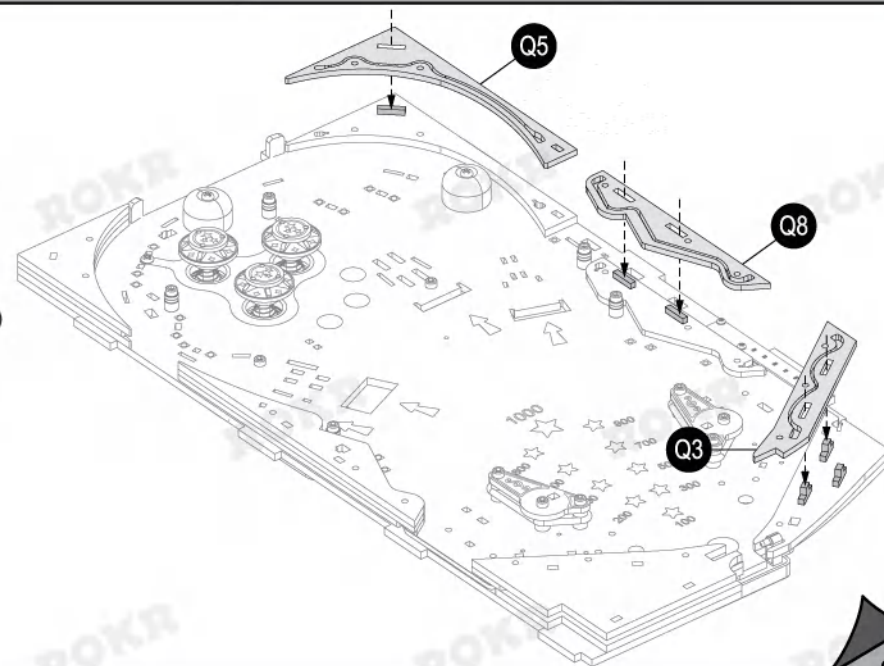

K5


11
P34

Scan for
assembly videos

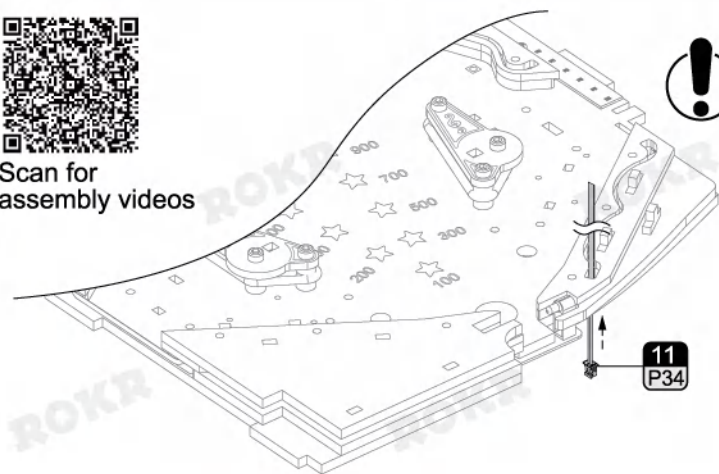

Pass the whole light
string **11**
P34 through
this hole from the
bottom.

1

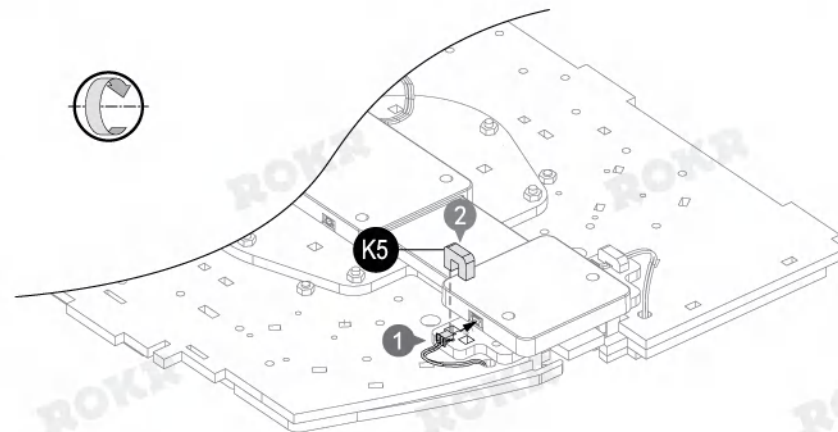

G19

J15

22
P48 x3

P57



Twist the light string slightly for
easier assembling. **The light beads
face the score area.**




J15

2




Bend the wire downward and
put it into the groove. Please
arrange it in order and then
assemble **J15**.

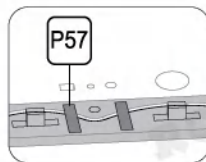

P57

1

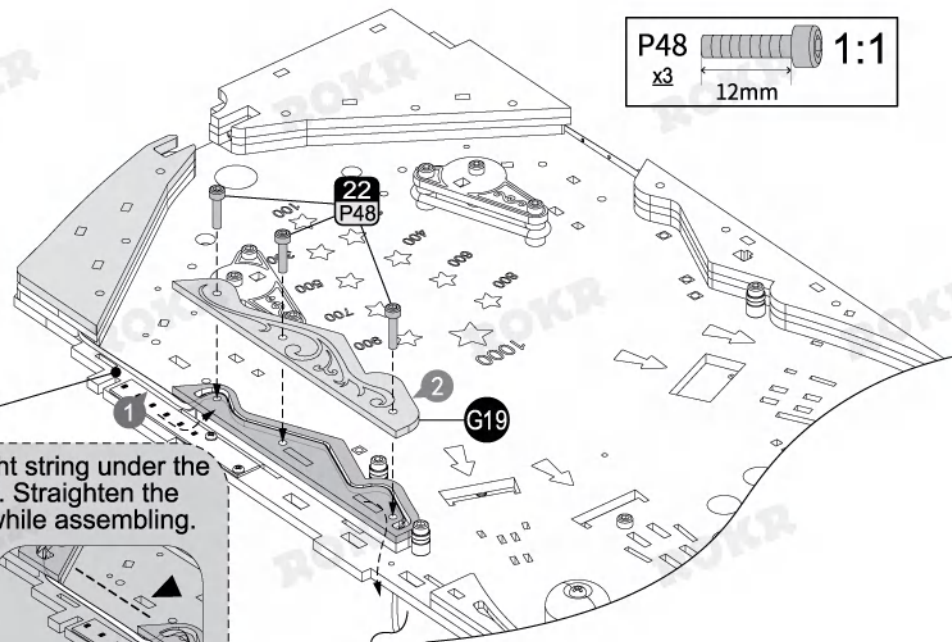

P48

x3

12mm



1:1

22
P48

G19



Pass the light string under the
colored part. Straighten the
light string while assembling.

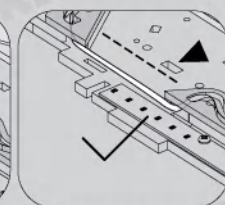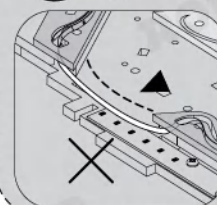

Suggest to use the **P57**
to prevent the upwarp of
the light string. Do not
cover the screw holes.




G26

N1 x4


22
P48 x6

P48 1:1
x6 12mm

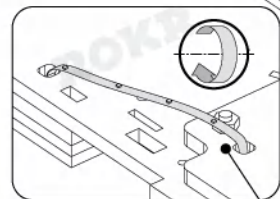

Flip over the assembly. The light beads here face upward. Twist the light string slightly for easier assembly.

Put the light string into the groove, and the light beads face inward. (Pass the extra light string downward through the hole)

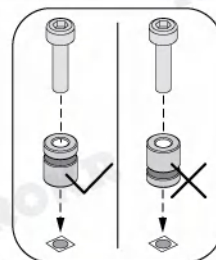22
P48 x4

N1 x4

N1 x15

22
P48 x15

P48 1:1
x15 12mm



22
P48 x8

N1 x8


22
P48 x7

N1 x7


- 03** x2
- 3** **P21** x5
- 3** **P22** x7
- 3** **P23** x2
- 19** **P45** x8

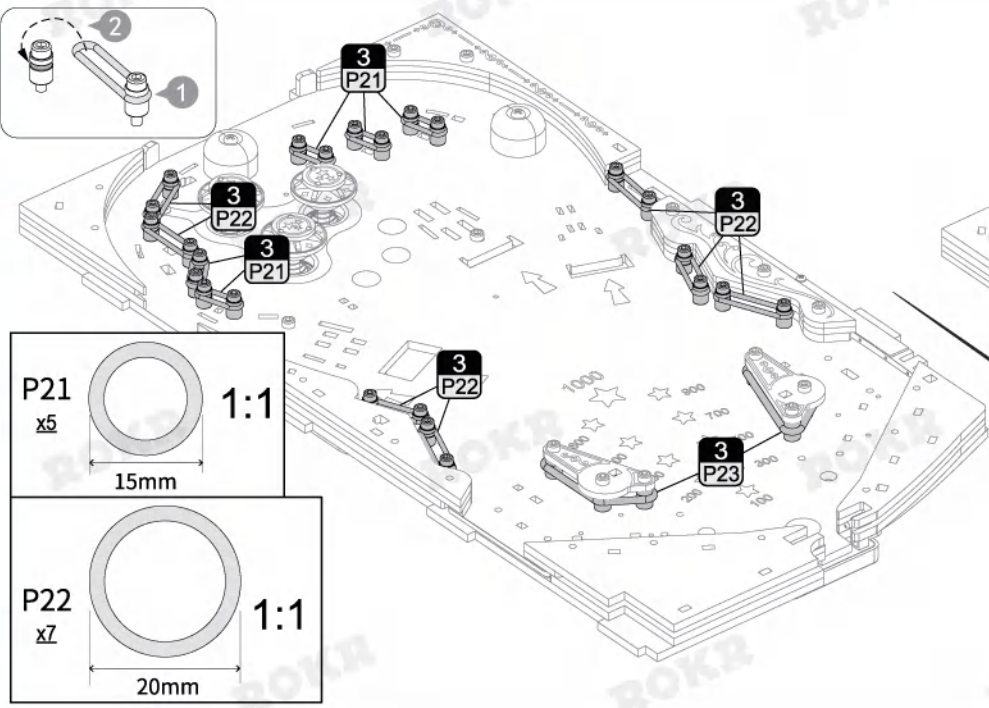

Tip Do not tighten **19 P45** immediately so that **03** can be moved to align with other holes. Tighten **19 P45** after assembling other parts.

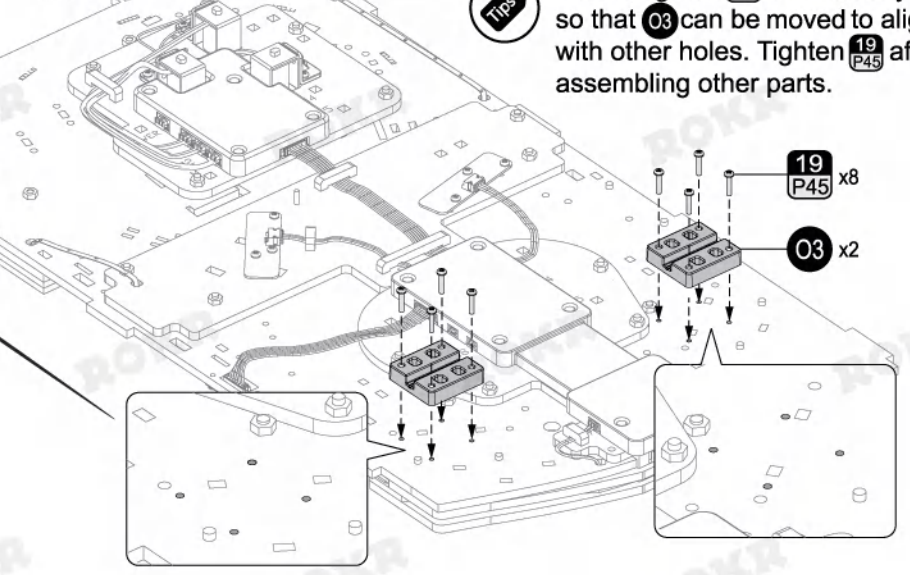


- 04**
- 06**
- 1** **P9** x2
- 1** **P12**
- 1** **P15**
- 24** **P50** x3

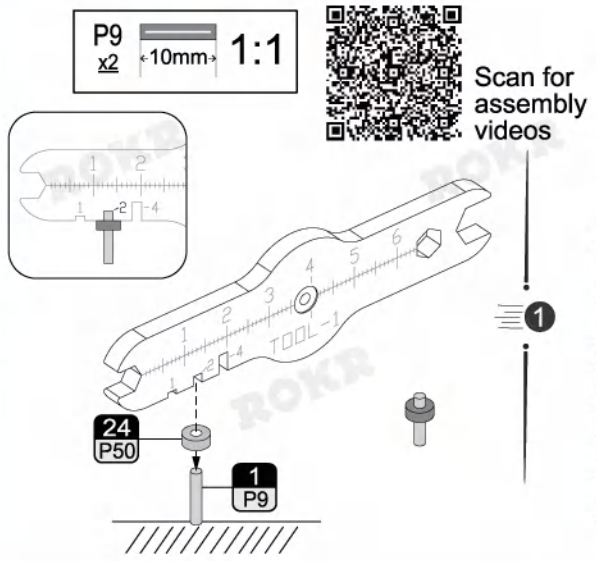

Wax the whole part

1. Insert the end with long hole of **1 P15** into **06**.

2. While assembling, make sure the side with "R" faces upward. Press the steel shaft to be flush with the part.





! Press it to be flush with the steel shaft. Do no exceed it.


! This side of **04** should face upward.

05
07
1 P9 x2
1 P12
1 P15
24 P50 x3

P9
x2
10mm
1:1

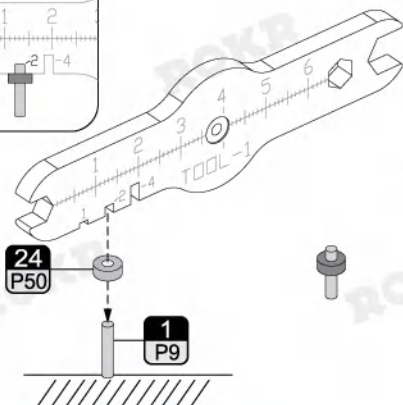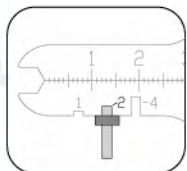




Wax the whole part

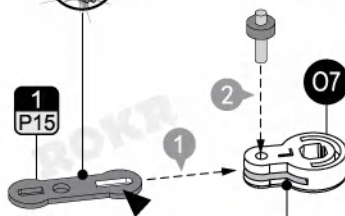

1. Insert the end with a long hole of **P15** into **P07**.
2. While assembling, ensure the side with "L" faces upward. Press the steel shaft to be flush with the part.




P12
32mm
1:1

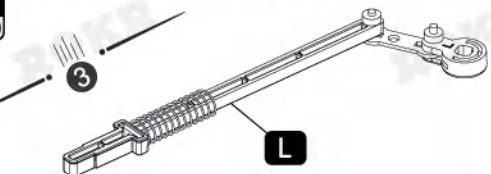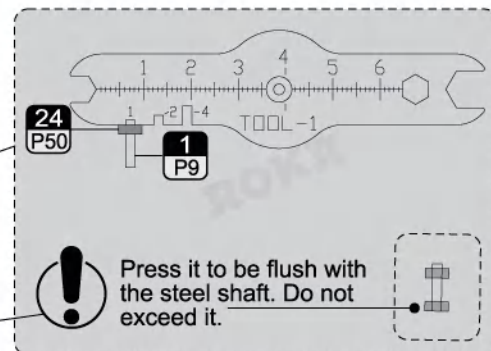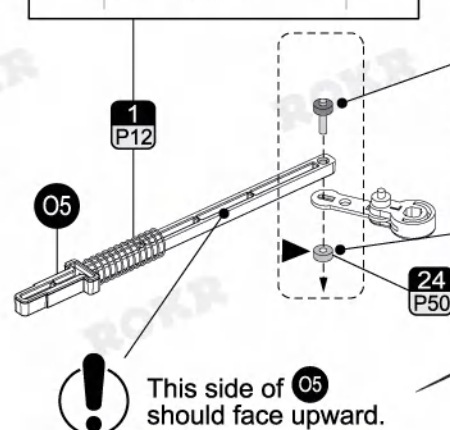


J12 x4
01 x2
02 x2
1 P5 x2

Pay attention to the corresponding positions of the Part **L** and the Part **R**. Press **J12** with the tool. Do not squeeze the spring when pressing.

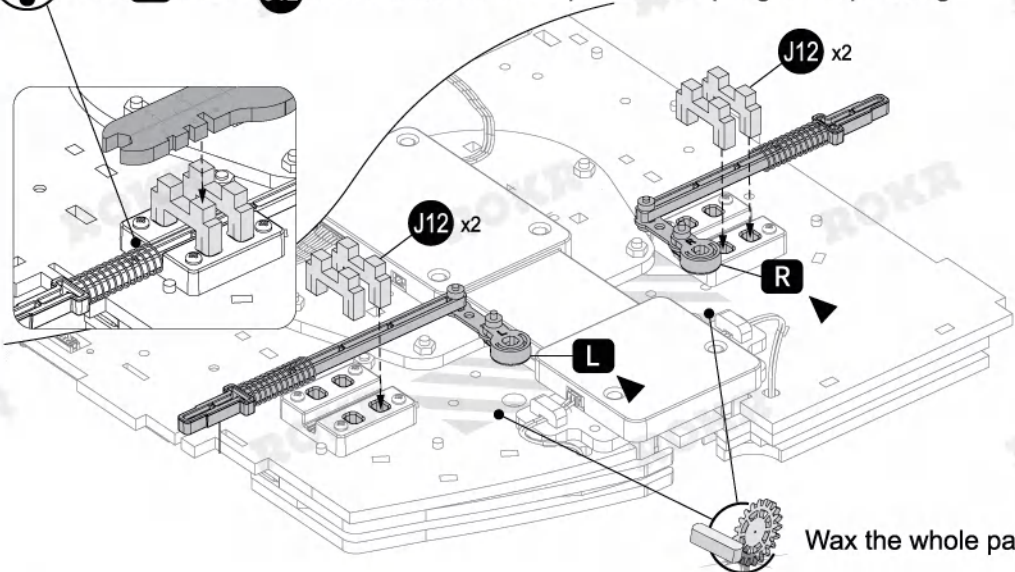

Wax the whole part

Polish the cutting points with the sandpaper stick. While assembling **P5**, hold **01** in the bottom with your fingers to assemble it easily.

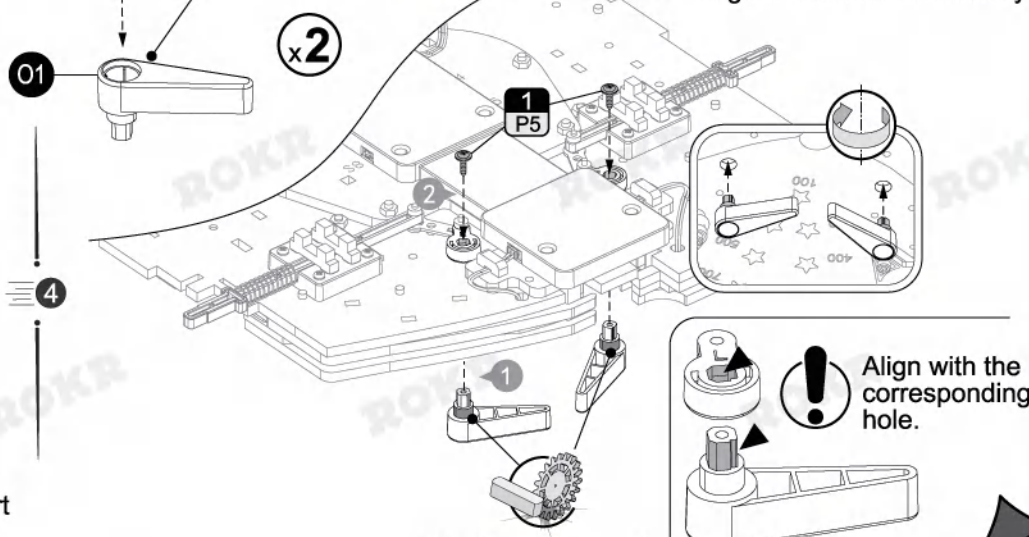

Wax the whole part

F2 x2

J13

23
P49 x2P49
x2 20mm 1:1

1



Push this rod forward
to align with the screw
hole.



Make sure **23**
P49 is flush with
the bottom board. Do not
exceed it.

C3 x5

C4

C8



In the following assembly,
please keep off the rod to
prevent damage.

2



Press **O4** **O5** inward to test if
O1 can rebound immediately.


1. Press the rod repeatedly to make its
parts engage with each other.
2. Check if **23**
P49 is too tight. If so, loosen
it slightly.
3. Check if it is assembled properly in the
previous steps.



Assemble **O1** in the
position as shown.


- C2
- C5 x2
- C9
- 8 P31
- 22 P48 x6

P48 x3 12mm 1:1

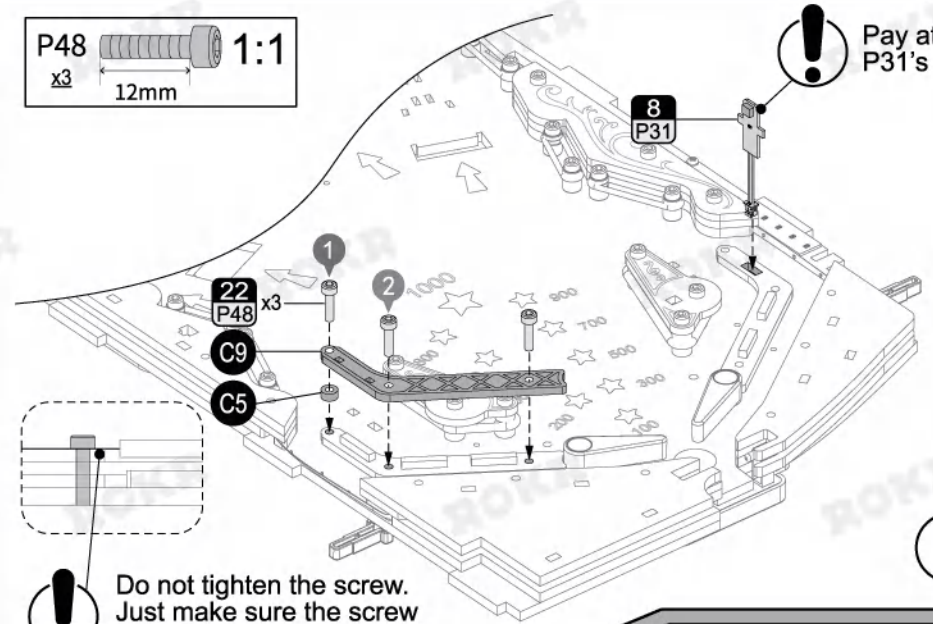

Pay attention to P31's direction.



P48 x3 12mm 1:1

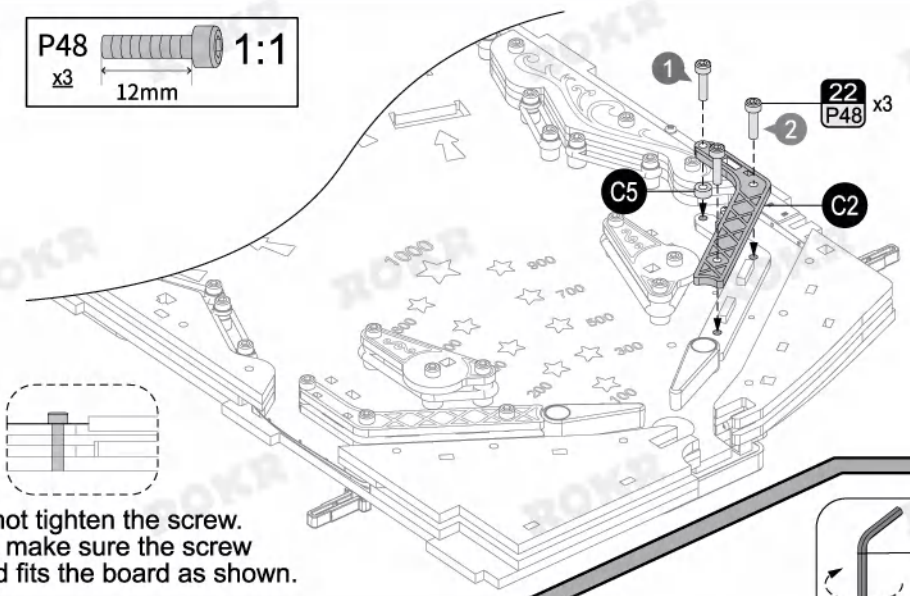



- C1
- F7
- F8 x3
- F9
- G24
- 1 P7 x3
- 16 P42 x3
- 23 P49 x8

P49 x8 20mm 1:1


P7 x3 25mm 1:1

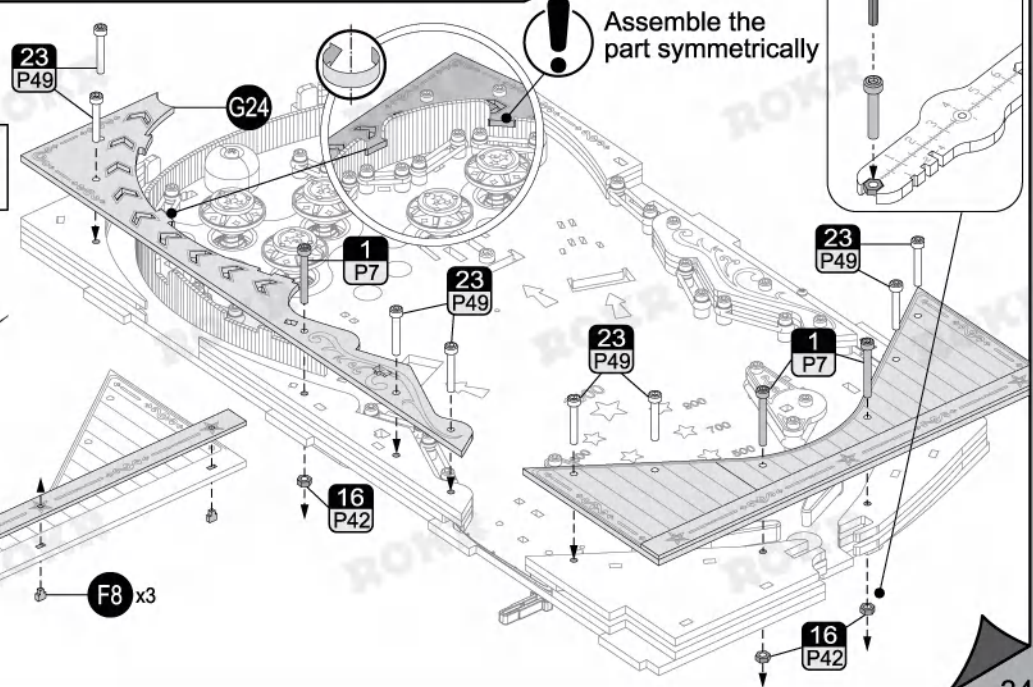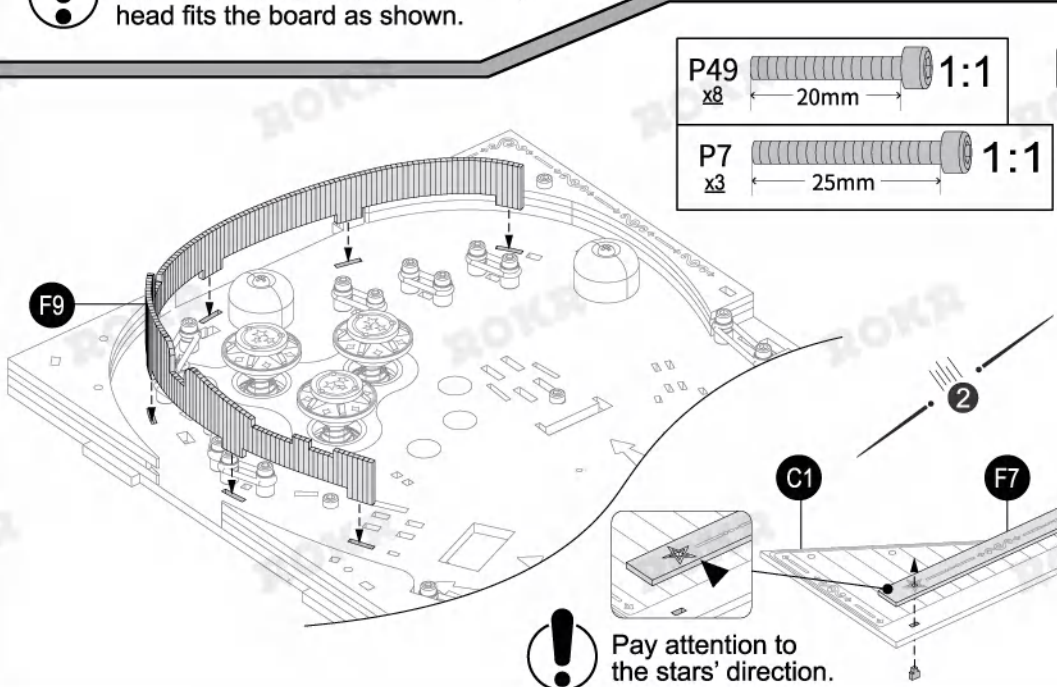



C6
 C7
 C15
 C16 x2
 C22
 C26
 C41
 C44
 F30 x2
 F31 x2
 F32 x4

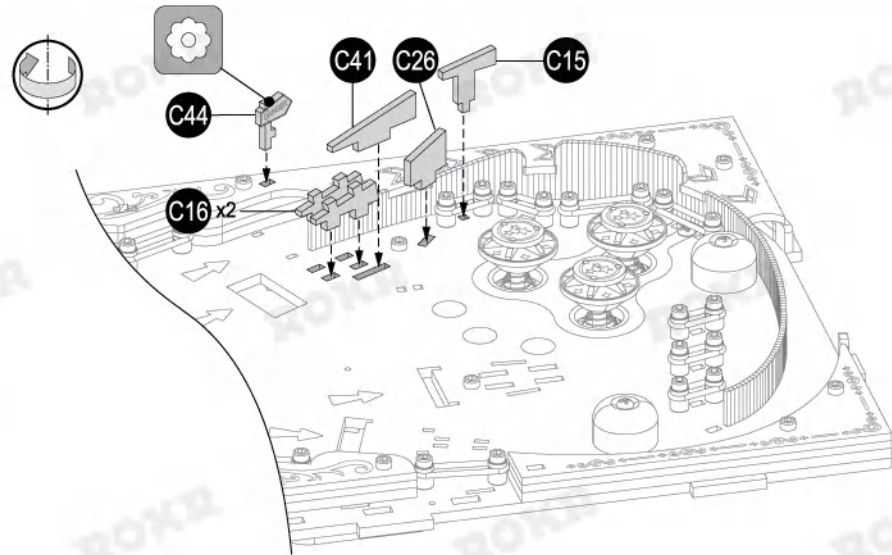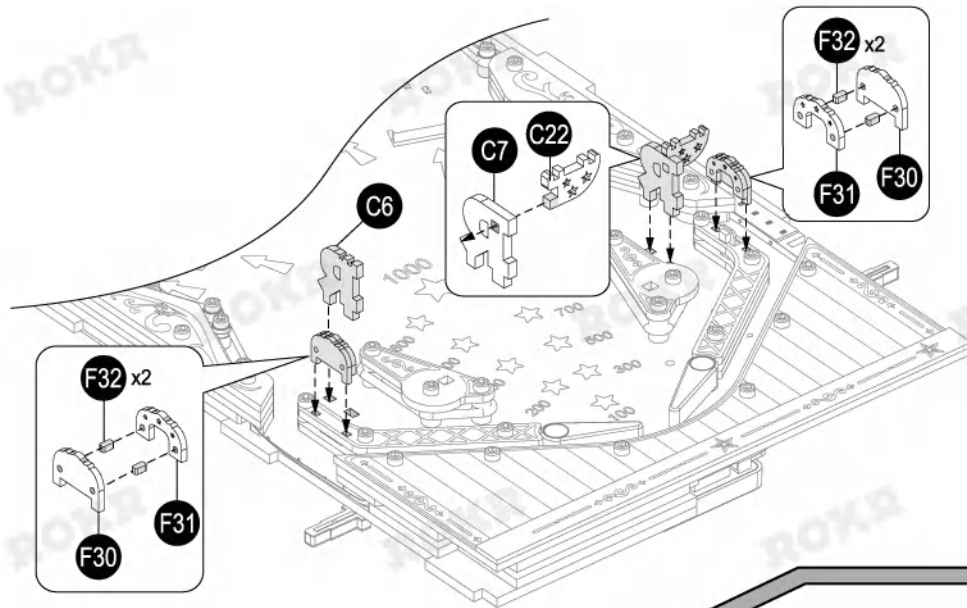


C11
 C12
 C29
 C38
 C42
 C43
 F21
 F29
 F39
 F40
 F42
 F47
 F48
 F49
 F50
 F58 x2
 F59
 F60
 J2
 J3
 J4
 1 P11
 24 P50 x2

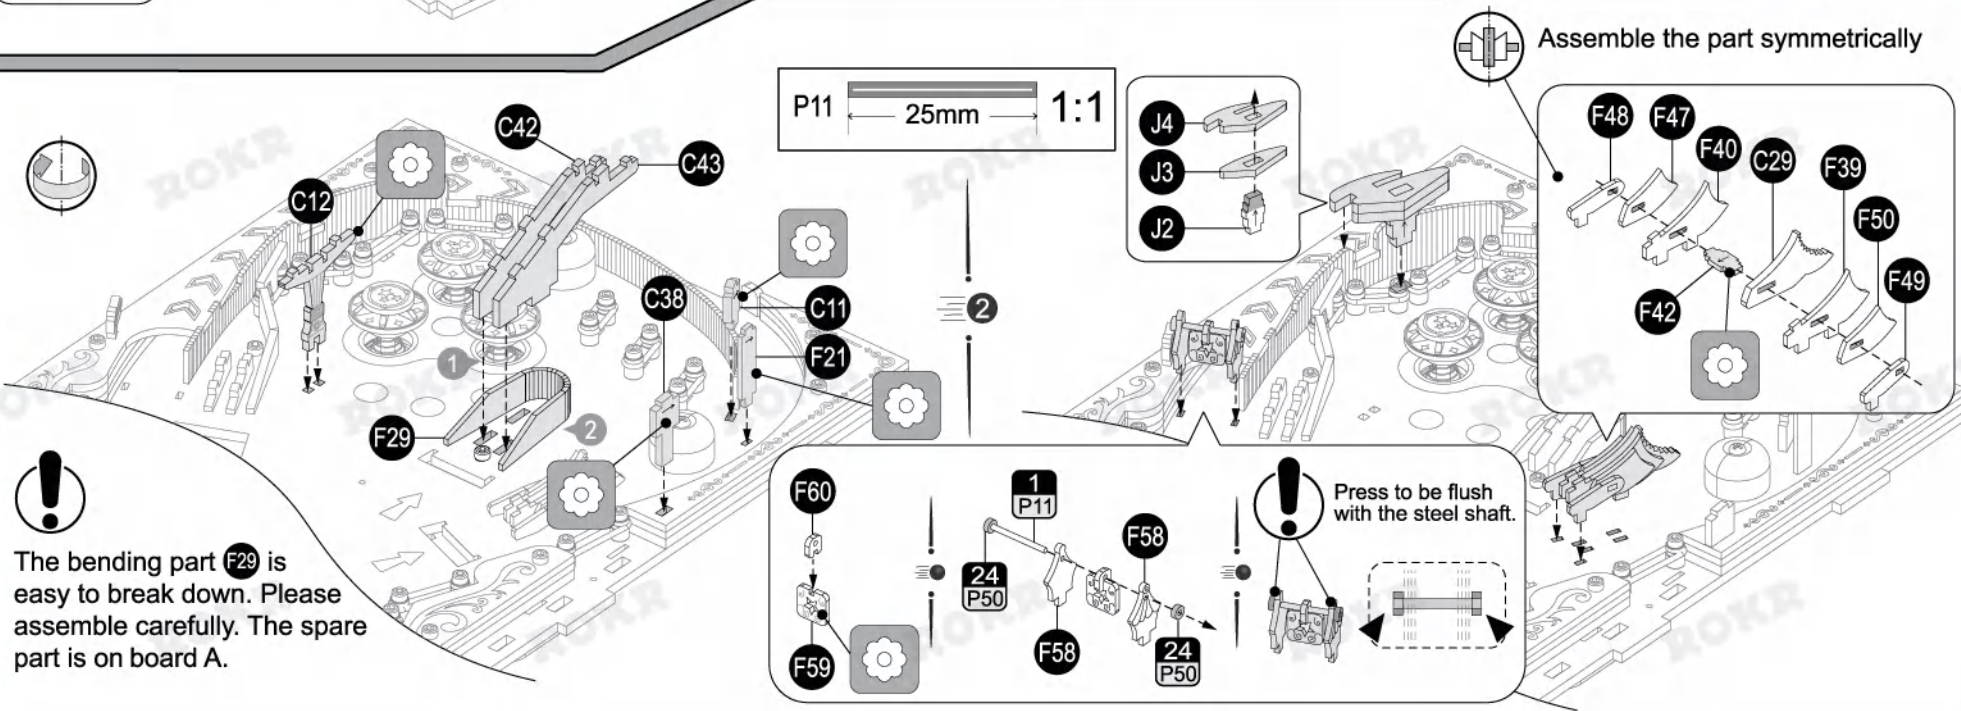


- C45
- C46
- F51
- F52
- F53 x3
- G5
- G8
- G12 x3
- G15
- 1 P10
- 3 P21
- 24 P50 x3

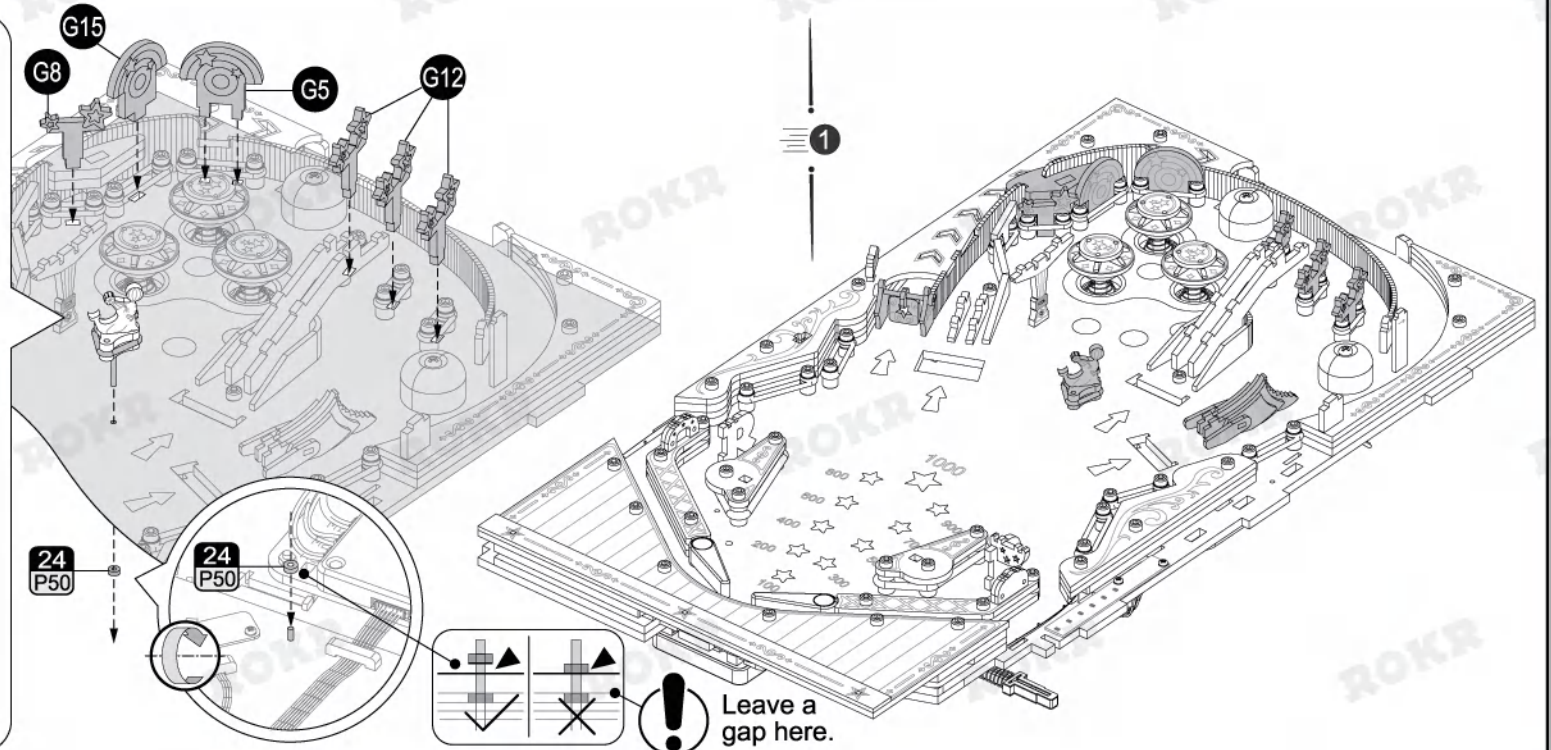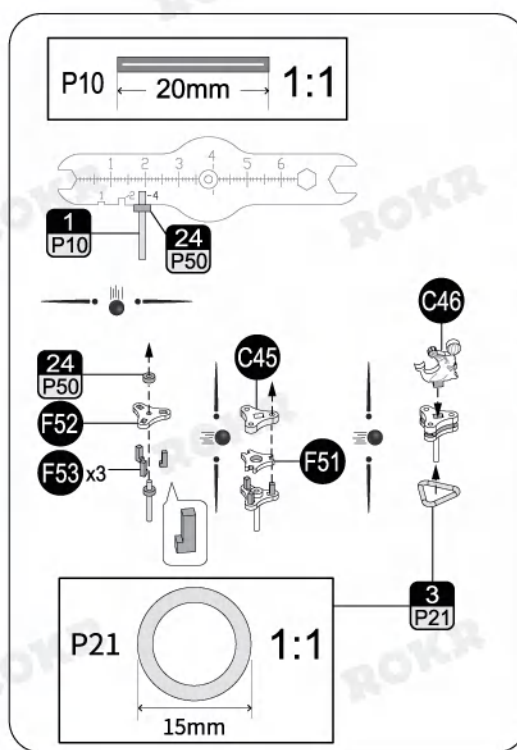

- C17
- D20
- D21
- G18 x12
- J5
- 9 P32

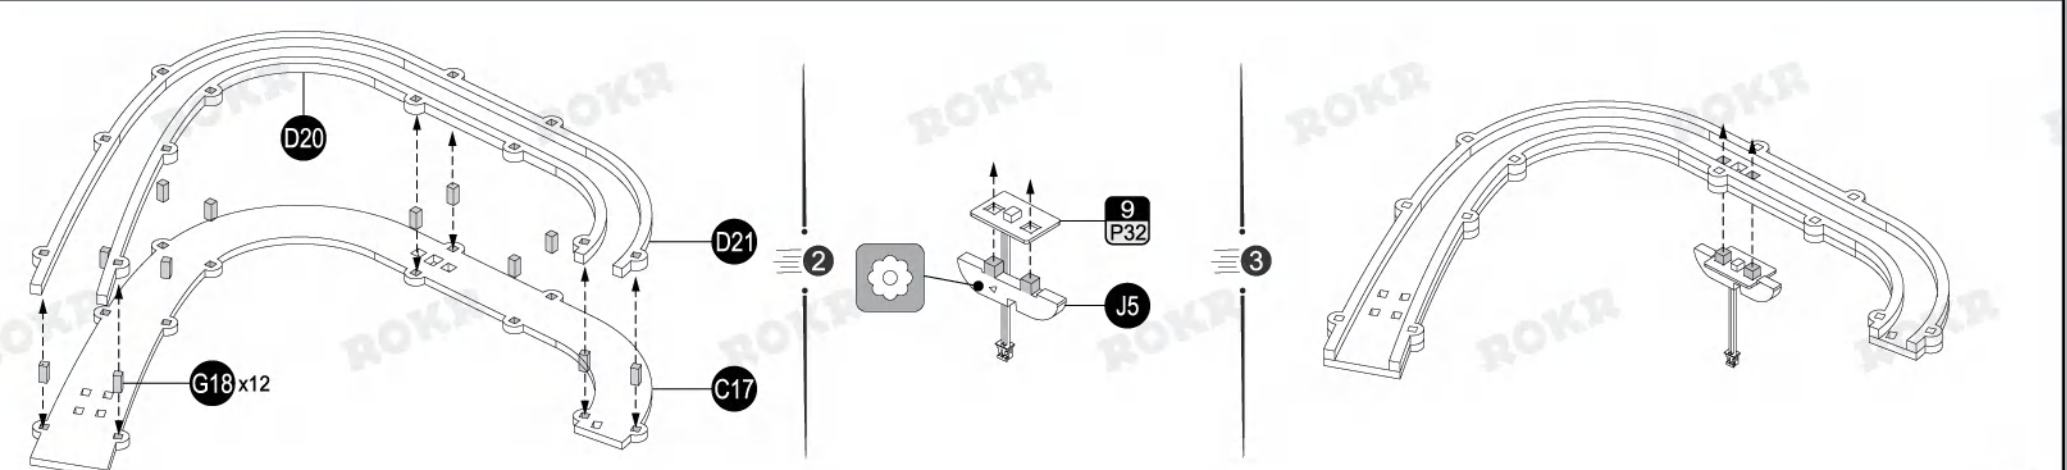

C13
C25
D16
D17
D18
D19
F10 x5
F17
F18
F25
J7

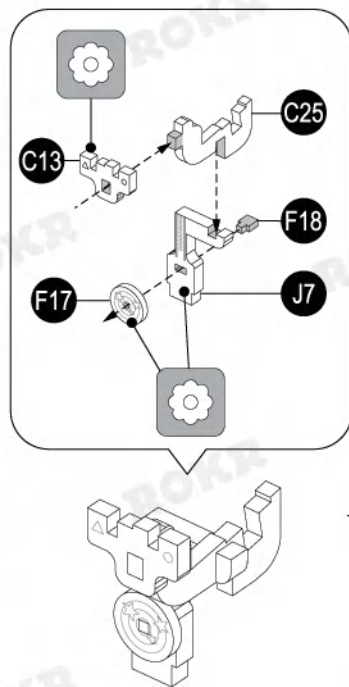


Pass the wire through this hole. Then, straighten it downwards. (do not apply too much force)




1




Insert the protrusions to the proper position.

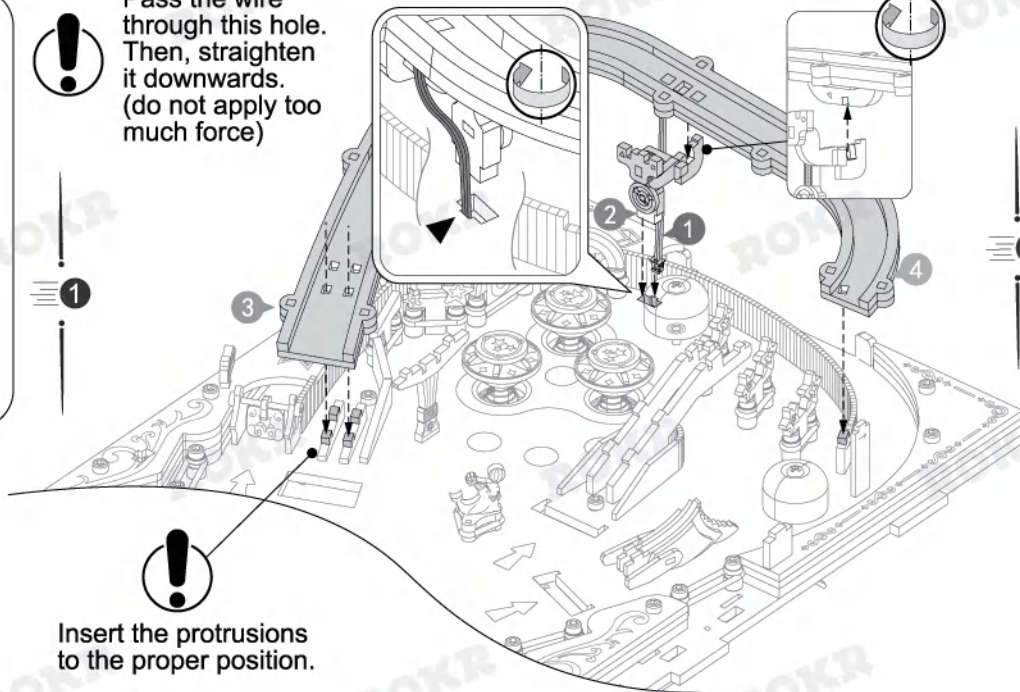

2

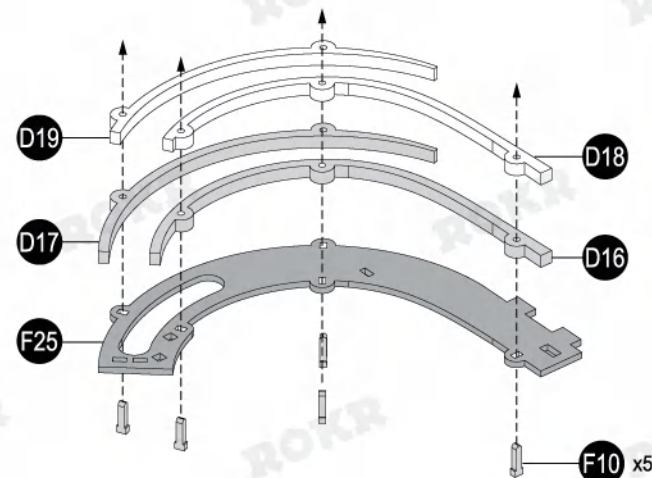


D15
F23 x2
F28
F33
F34

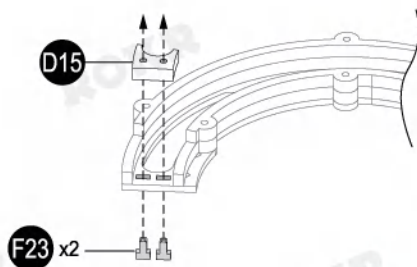




3






While assembling, press with your fingers as shown.

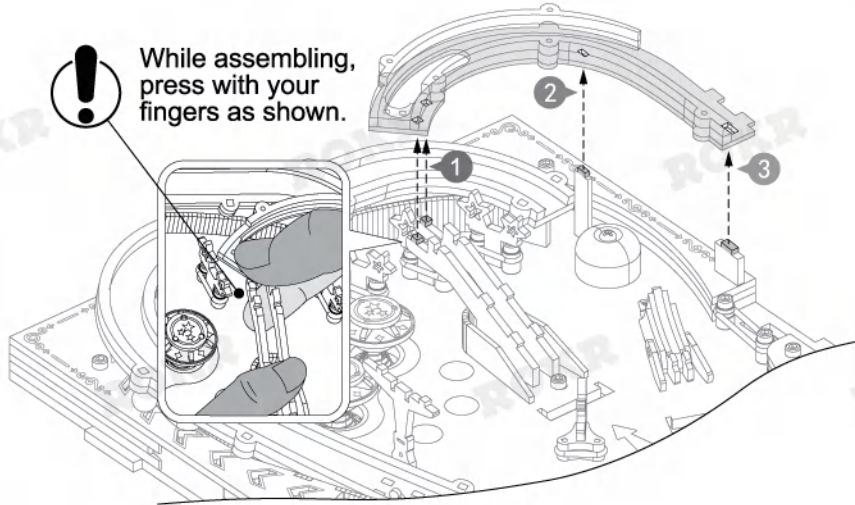



C39
C40
F11
F14
F16

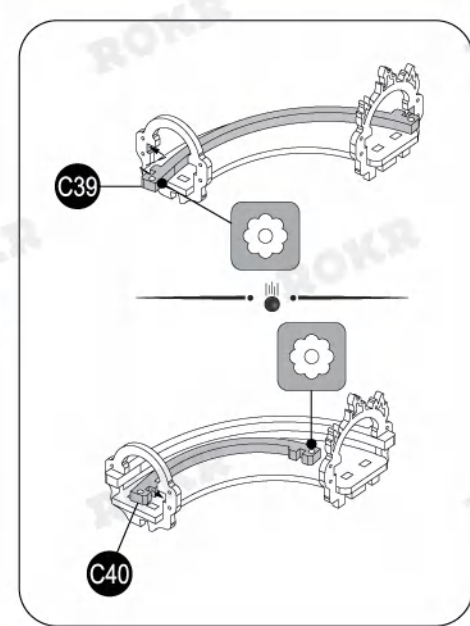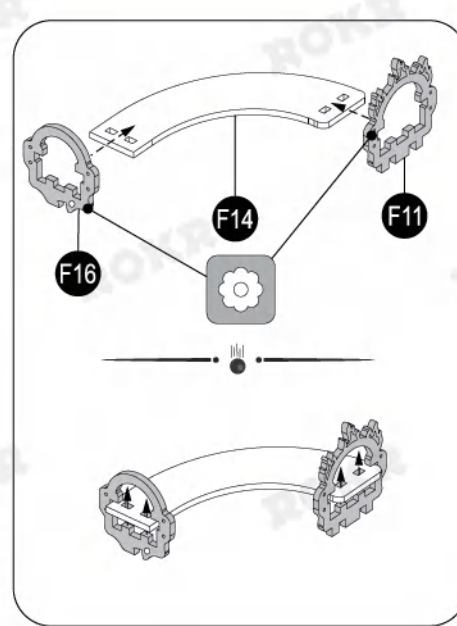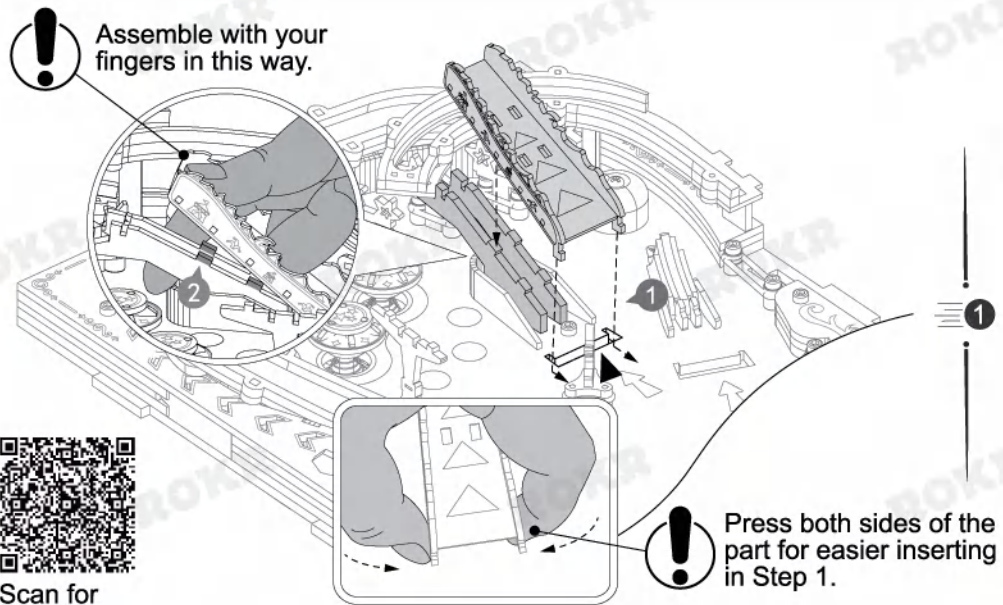



C18
C19
F13
F19
F22

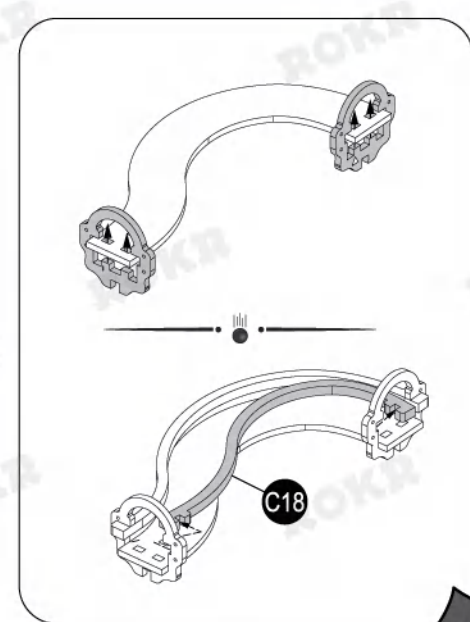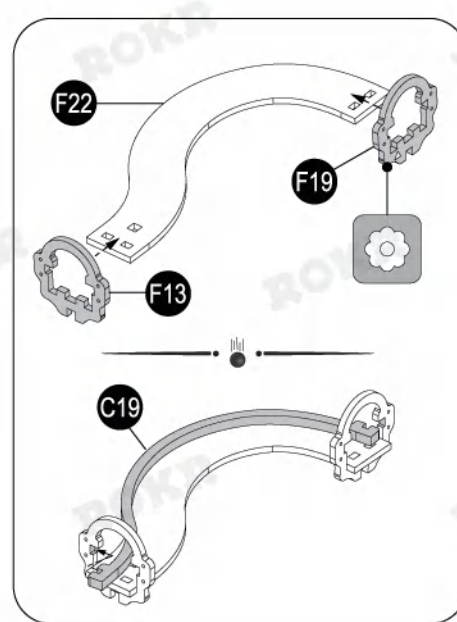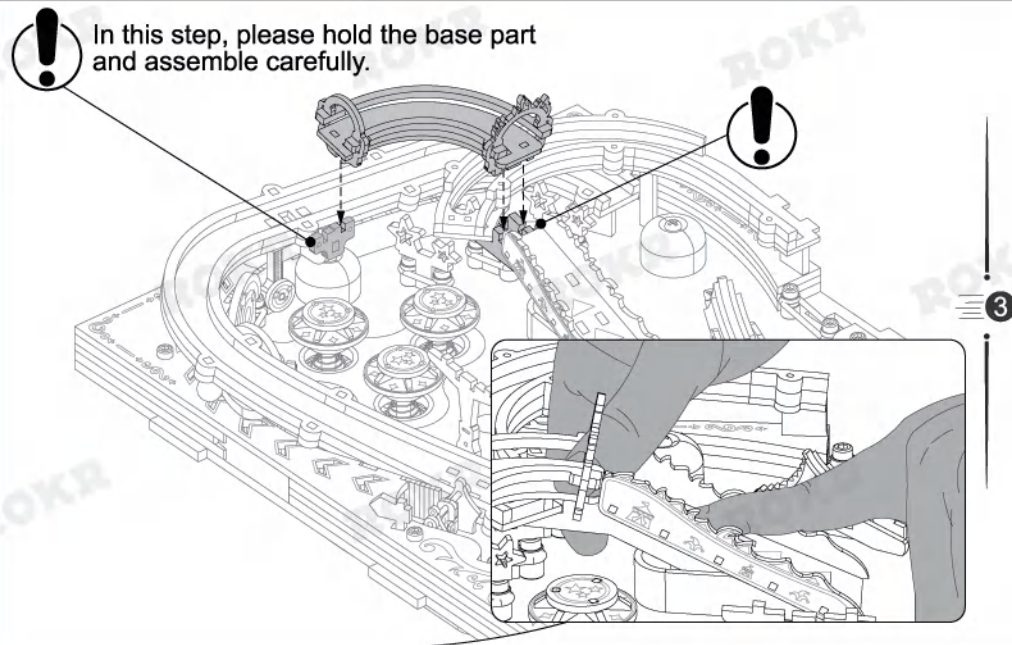

C36
C37
F13
F26
F27

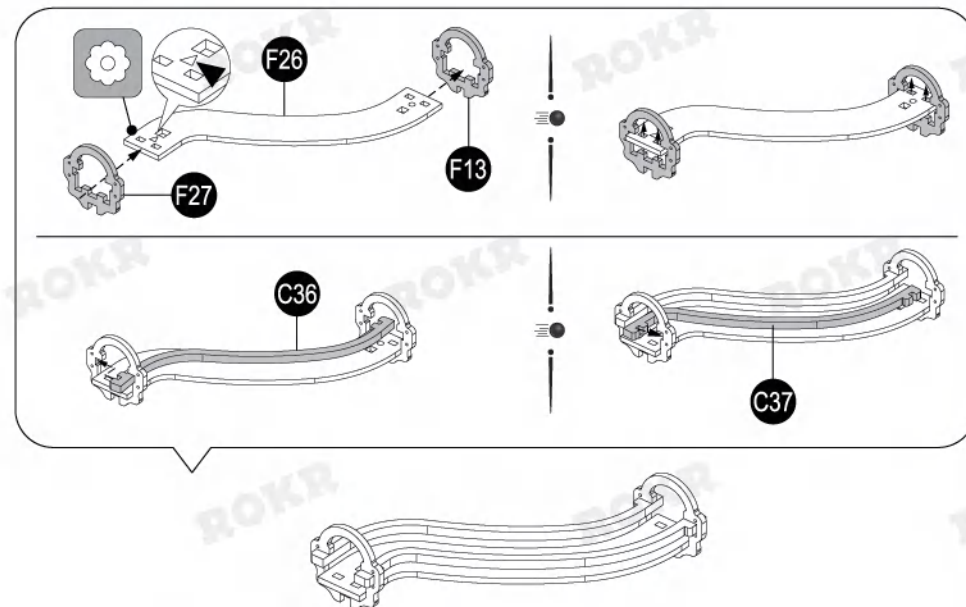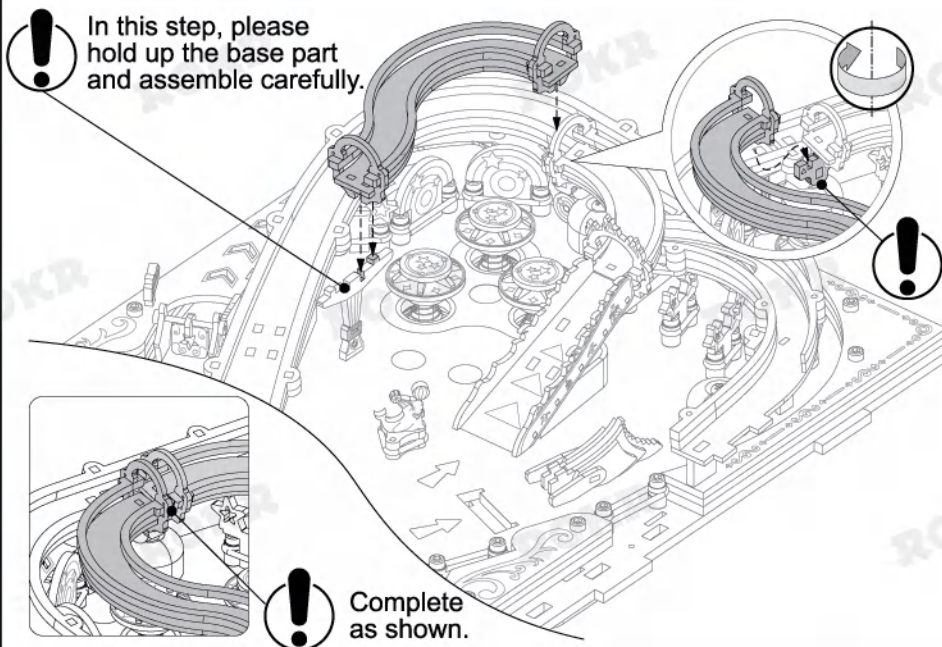

C14
C27
C28
F20 x2
F24
J8
10 P33

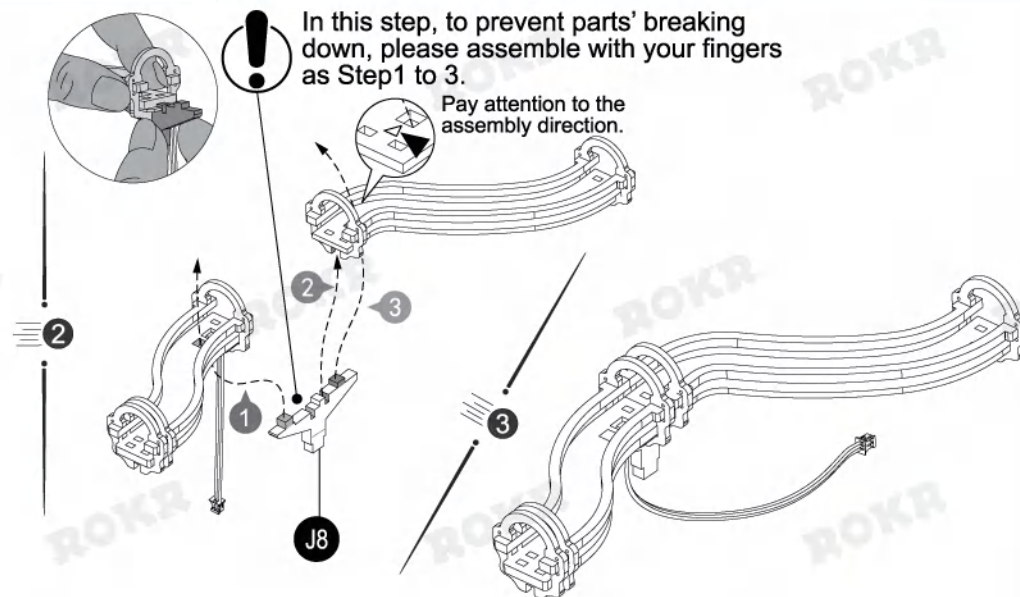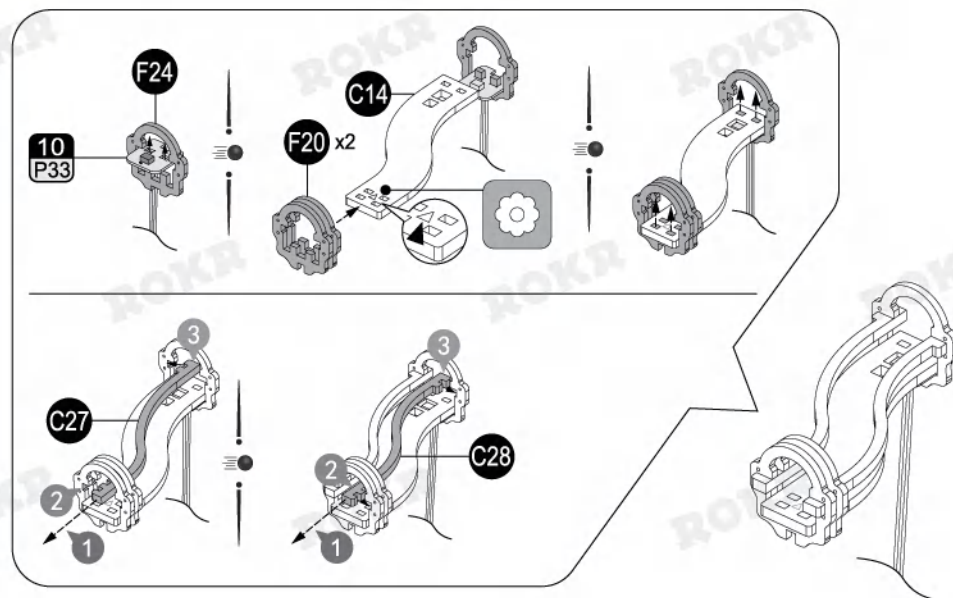

F37

F54 x2




F55

F56

M6





Pass the wire through this hole. Then, straighten the wire downwards. (do not apply too much force)

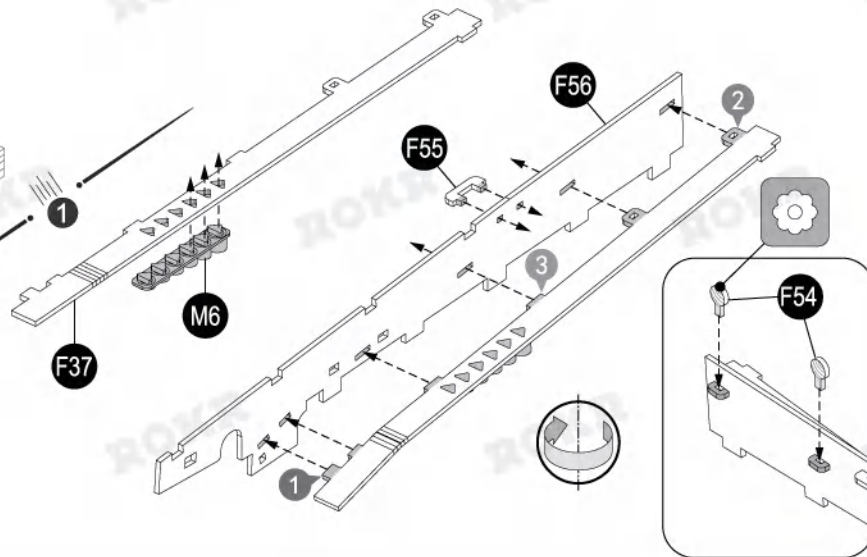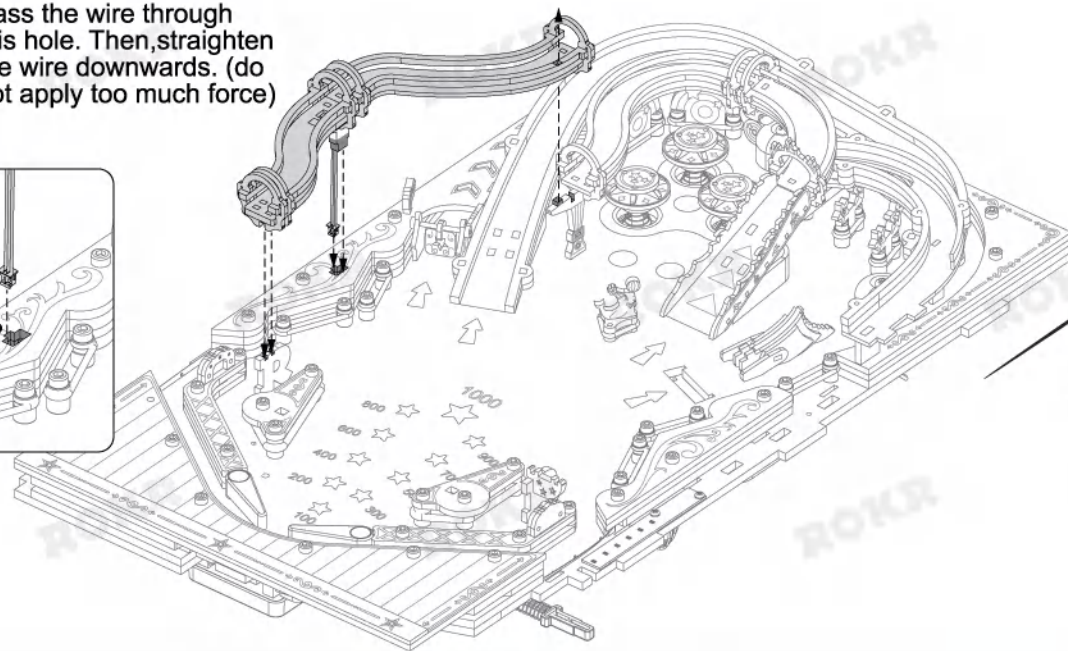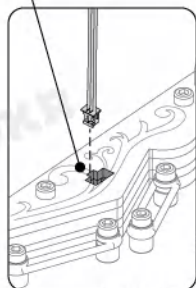



K9



In this step, bend here slightly for easier assembling.

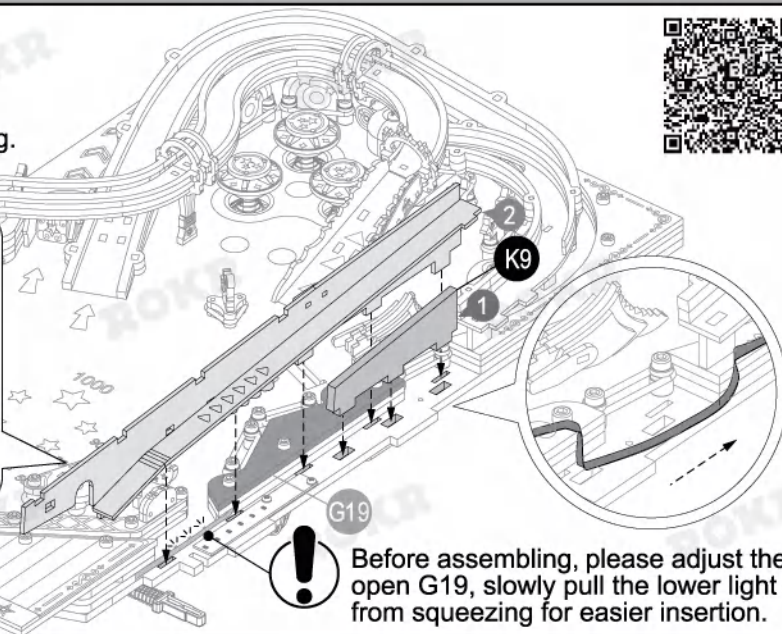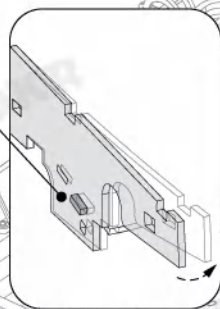

Scan for assembly videos

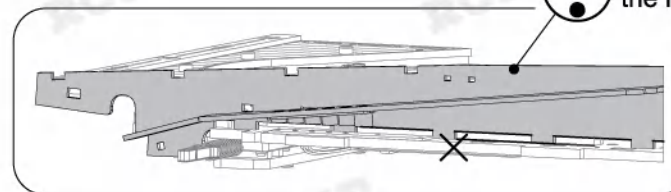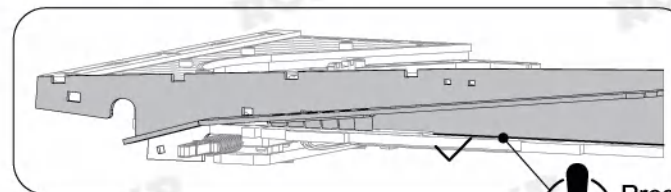


Press this part to the right position.




Before assembling, please adjust the light string. If it is out of the proper position, loosen the screws to open G19, slowly pull the lower light string forward as shown, and straighten it to prevent the buckle from squeezing for easier insertion.

G14

J14

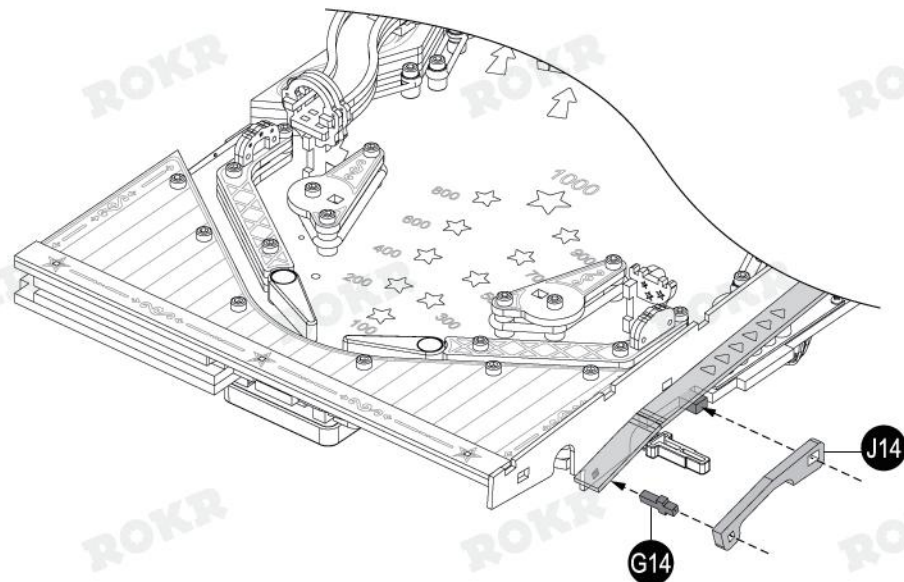

1

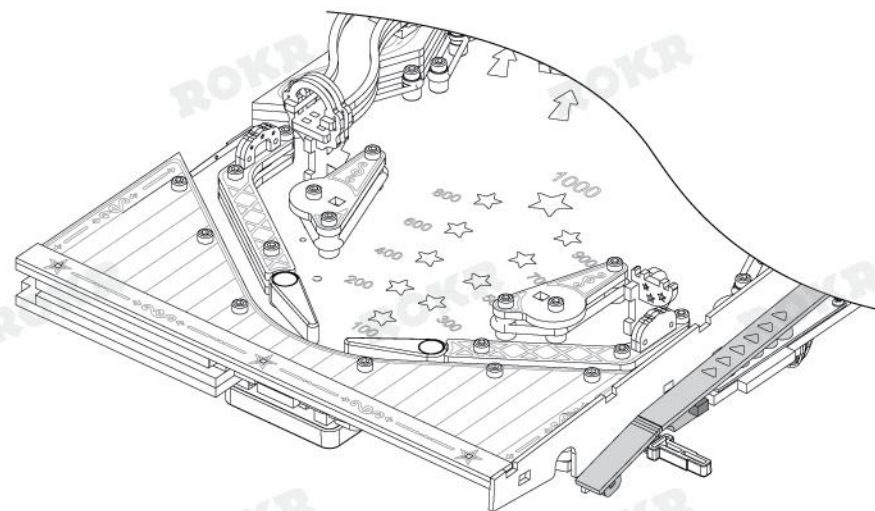


13

F57



J6 x2


Q1

Q2

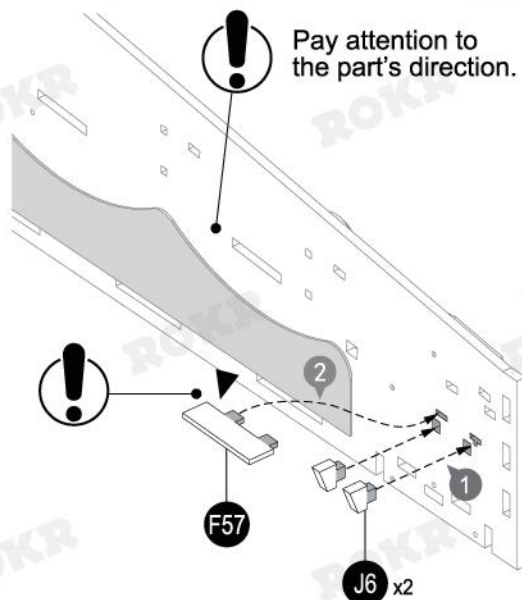

Pay attention to the part's direction.

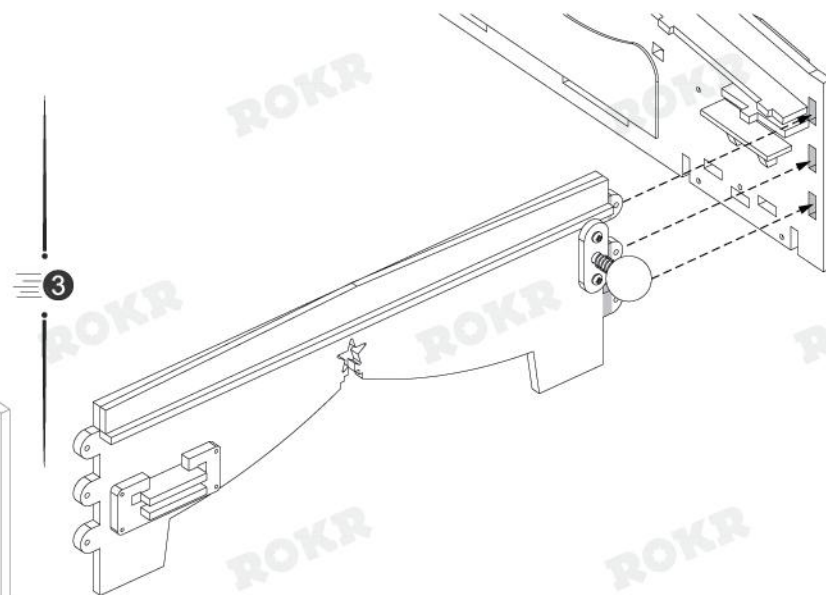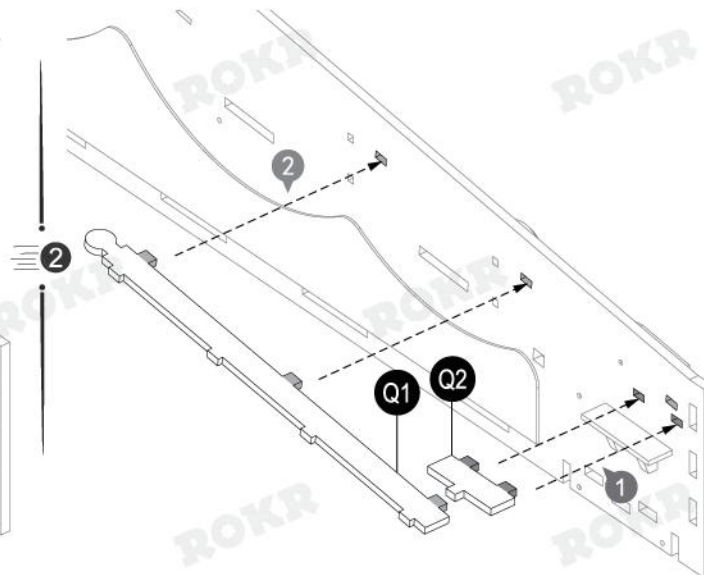

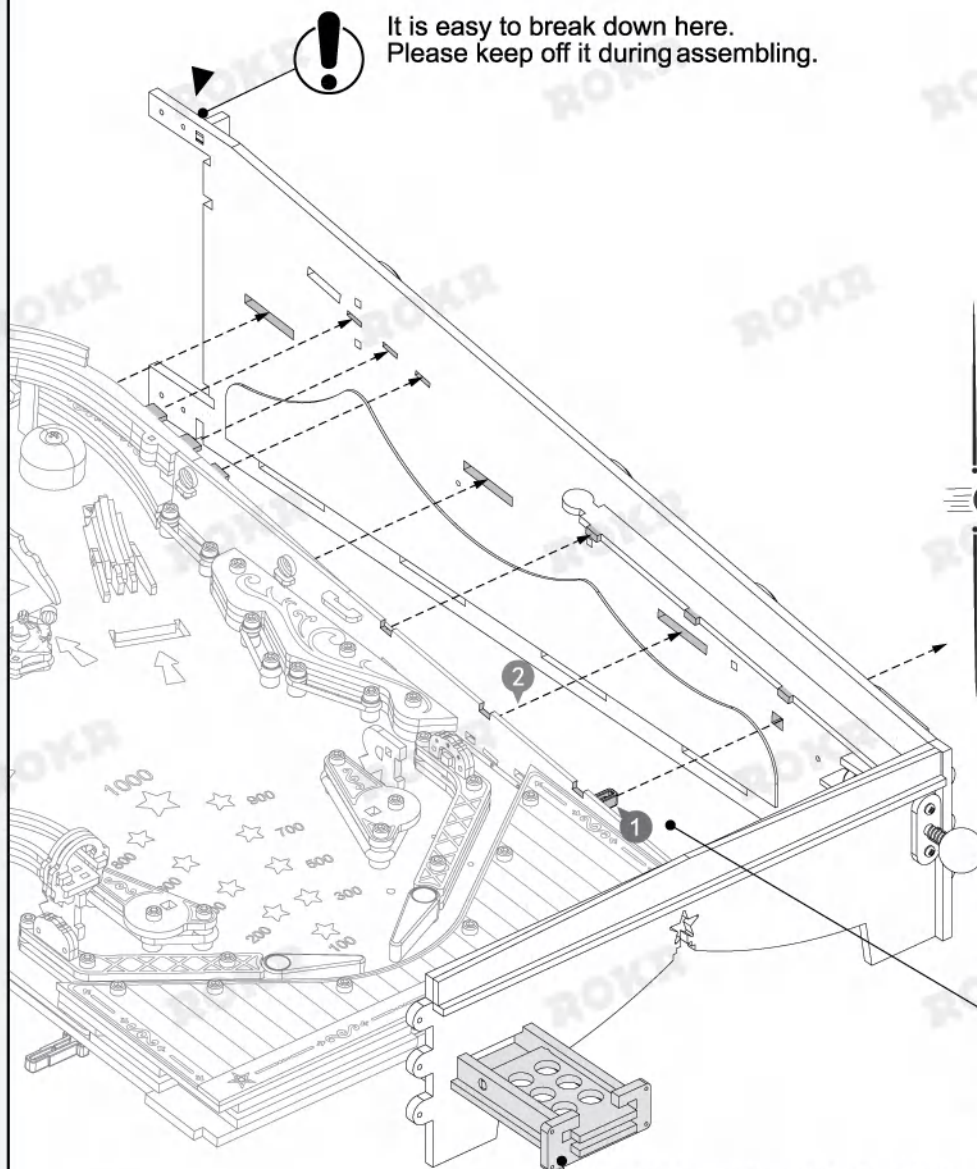


It is easy to break down here.
Please keep off it during assembling.

1



2



! This part is a little big. While assembling, please pull out the drawer for easier assembling.

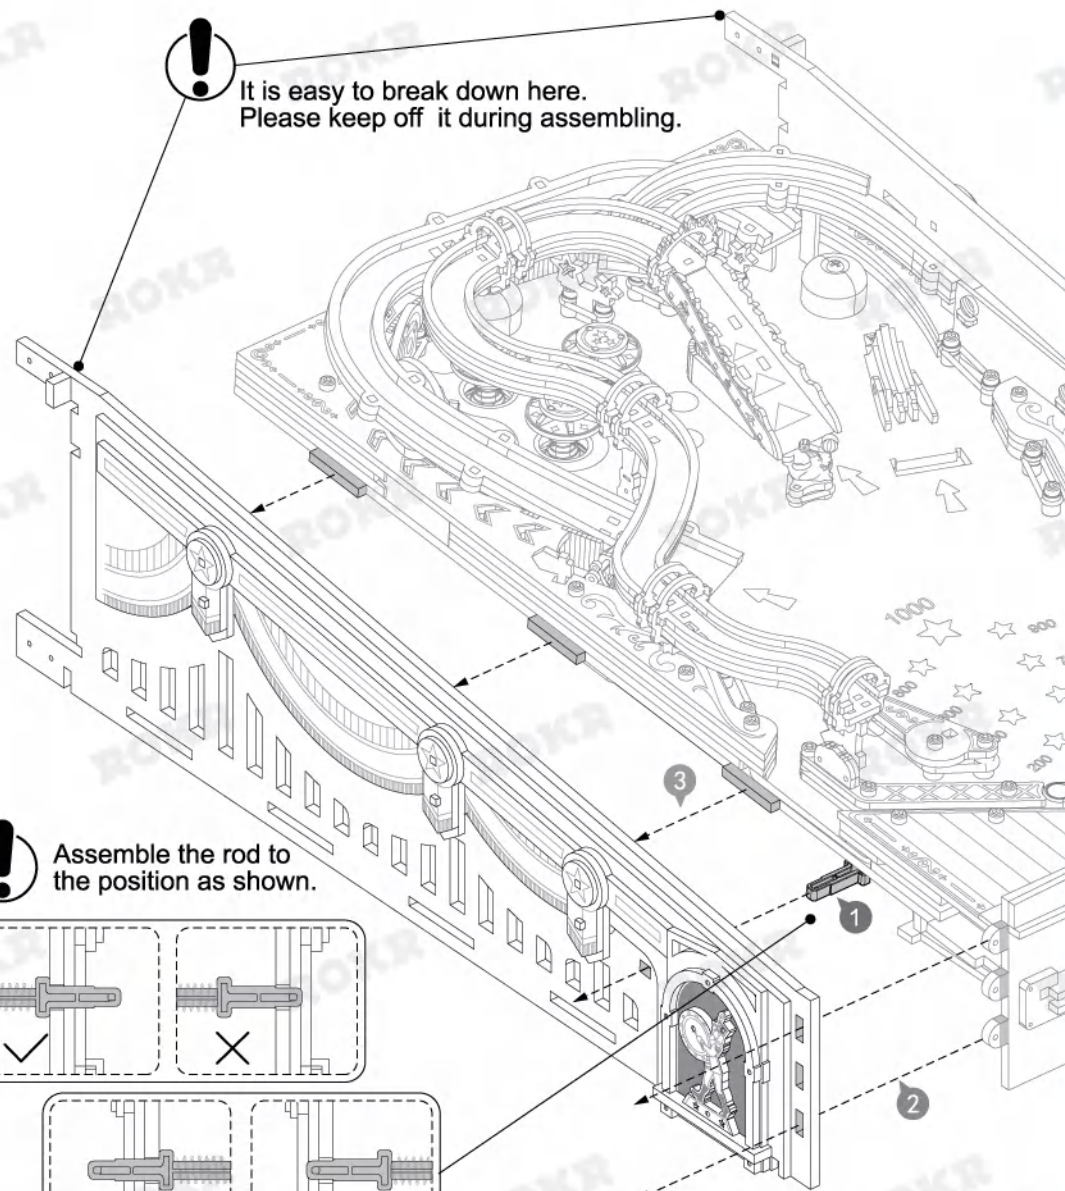

It is easy to break down here.
Please keep off it during assembling.

! Assemble the rod to the position as shown.

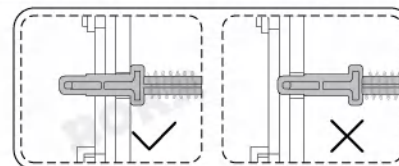
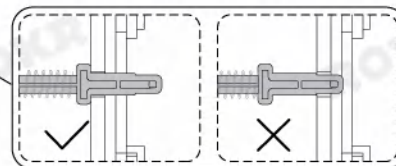


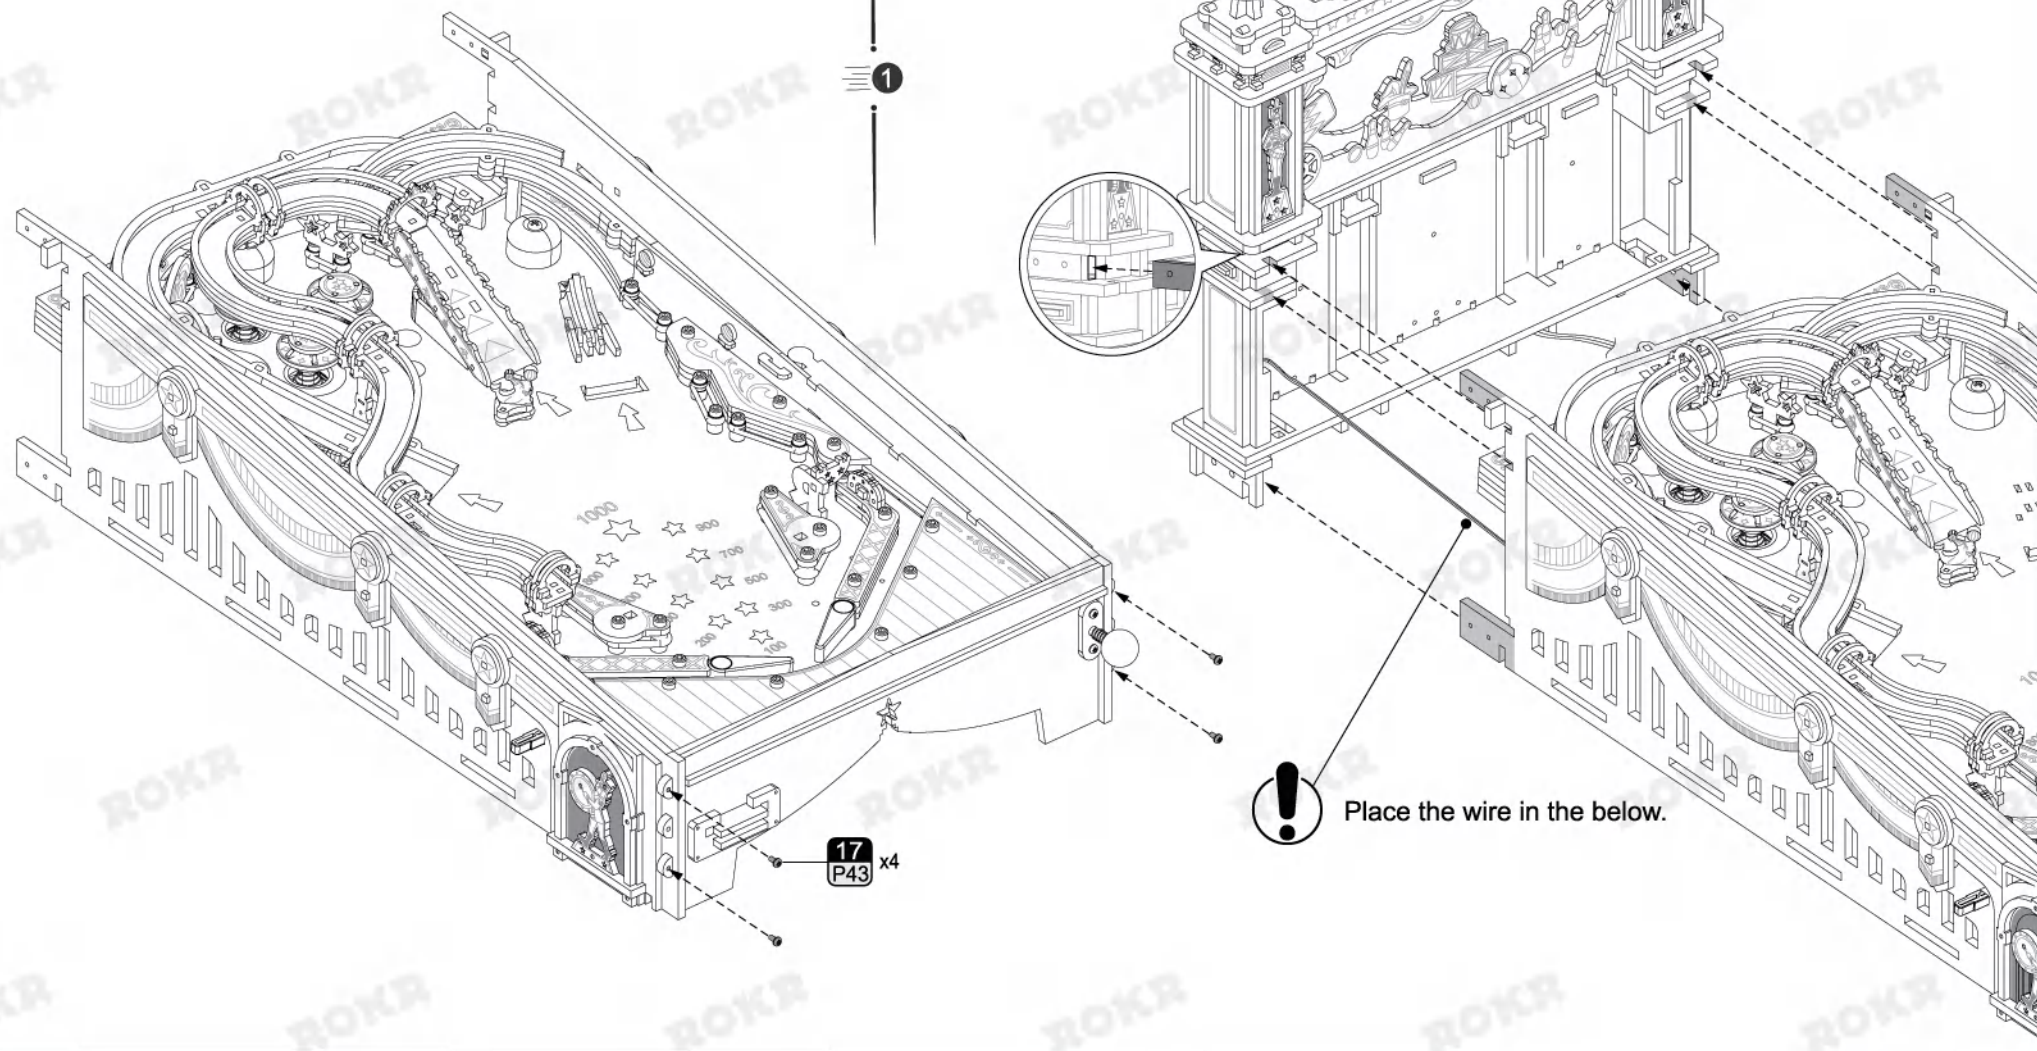

L3 x2

19
P45 x8

P45
x8 10mm 1:1

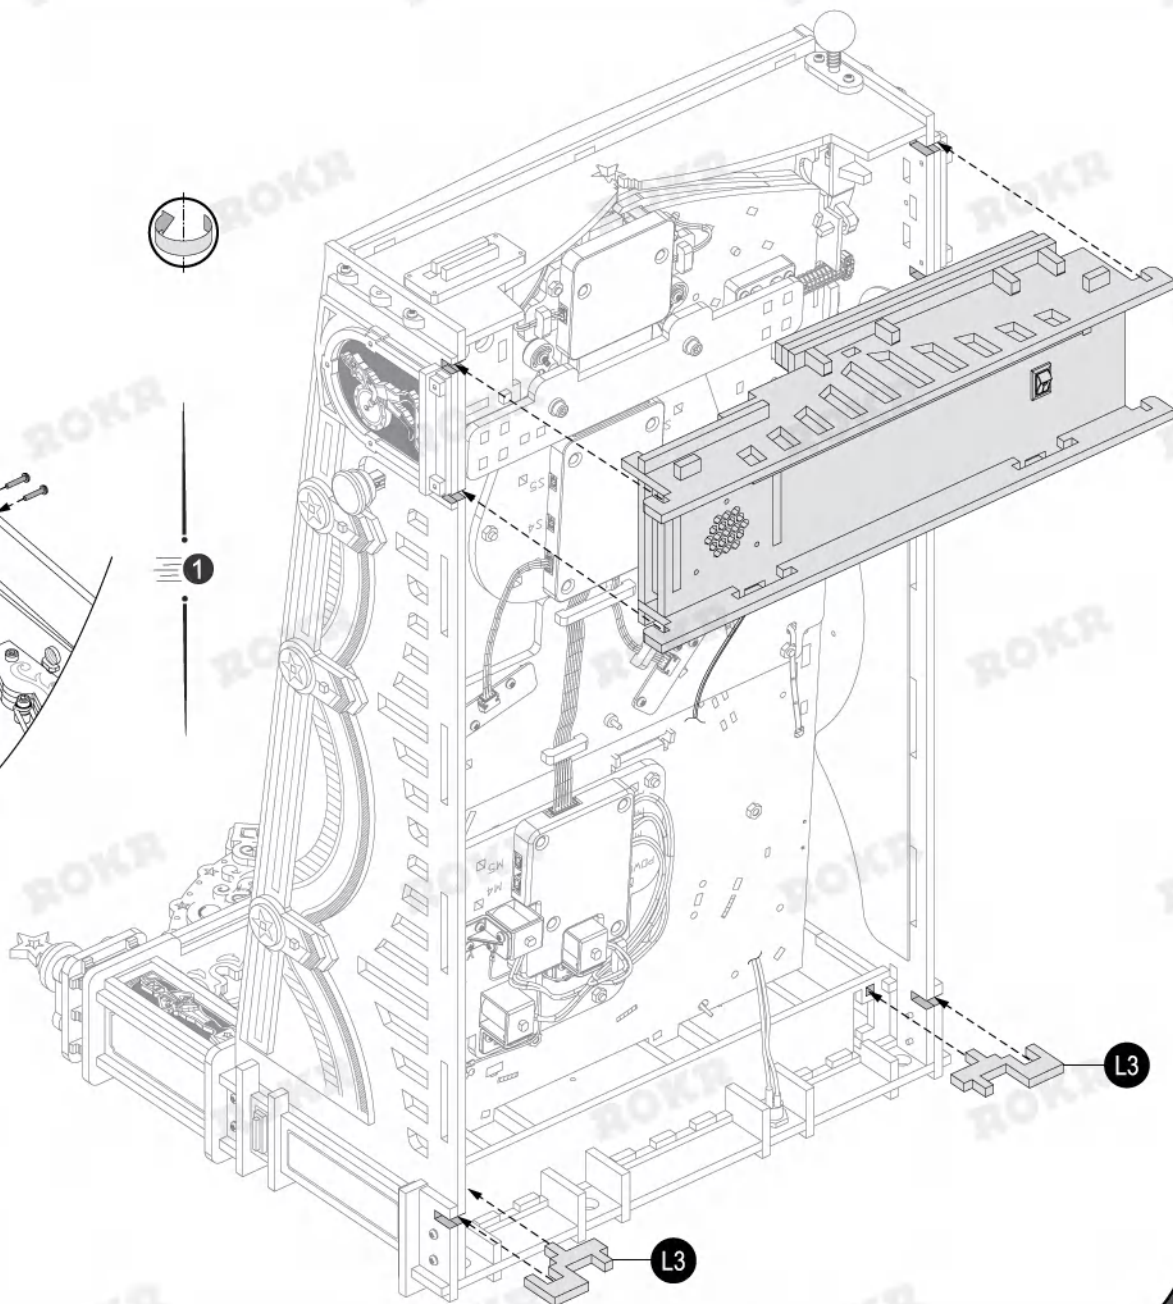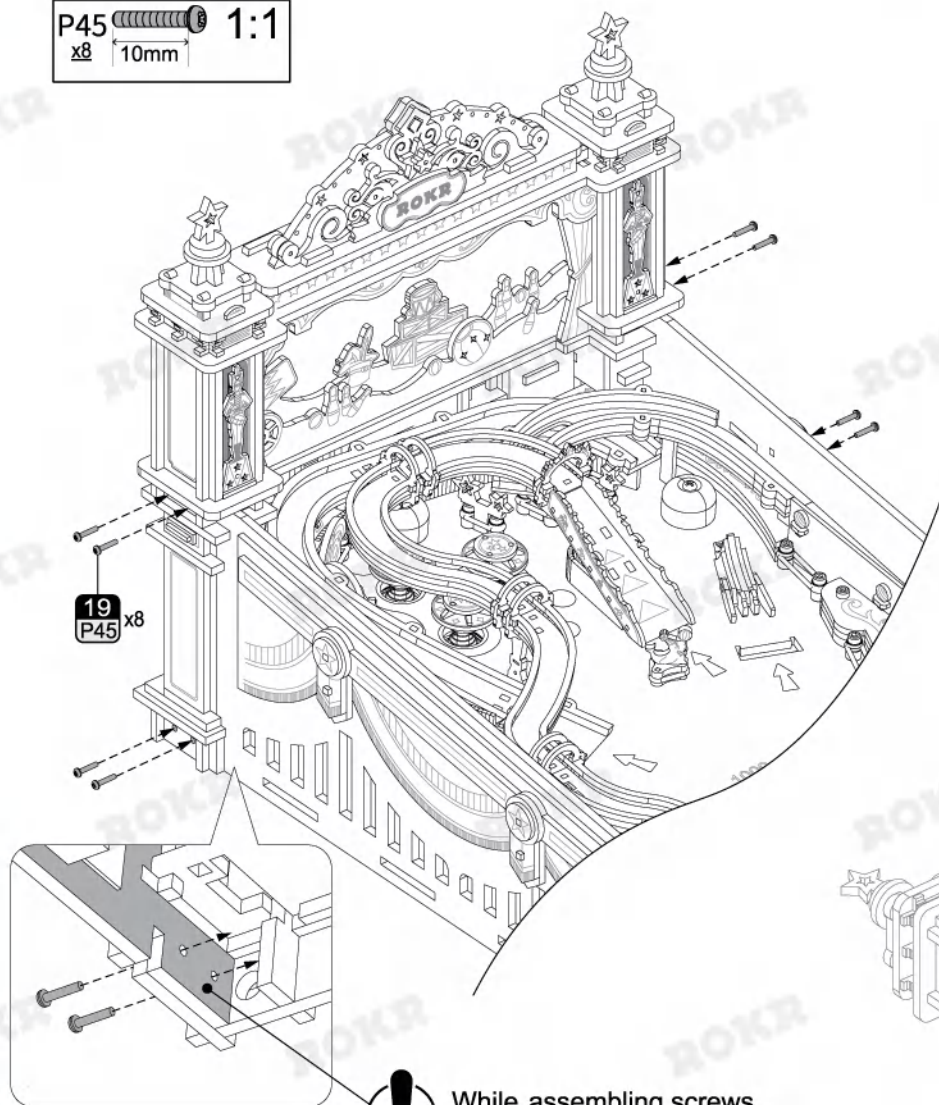



Turn this page 90 ° counterclockwise to refer the picture with the assembly.




Assembly Tips:

1. Suggest to hold it with **K7**.
2. Pay attention to the terminals' direction. Assemble it properly.



P36 Do not plug the loudspeaker into the wrong interface. Otherwise, it is easy to burn out.

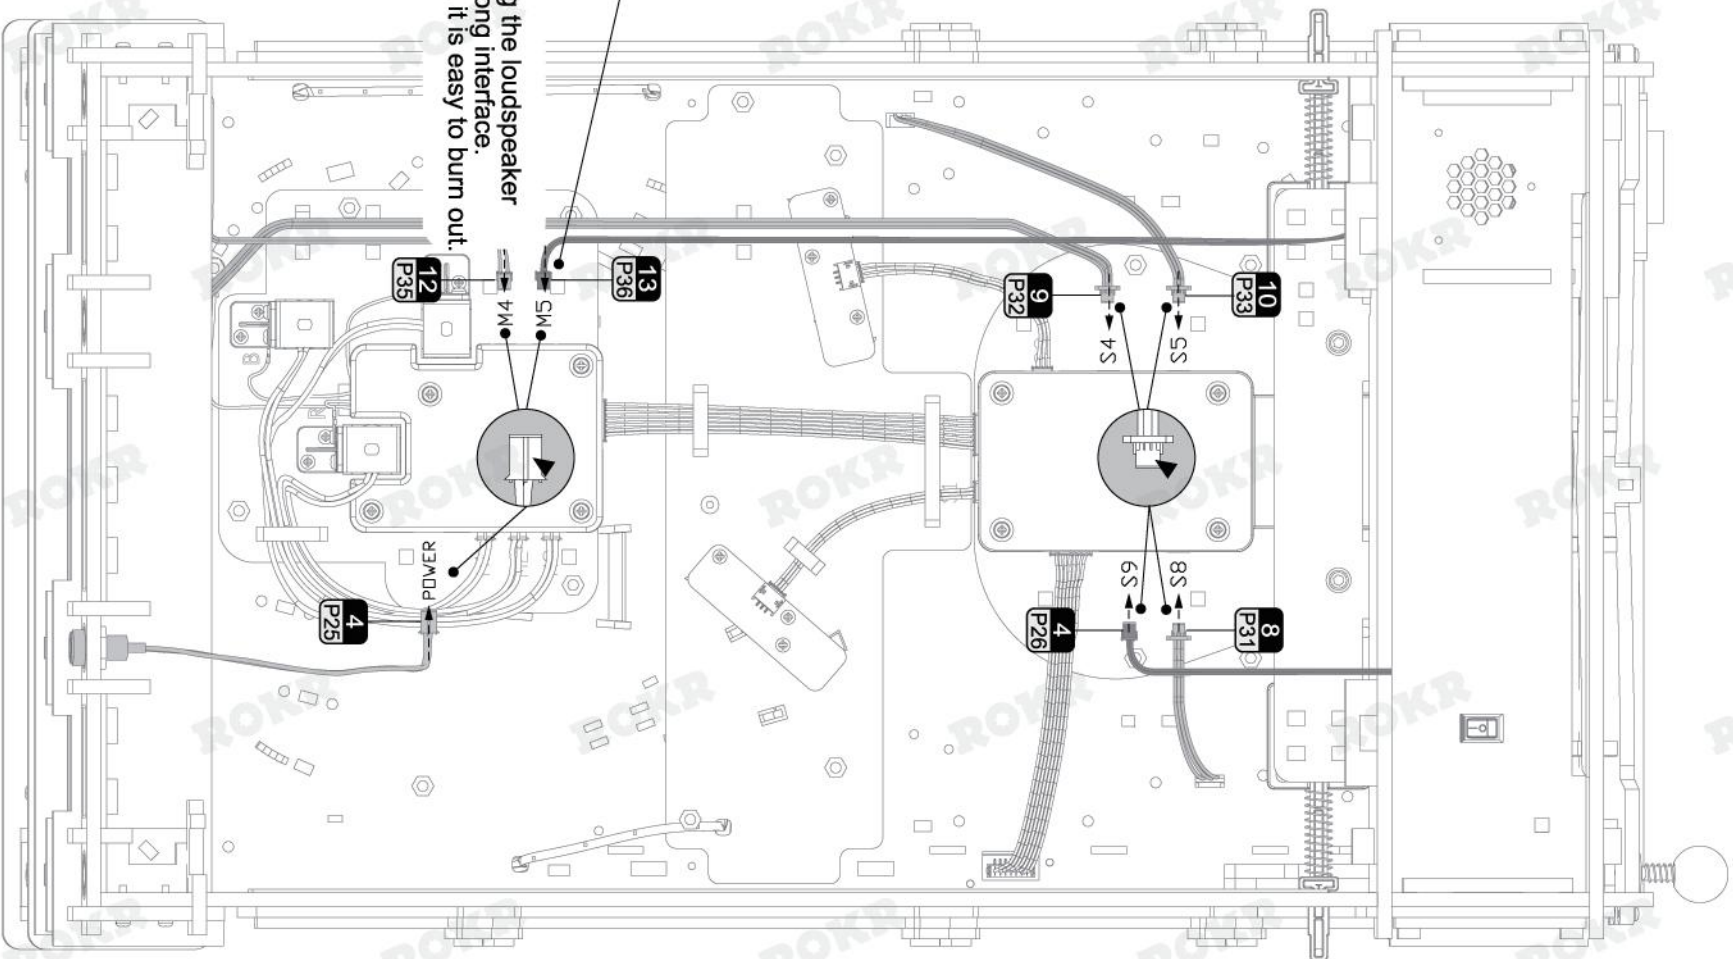

H8

K2 x3

K5


K6

K13

K14


K15

L8

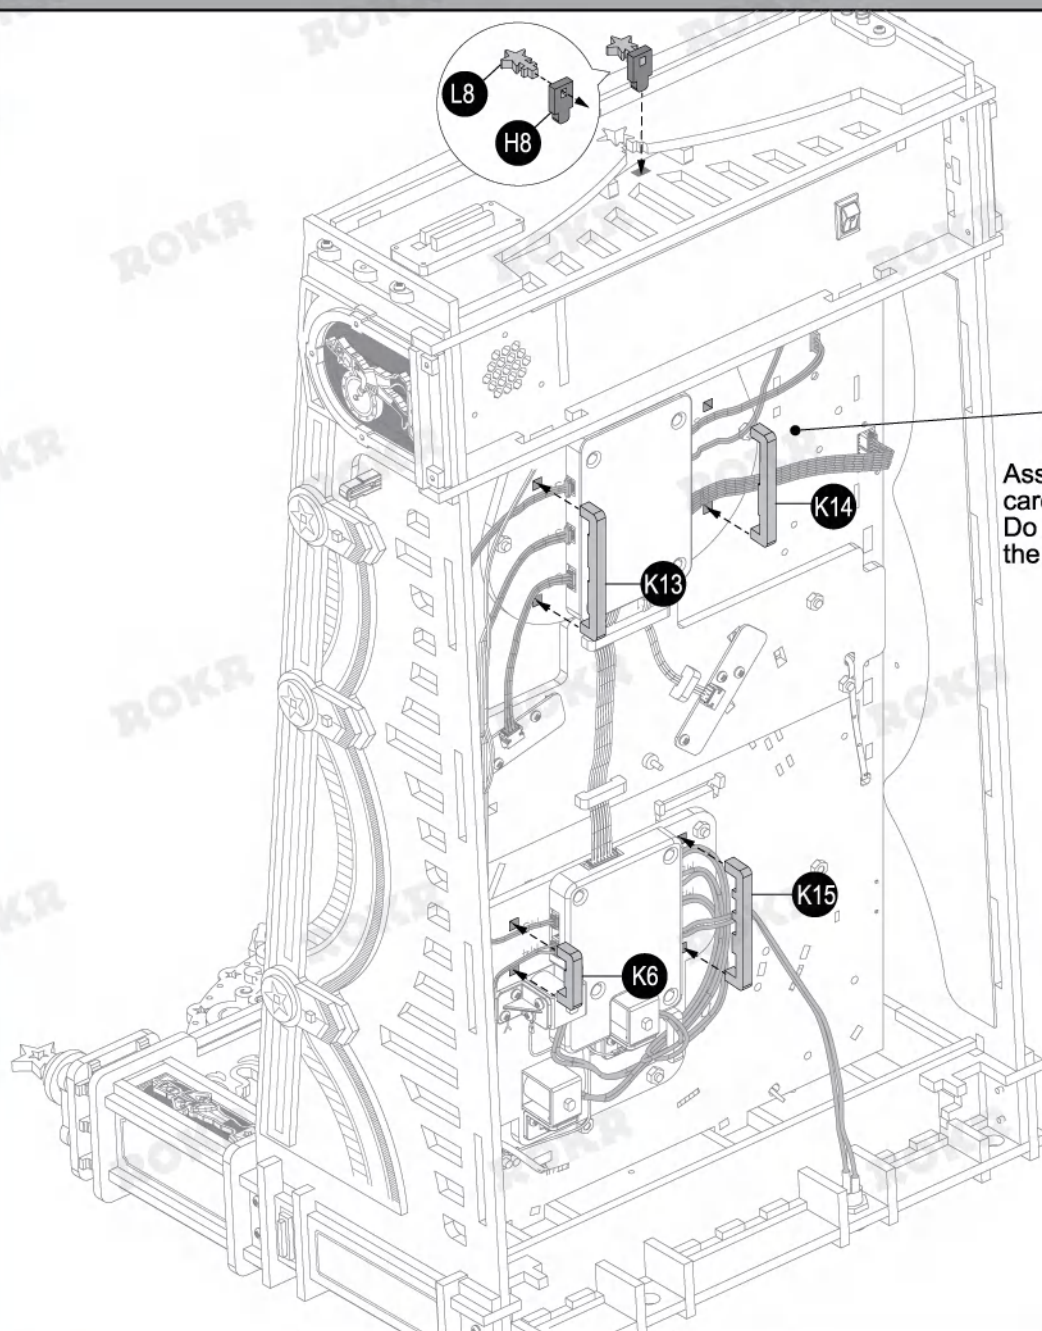


Assemble
carefully.
Do not squeeze
the wire.

1

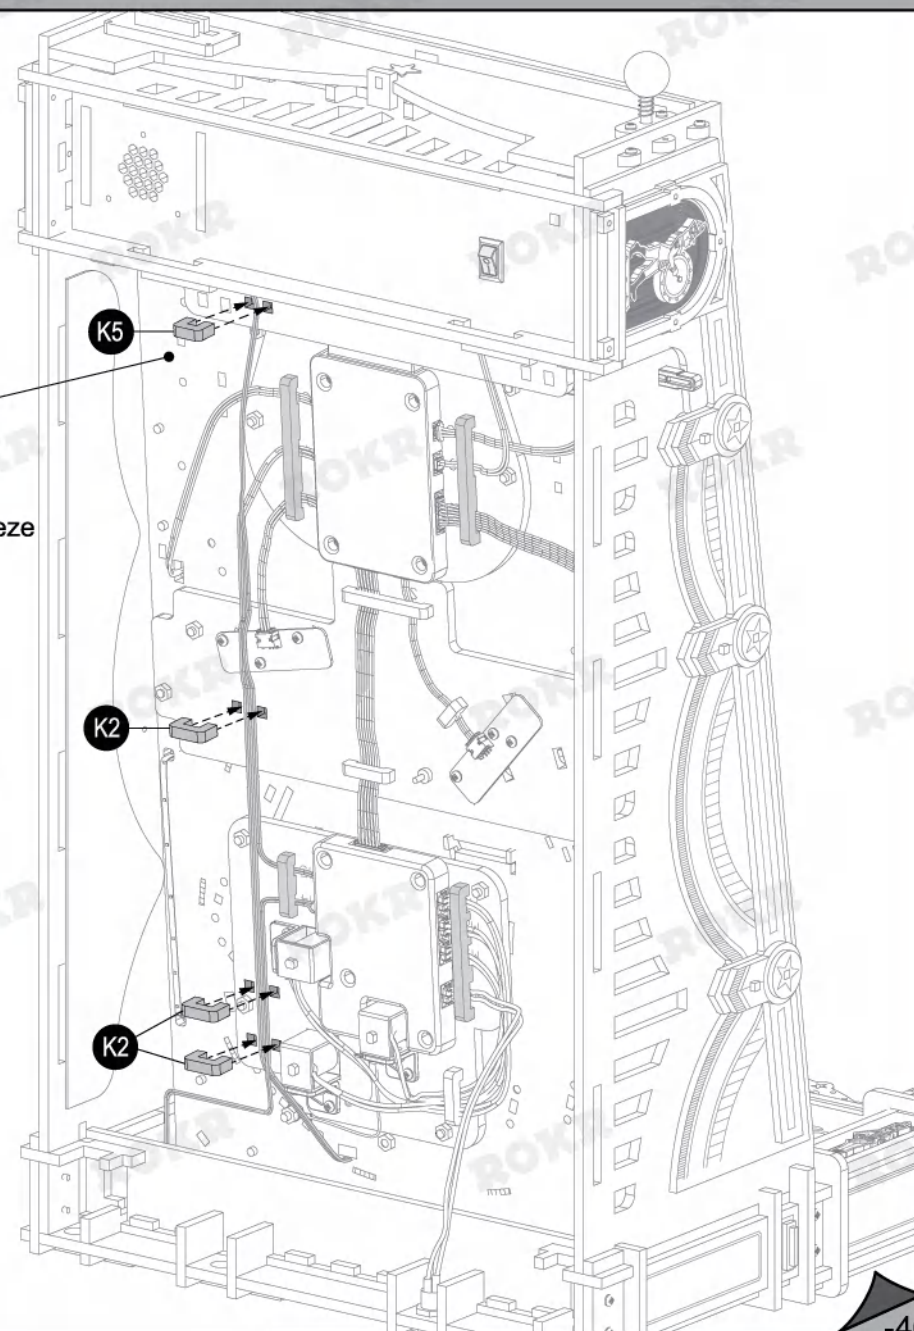


1
P19 x2

17
P43 x4

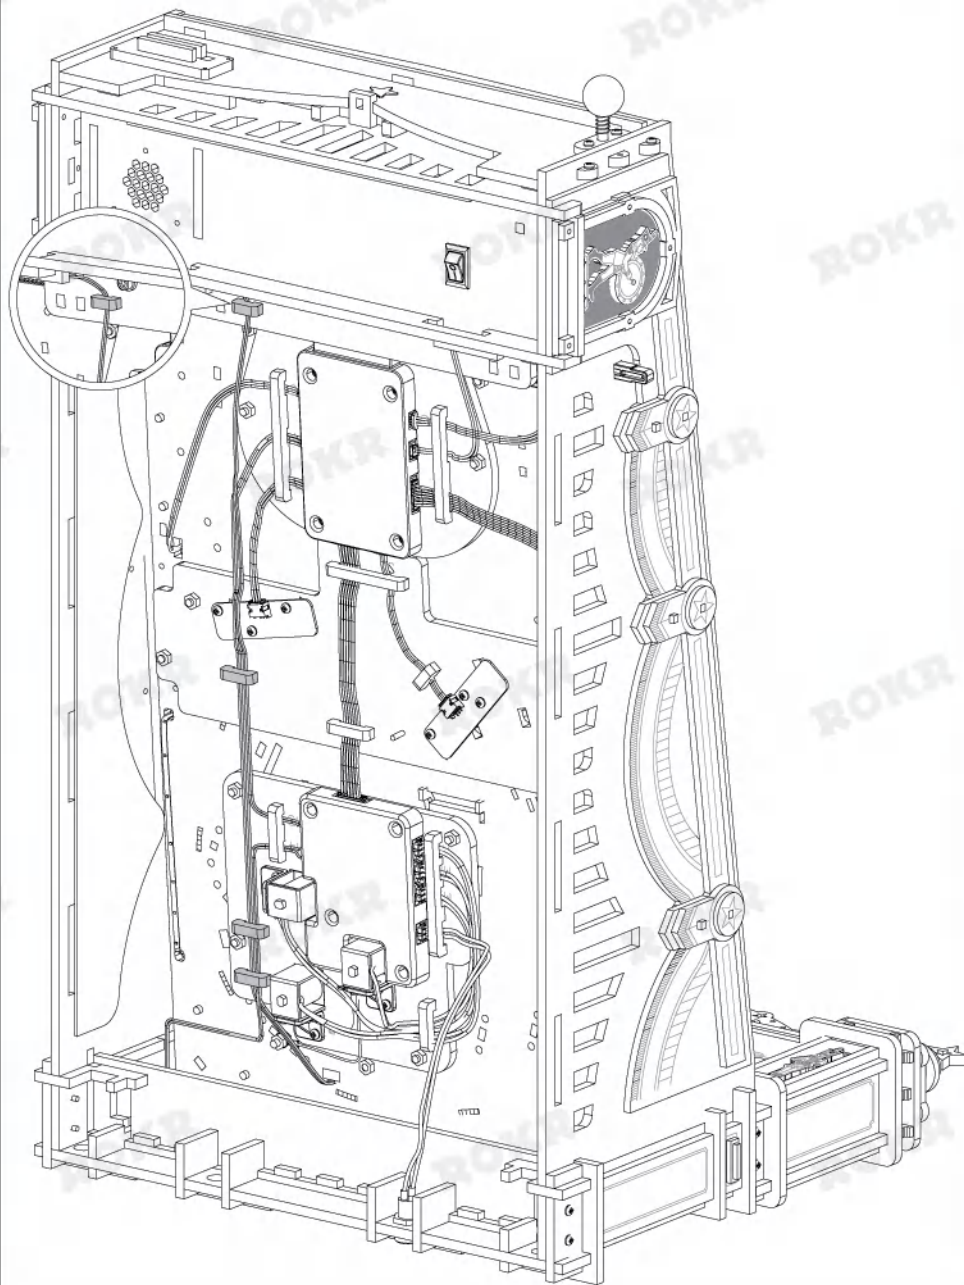

P43 1:1
x4 4mm

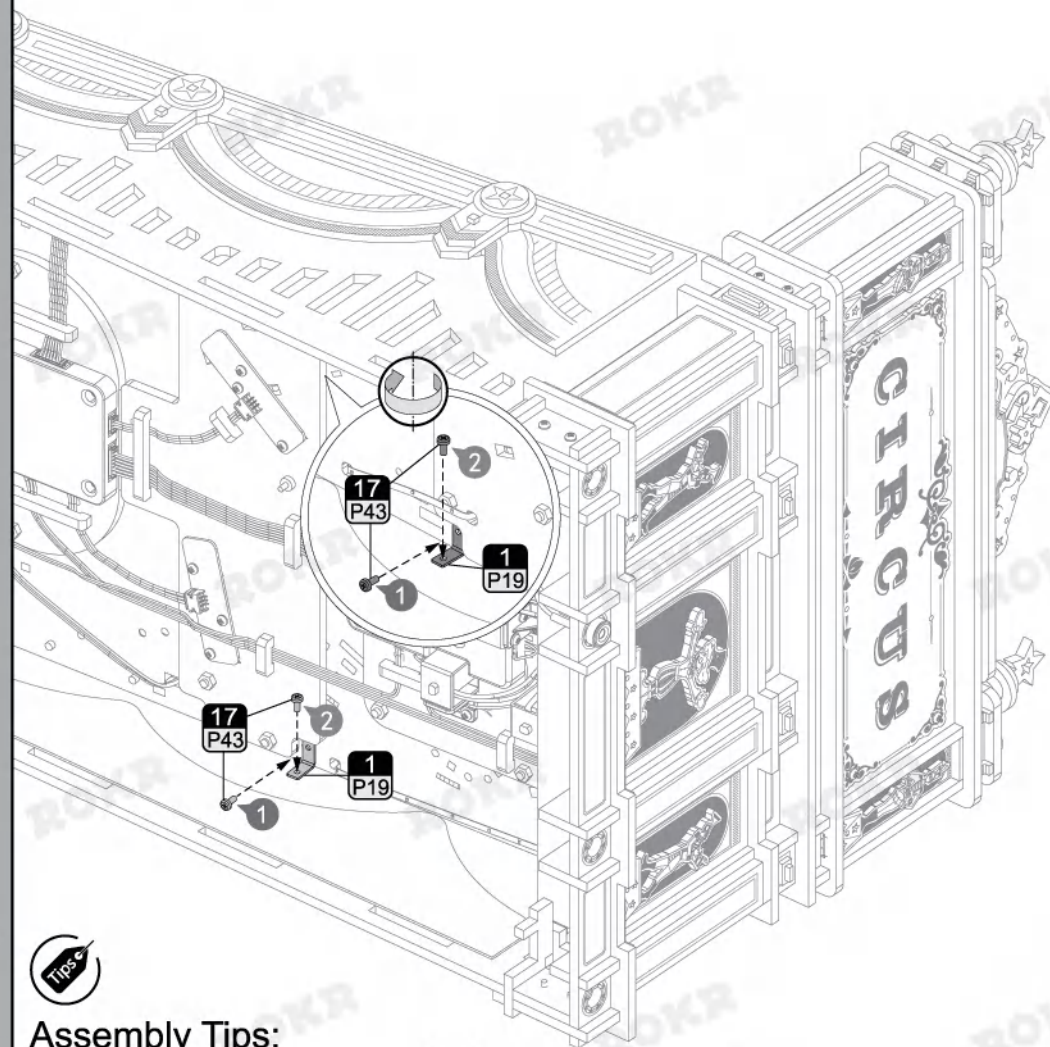

Assembly Tips:

1. Do not tighten 17 P43. Make sure 1 P19 is flexible and cannot fall.
2. Assemble all 17 P43 firstly and then tighten them.


Plug in the power cord and check whether the electronic parts have operating faults

(After the test, pull out the power cord and continue assembling)

It is recommended to use a regular USB power adapter for power supply, with specifications of 5V2A (2000mA).

Current lower than 2A may affect the product's function.

Using non-standard power adapters for power supply is prohibited.

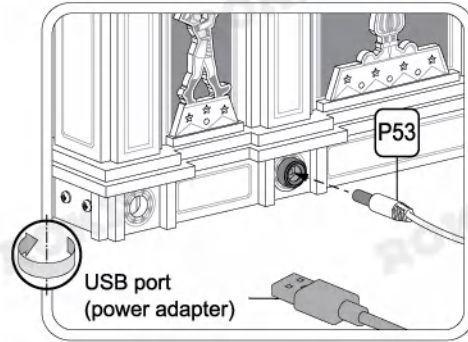

D. Left falling down point

1. Test whether the points of tracks A, B and D can sense the passing of the ball. (If there is no problem, there is a music prompt, and the score light is on). Sweep over Point A with your fingers at a distance of about 5mm from the infrared detection point.
2. Send the steel ball to the ball-hitting sensor area C to test if the ball can be hit and bounced out by the electromagnetic ball-hitter.
3. Check if the 6 energy value lights are on. Besides, check if 1 mark record light is off when the steel ball falls from judgment point E.
4. Test the background music switch.

Solutions:

1. Check if the plug and the internal terminal connector are installed properly.
2. Check if the USB charger satisfies the product's need.
3. Check if the terminal at the fault location is installed according to the instructions and if the terminal is not fully inserted or inserted reversely.

B. Top track point

C. Ball-hitting sensor area

Note: To improve its sensing accuracy, this product uses infrared sensors. Please do not use it in the sun.



P.S.: When the sunlight is strong, using it under the semi-shading curtain will also be interfered with. (The score and light are disordered during interference and cannot be used normally)

F. Energy value

A. Right falling down point

E. Judgment point

Background music switch

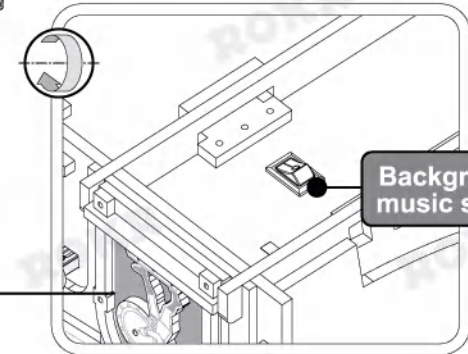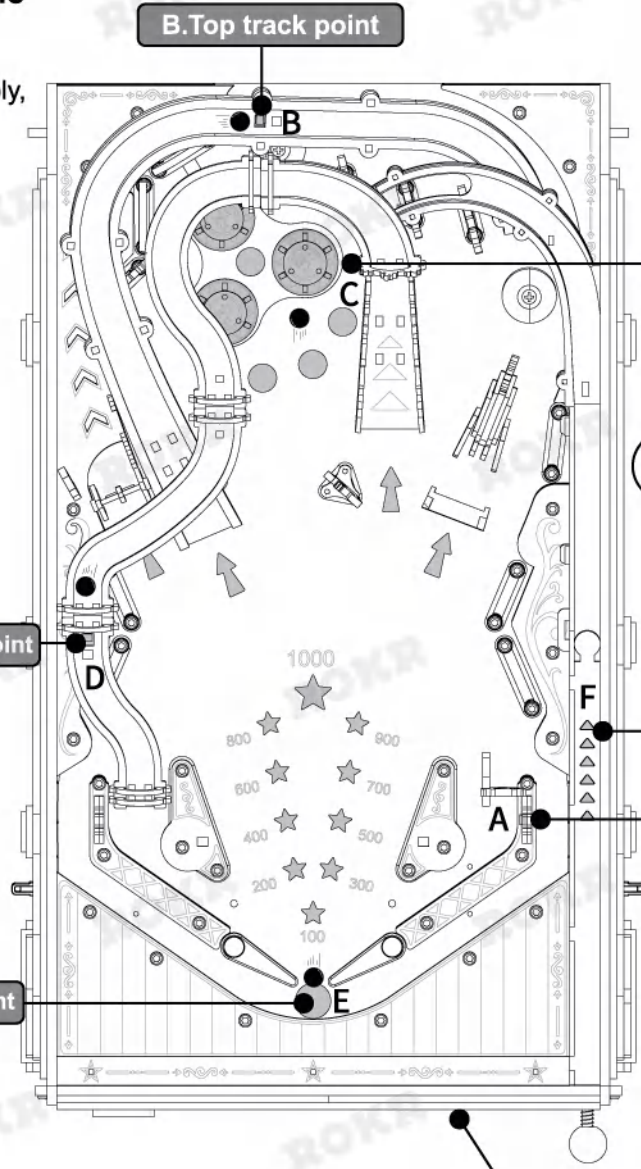

K7

L1



L2 x2

L7 x2

L9 x2




Suggest to press with the tool **K7**.

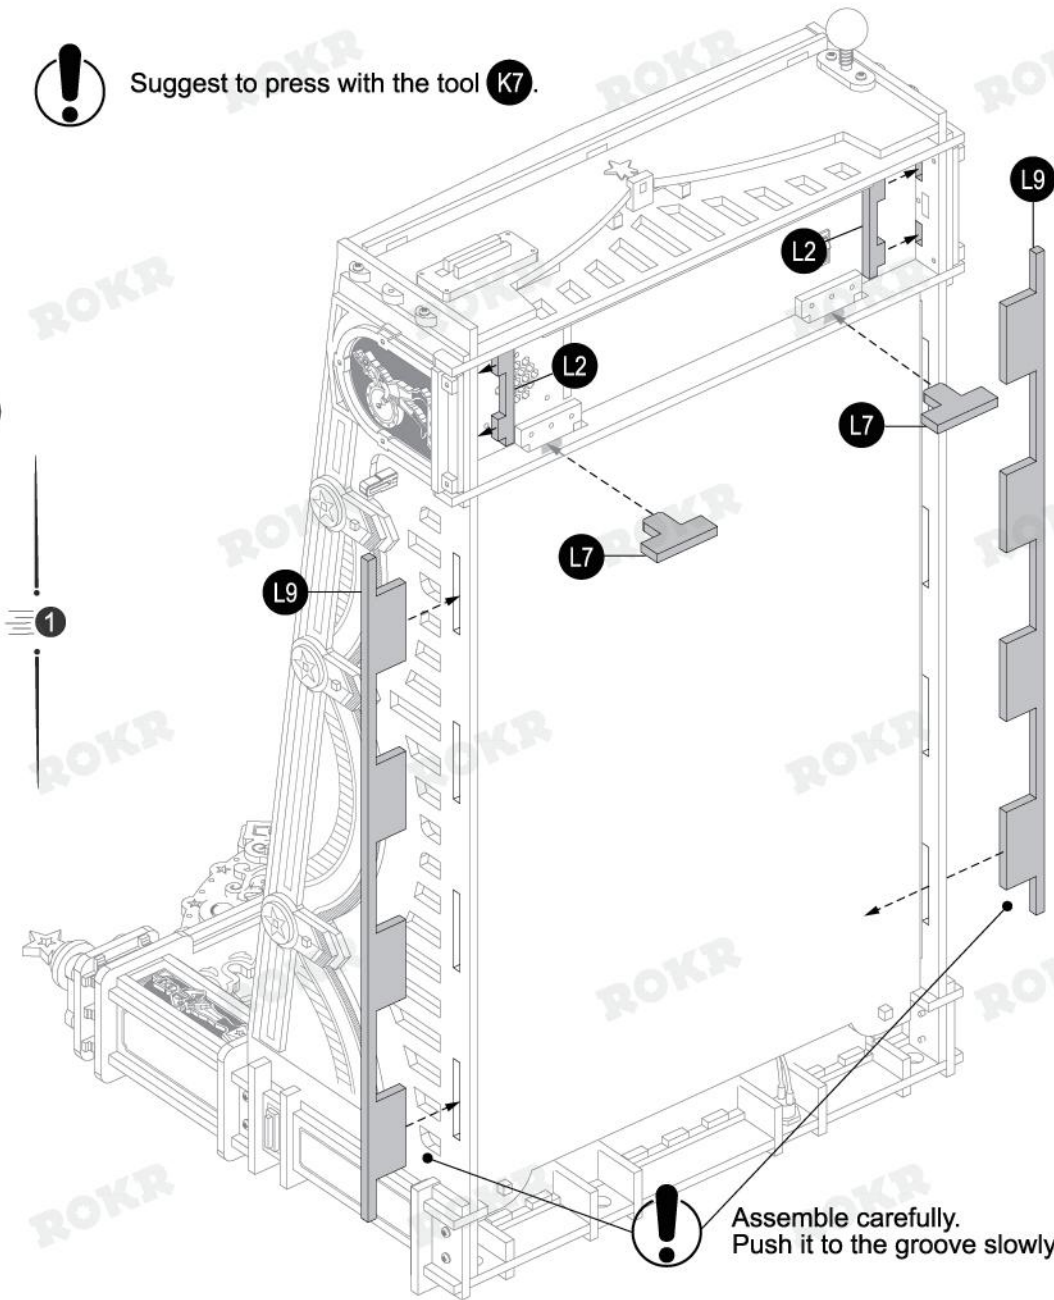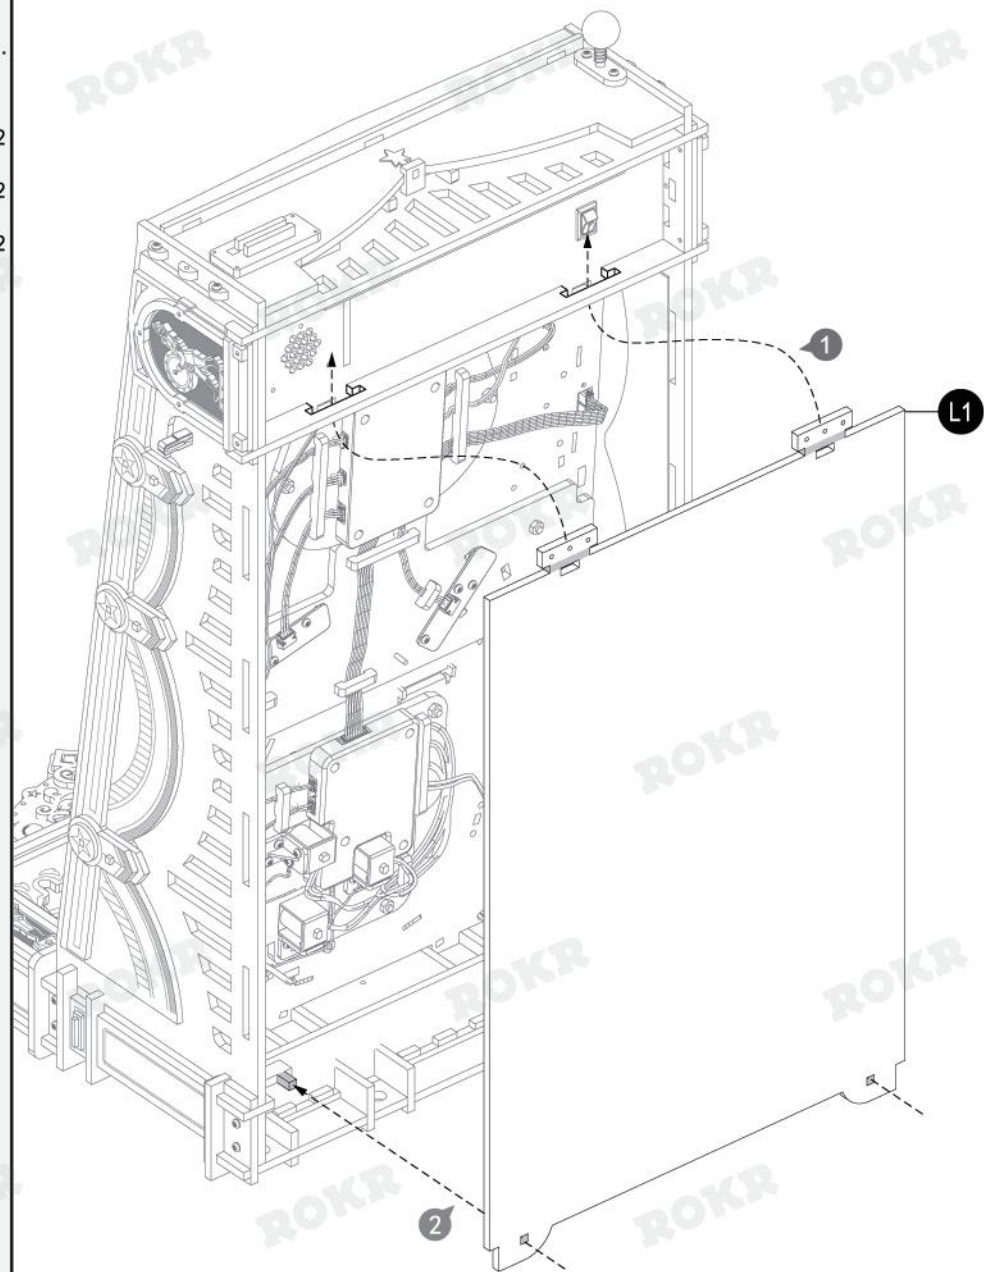


Assemble carefully.
Push it to the groove slowly.


- C21 x2
- F23 x2
- J9 x2
- 3 P24 x2

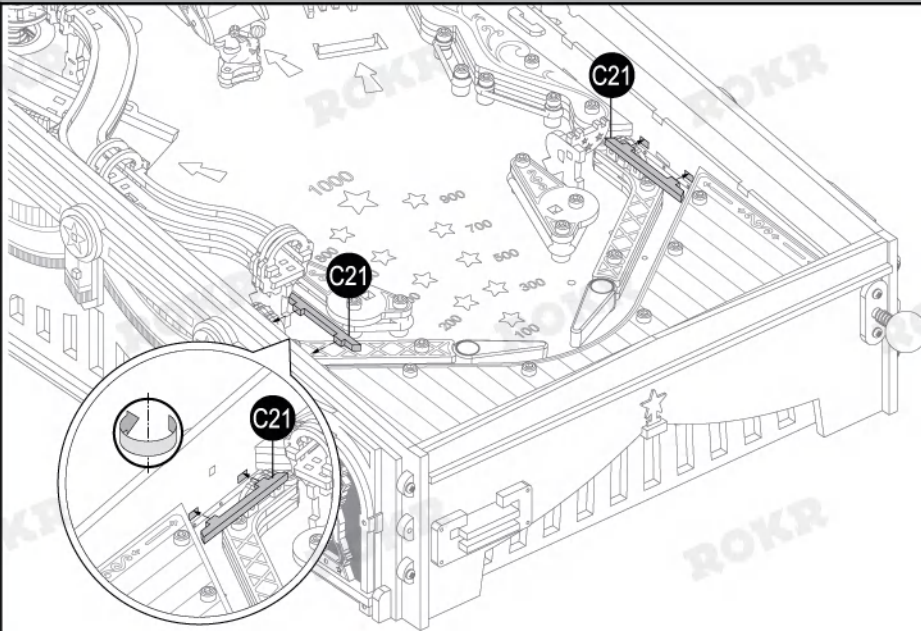

1

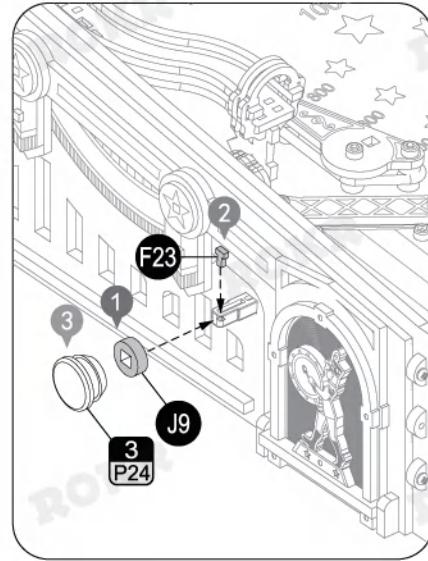


2

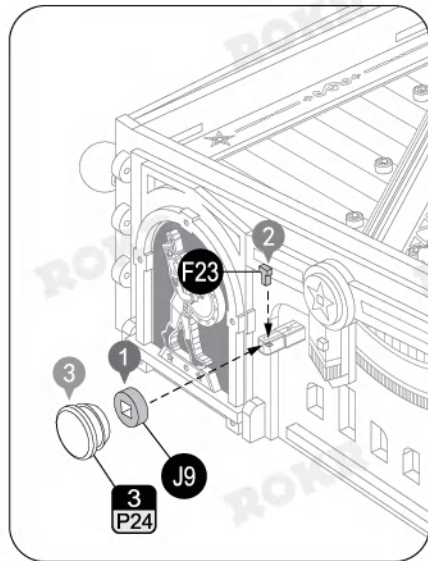

15


- F12
- F15
- F35
- F36

! The bending part F35 is easy to break down. Assemble carefully.

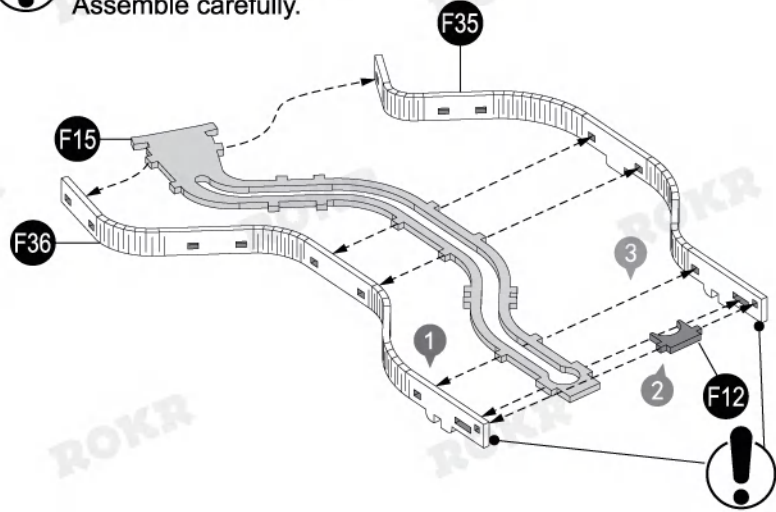

3

Assemble this end of F35 F36 firstly to prevent fracture.

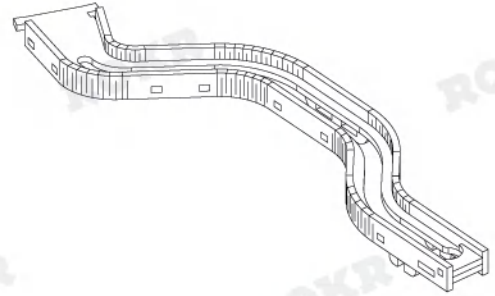


F32 x2

F38

F41 x2



F43



F44


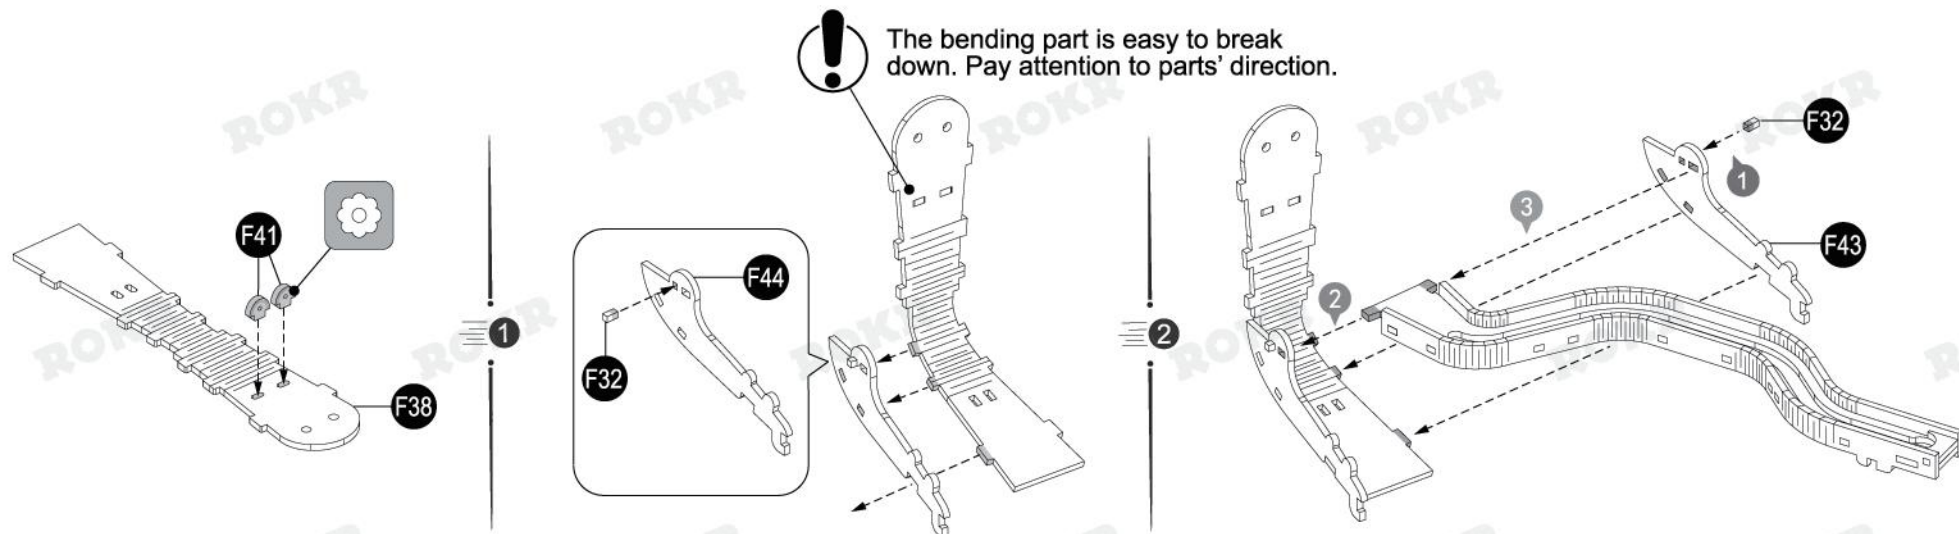


F45

F46

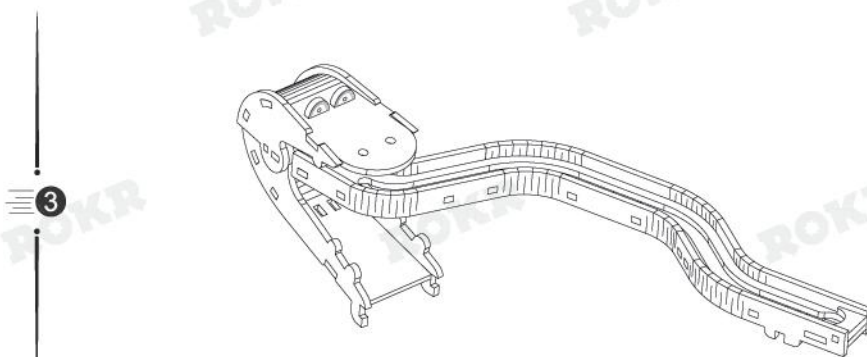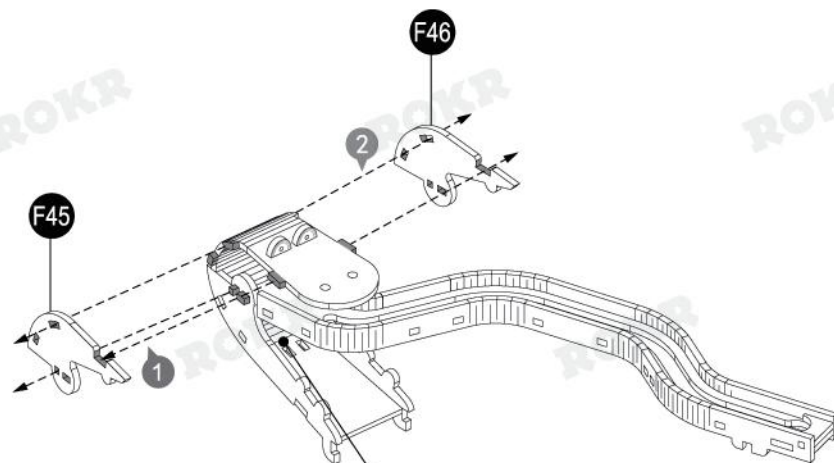

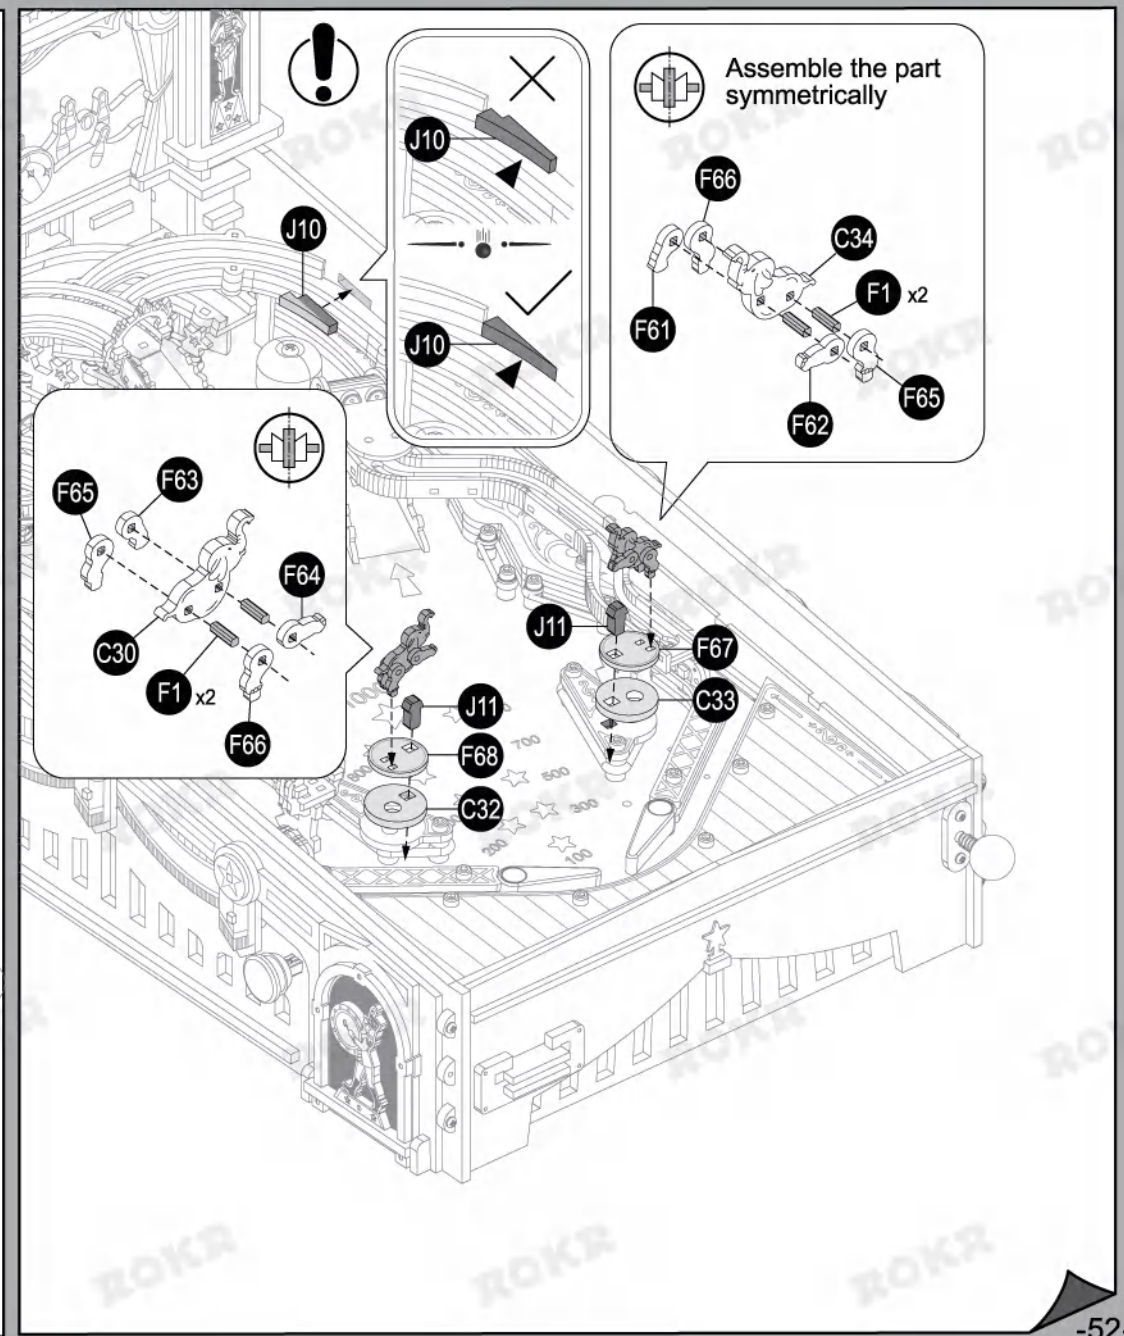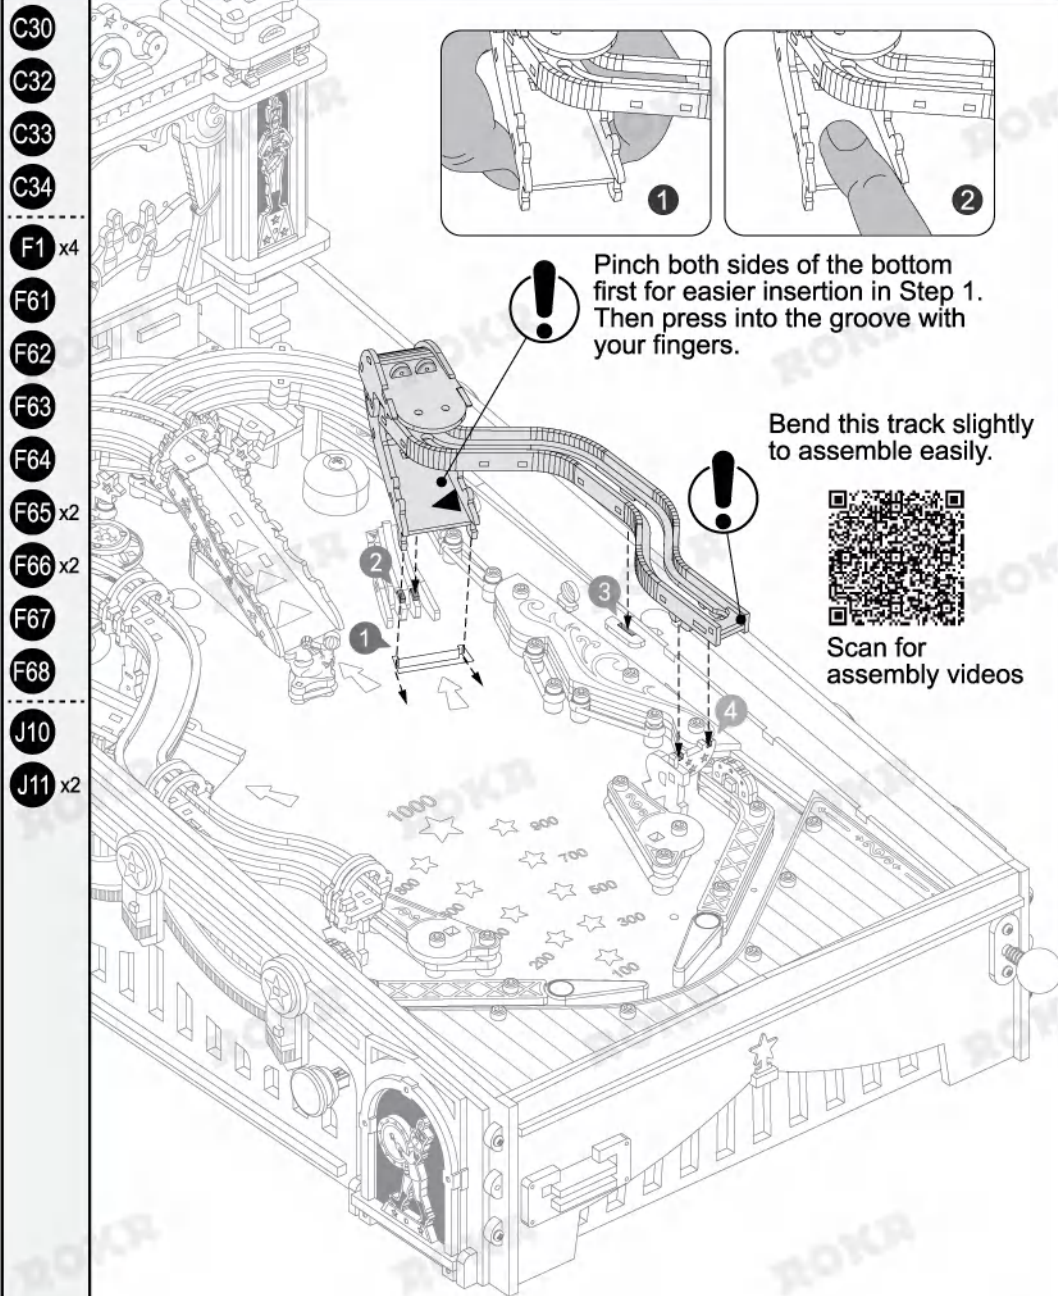


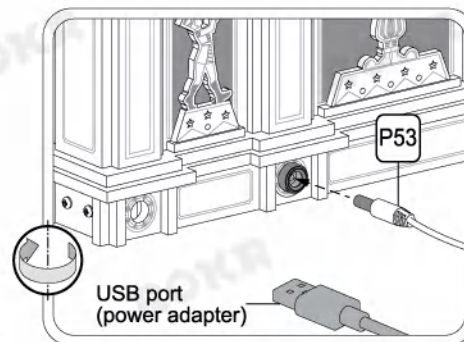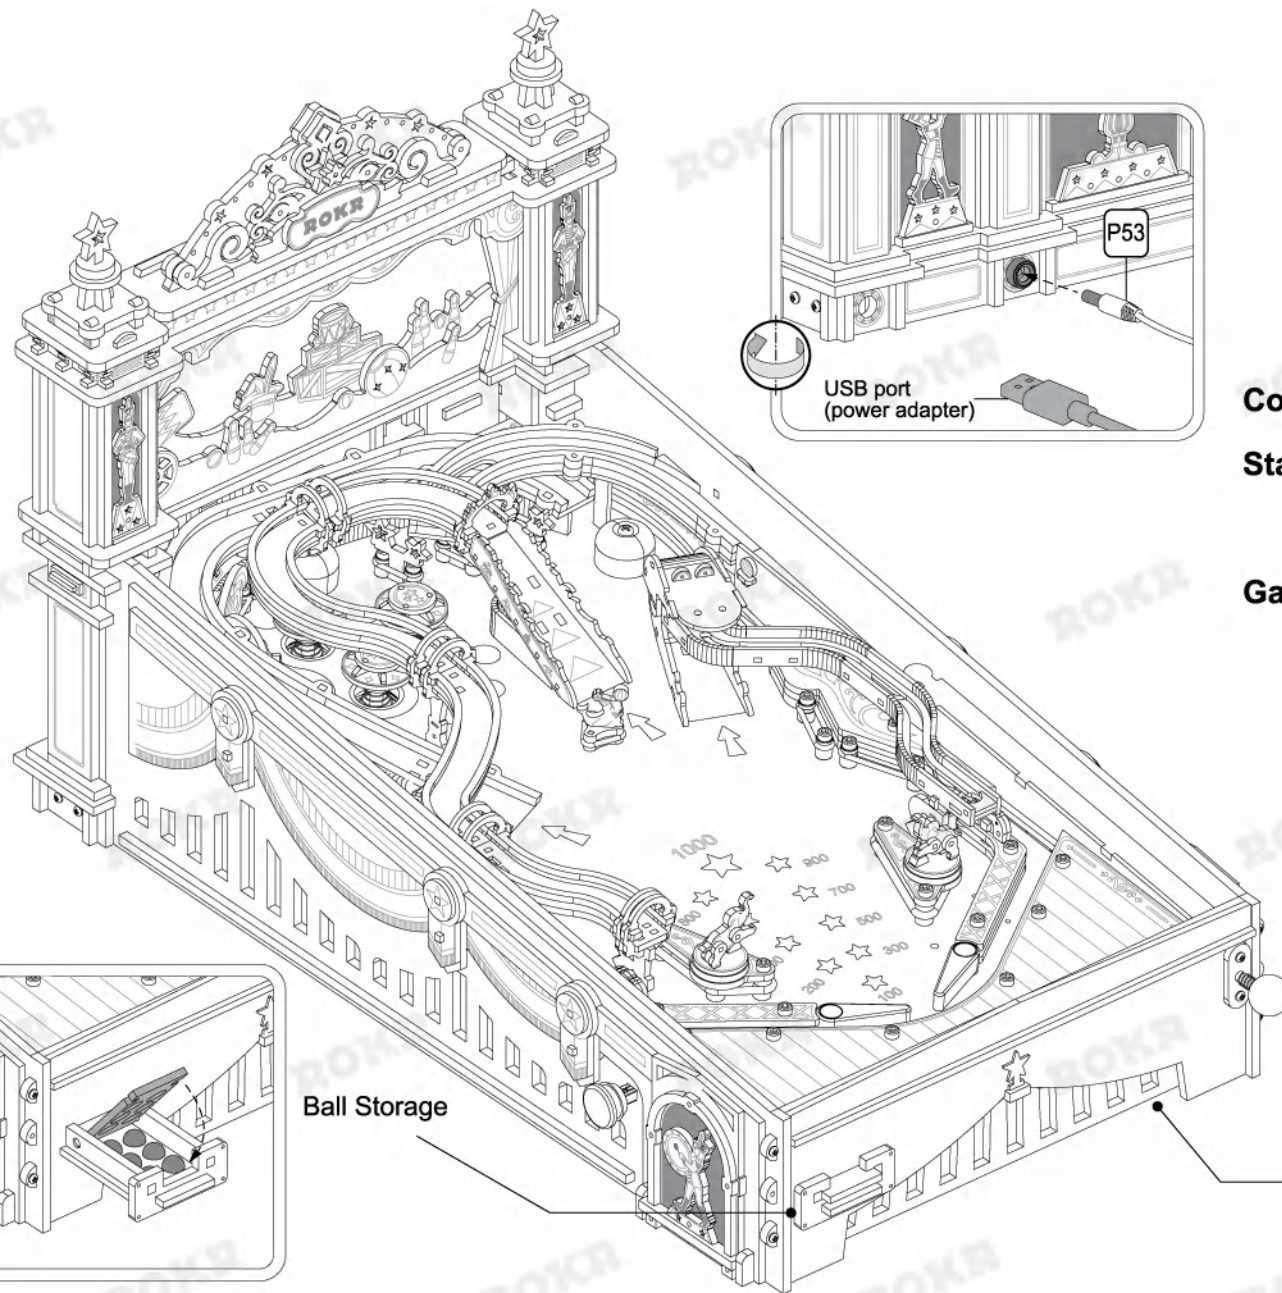


Completed

Start: Insert the USB connector of the power cord into the power adapter, and then plug the other end into the power input port.

Game rule: pull the launching pin to launch the ball to the playfield, and press the left and right hitting arm buttons to hit the steel ball. Through the ball-hitter, climb onto the track to get as many points as possible.

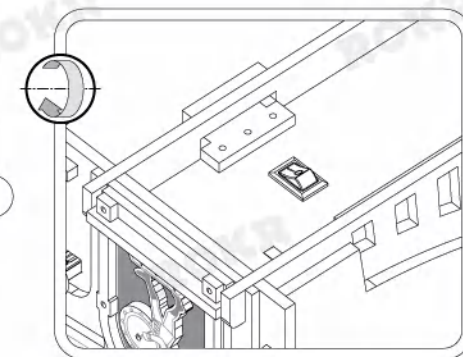


Sound off/on: select whether to play the background music according to the environment.

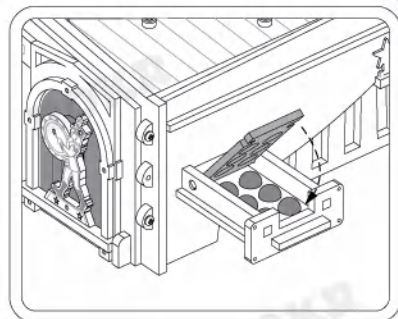


Ball Storage


Overall Arrangement:

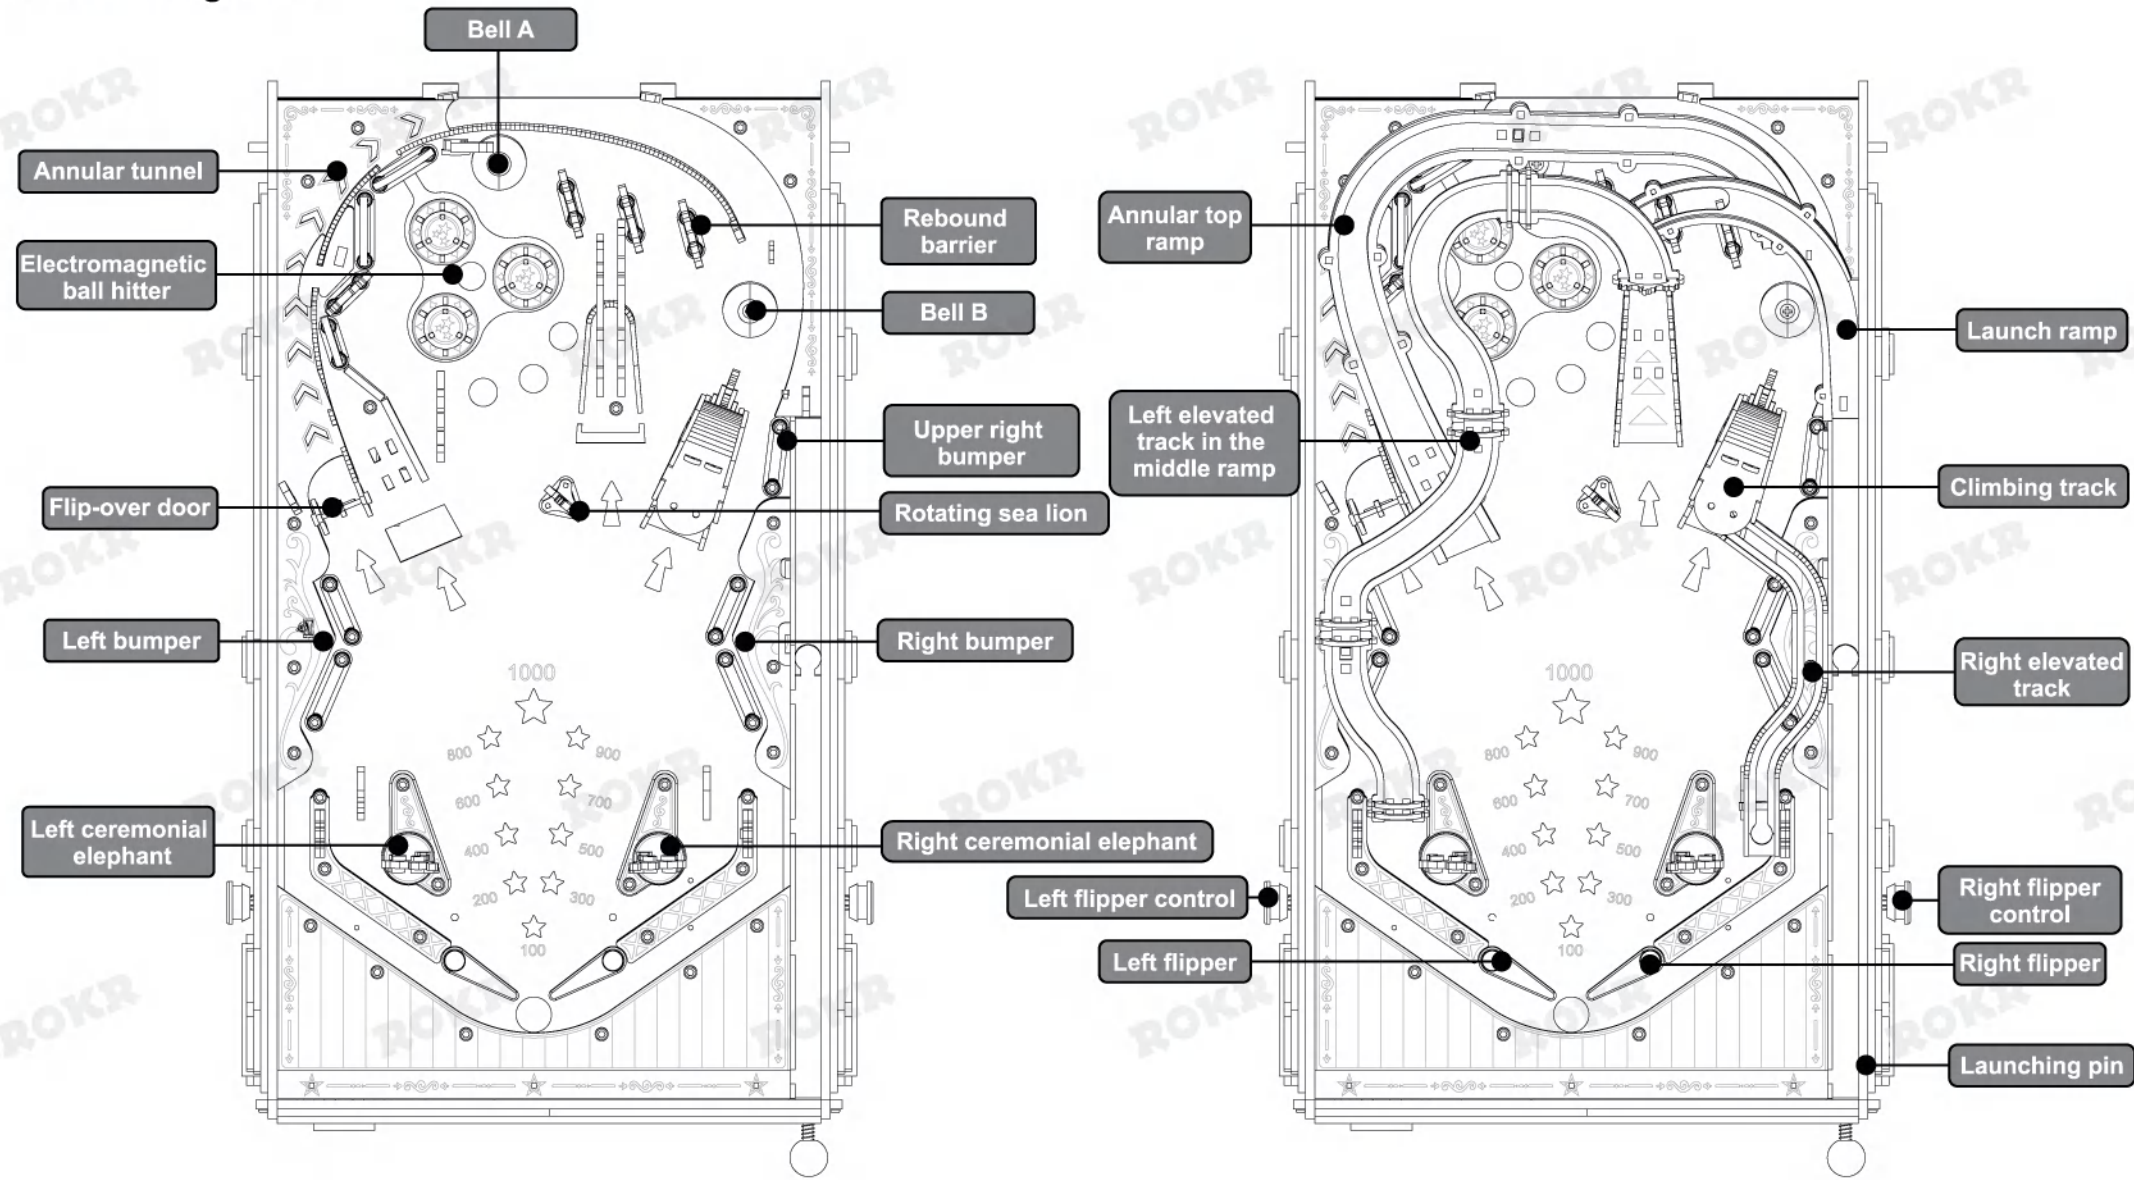

Track Map:

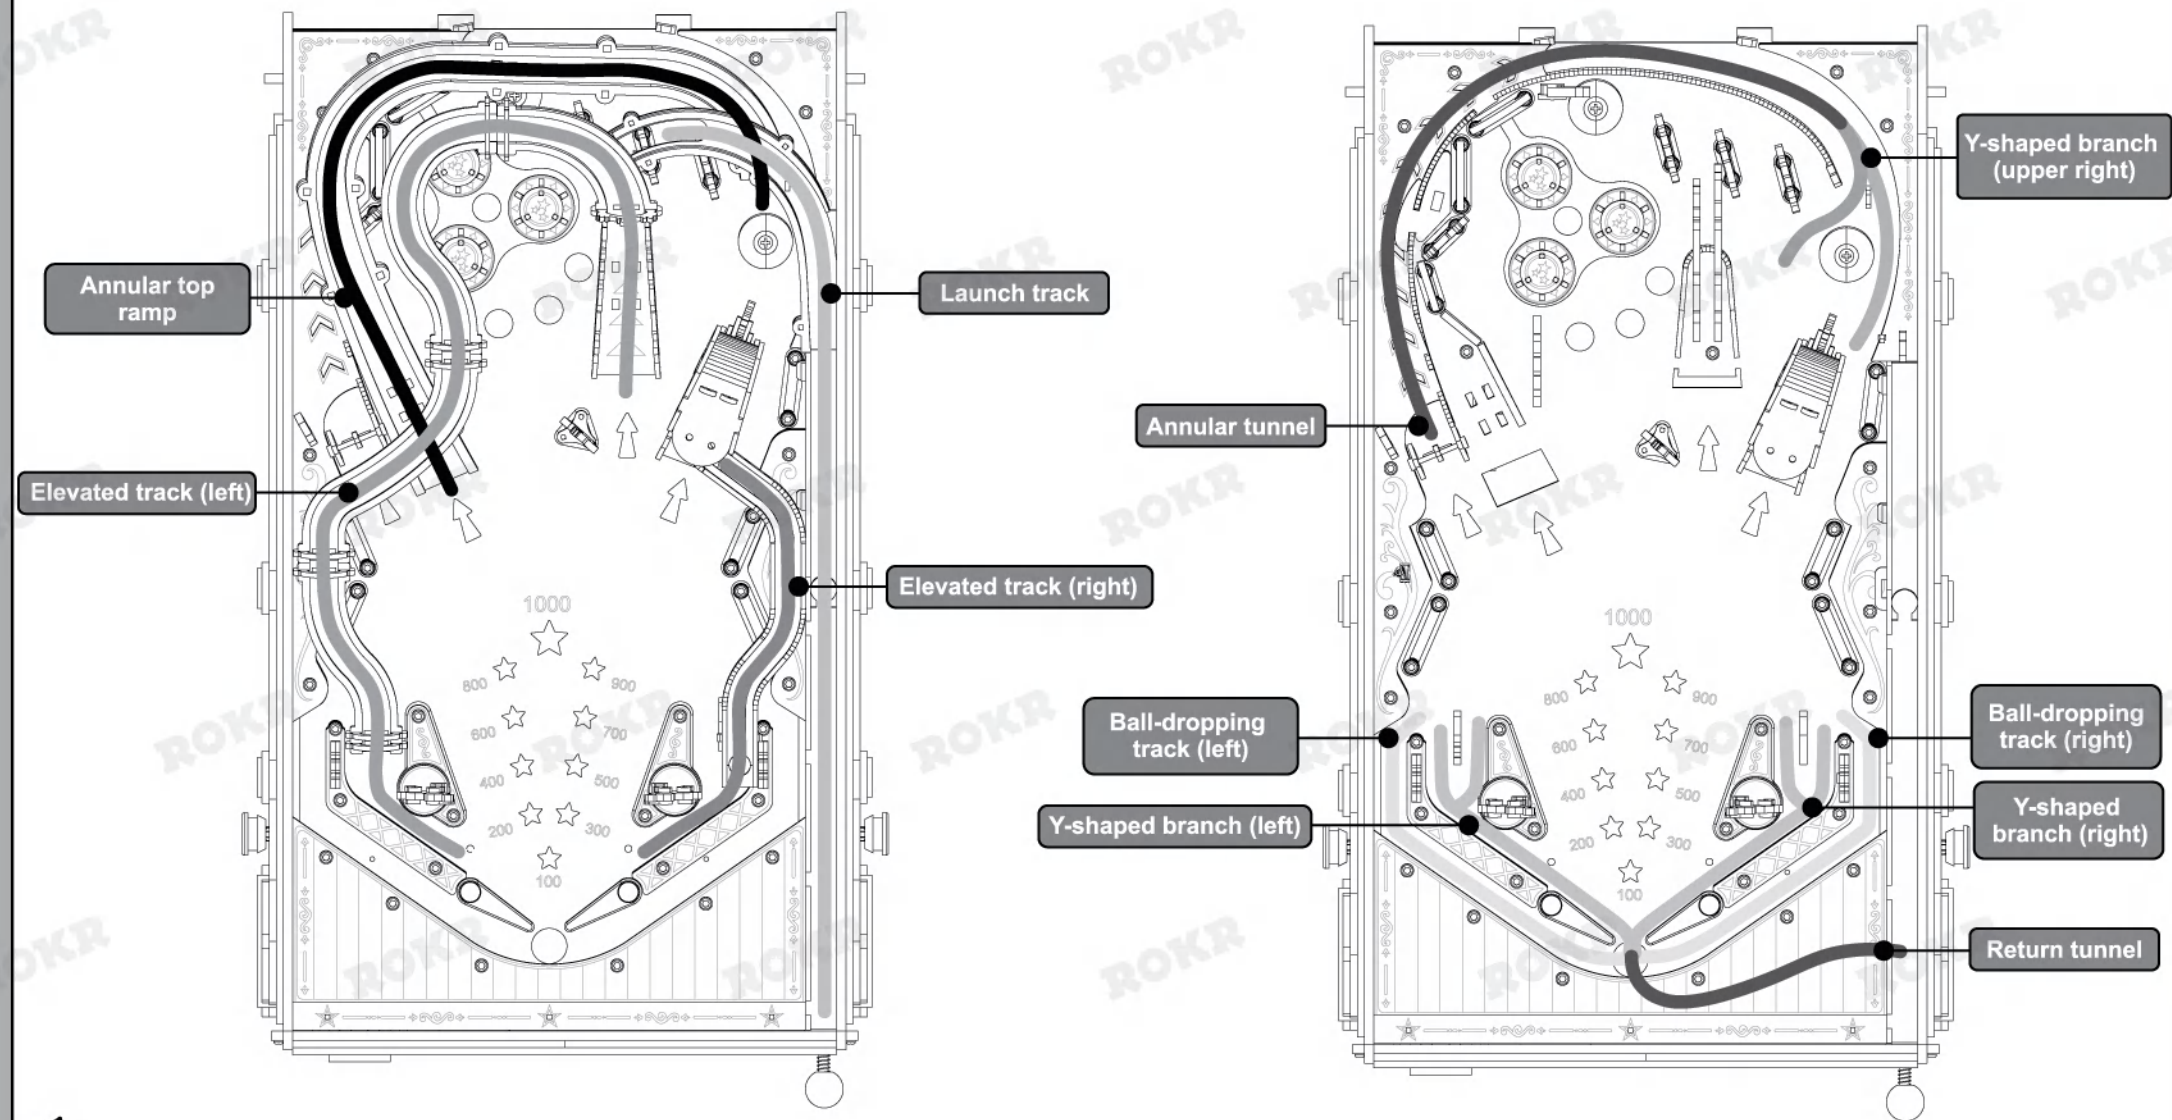

Scoring Positions & Rules:

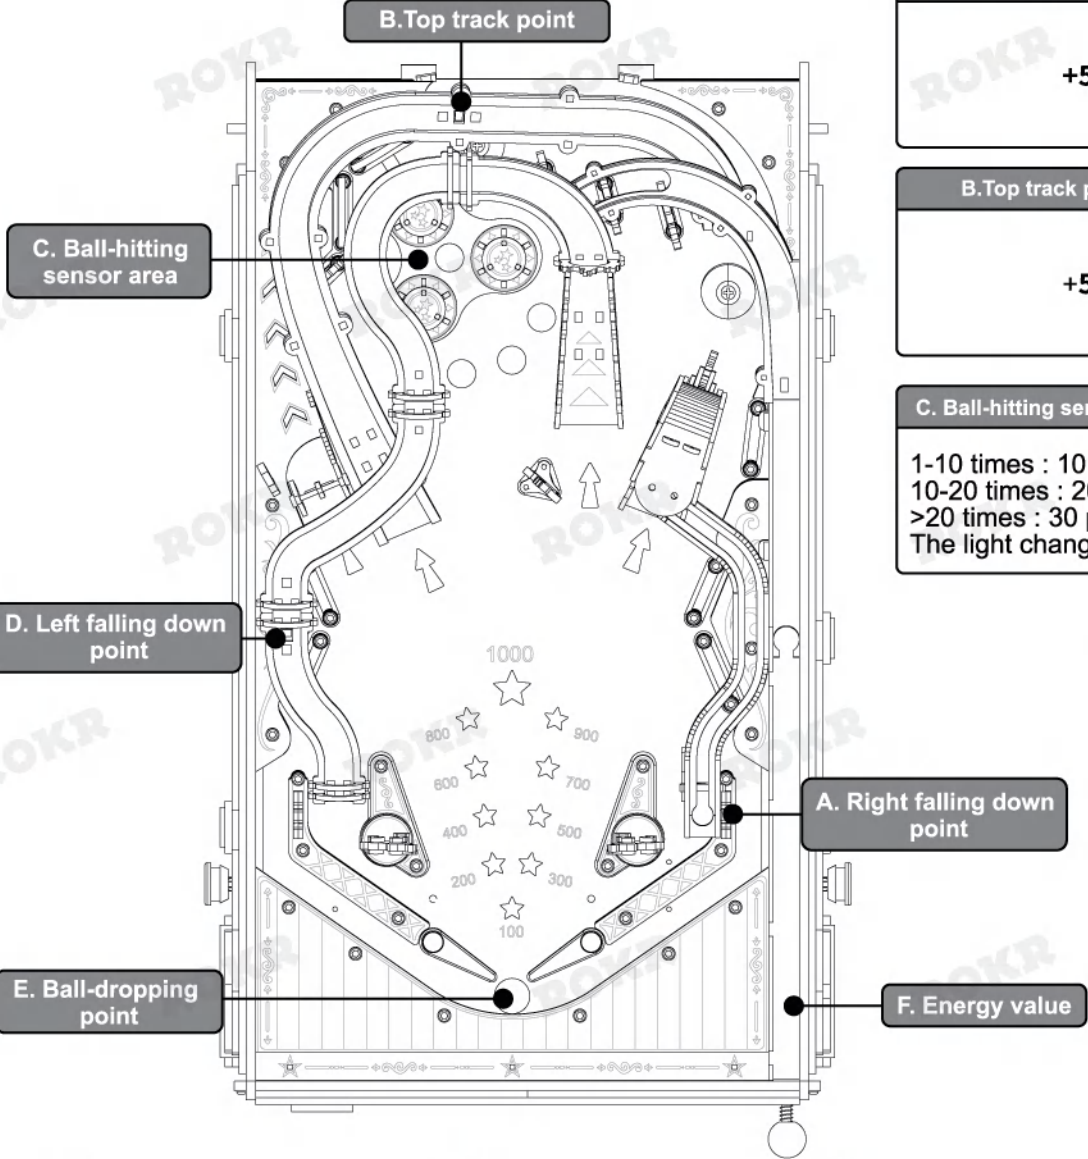


A. Right falling down point	D. Left falling down point
+50	+100
B.Top track point	E. Dropping ball point
+50	Energy -1
C. Ball-hitting sensor area	F. Energy value
1-10 times : 10 points. 10-20 times : 20 points >20 times : 30 points The light changes color as the scores.	Energy value starts from "6".

Attention

- 1. It is recommended to use a regular USB power adapter for power supply, with specifications of 5V2A (2000mA). Current lower than 2A may affect the product's function (using non-standard power adapters for power supply is prohibited).
- 2. If the electronic parts are not responsive or not sensitive, please open the back cover, and replug to observe whether the interface is loose or not installed in place.
- 3. In the movement process, the steel ball occasionally stops and gets stuck. You can shake it slightly to return to normal.

Lighting position:

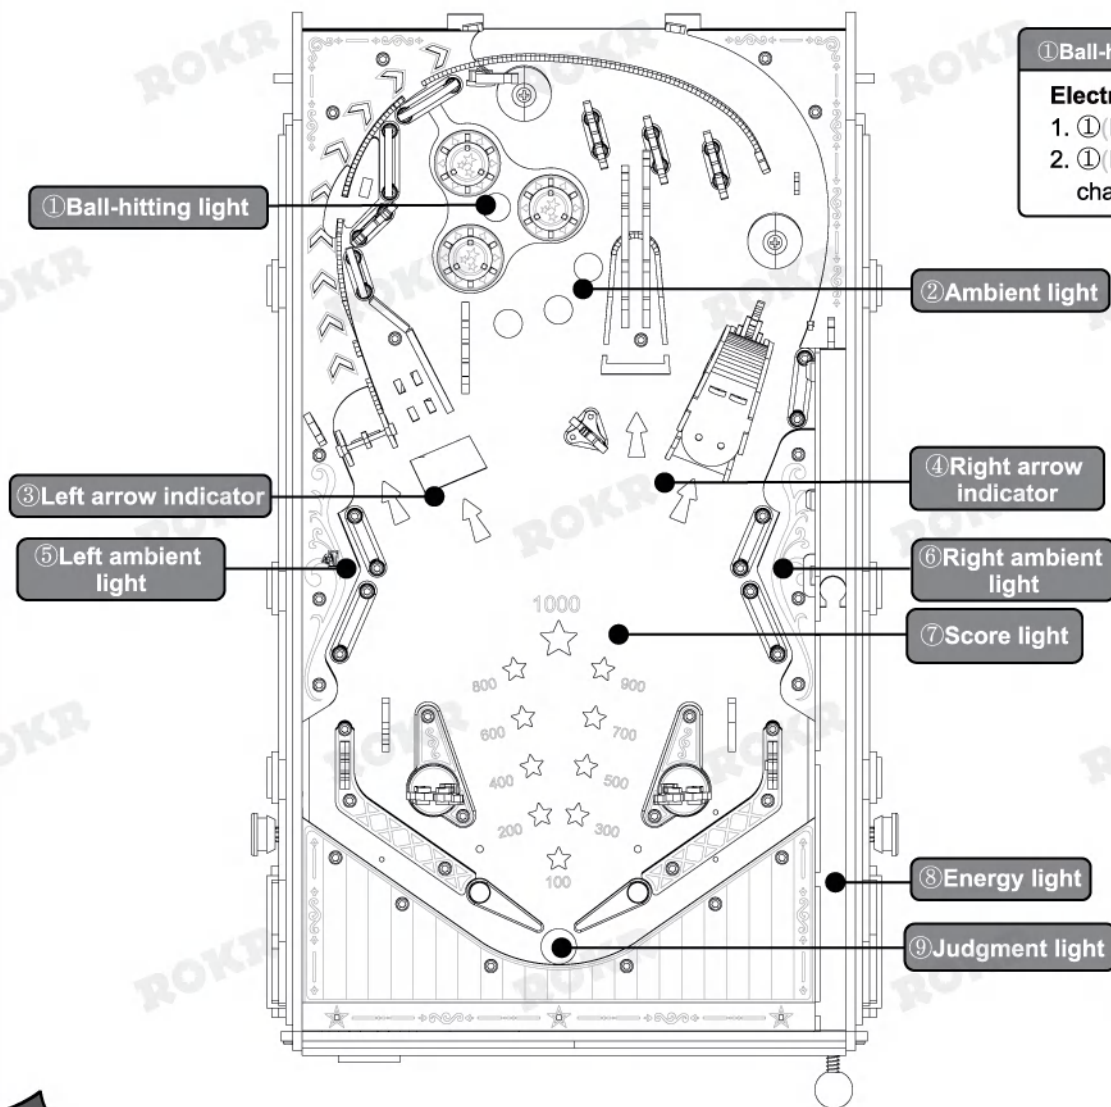

①Ball-hitting light + ②Ambient light + ③Left arrow indicator + ④Right arrow indicator

Electromagnetic ball-hitting lighting:

- ① (Ball-hitting light) Breathing light
- ① (Ball-hitting light) , ② (Ambient light) Hit the ball to the specified times, here is strobe and color changing;

⑤Left ambient light + ⑥Right ambient light

Left & right ambient light

- Always on when starting;
- When the ball passes through sensing point A, it will go out; when it passes through sensing point B or D, it will be on again.

⑦Score light

Score lighting:


- When the points reach the hundreds, the corresponding light will be on; (Only hundreds are displayed here)
- When the full score is reached, the full mark lighting effect will be displayed.
- After six balls fail completely, there will be a failure light effect. Then, it will flash to display the score obtained (only hundreds will be displayed here).

⑧Energy light + ⑨Judgement light

Energy lighting:

- When switching on, ⑧ (Energy light) will be on from bottom to top twice, and then it is always on;
- After the ball passes ⑨ (Judgment light), ⑧ (Energy light) will go out in turn until all go out;

Detail & Function Display:

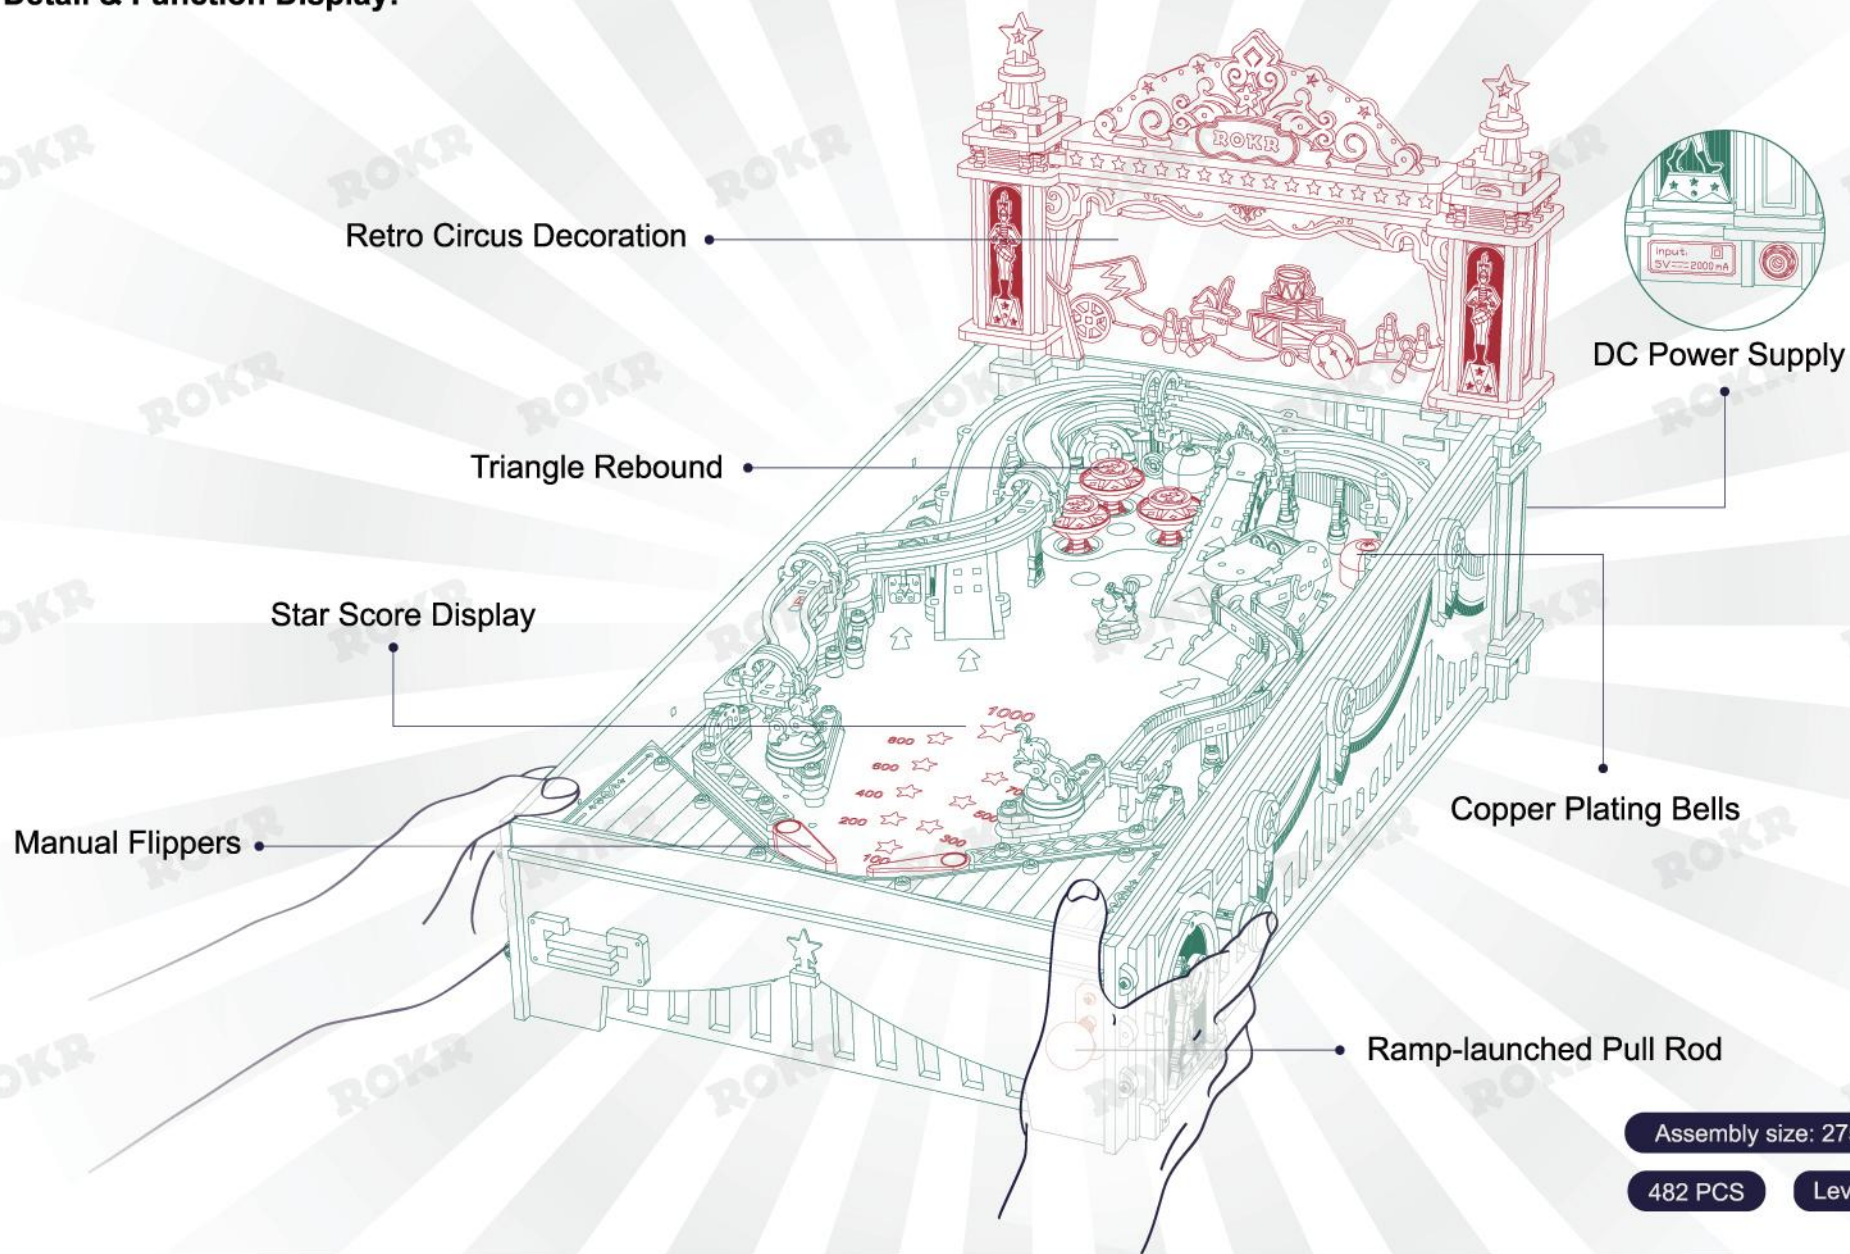

Assembly size: 275 x 475 x 280 MM

482 PCS

Level: ★★★★★★

3D PINBALL

★ Awaken The Collision Of Retro Pinballs ★

ROKR



Find us on Facebook & Youtube.
Visit www.robotime.com for more new designs.

49.1EG010.100