

Rolife

BOOK NOOK & WONDERLAND

• TGB11 SAKURA WINE ALLEY


Designed by **ROBOTIME**
www.robotime.com
MADE IN CHINA

49.1TGB11.100


Pictures for reference only. Please subject to our existing products.



Assembly Tips

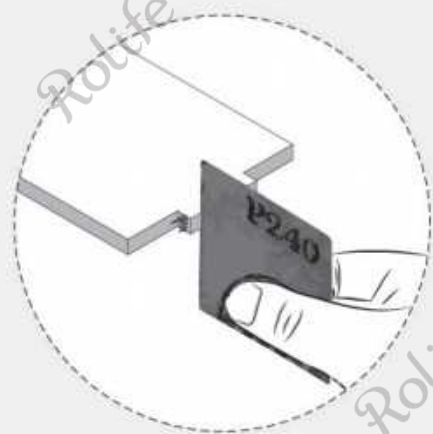

Polish the edges with sandpaper if there are burrs on pieces or it's hard to insert.

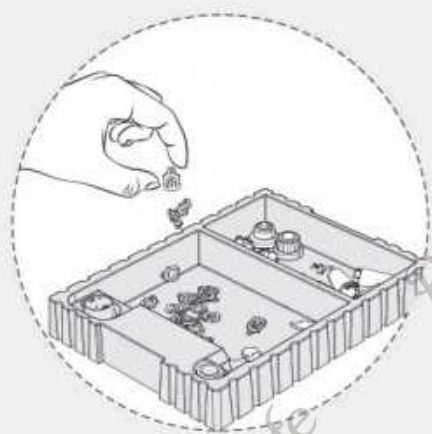


Put small parts into the box to prevent loss.



Remove the part by pressing its back to reduce burrs.


1

Blank side

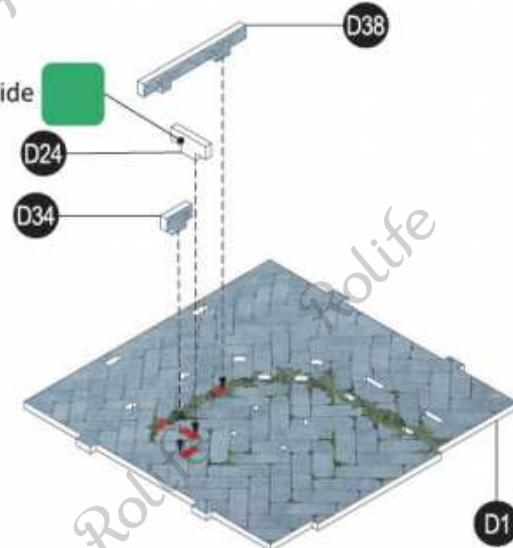


D7

D13

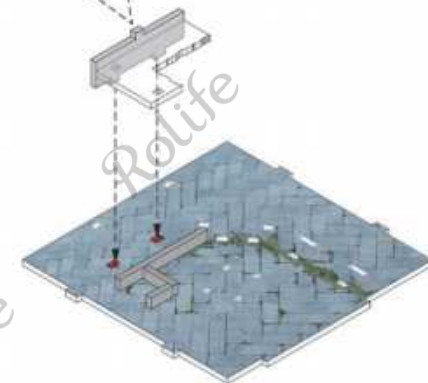


D12

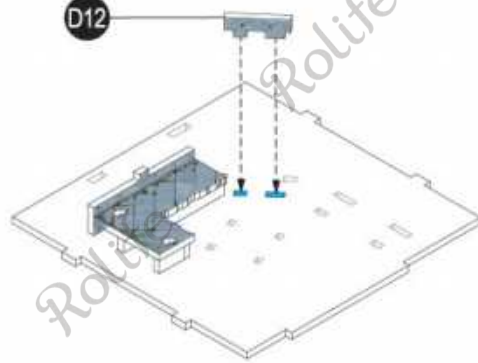


D37

D3

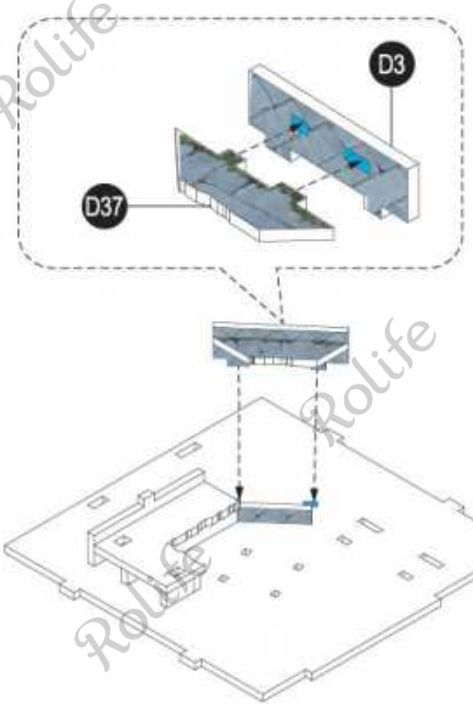




E15



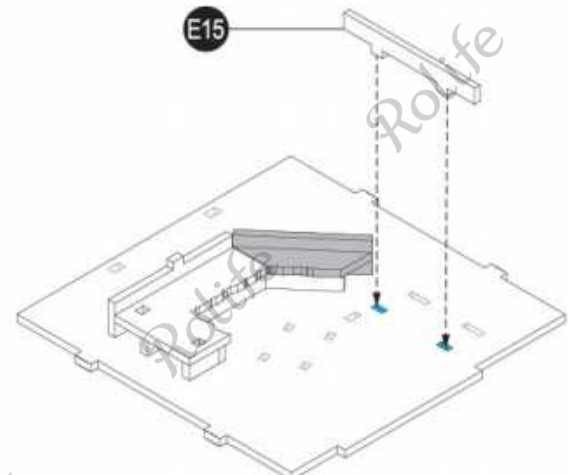






E7





E34




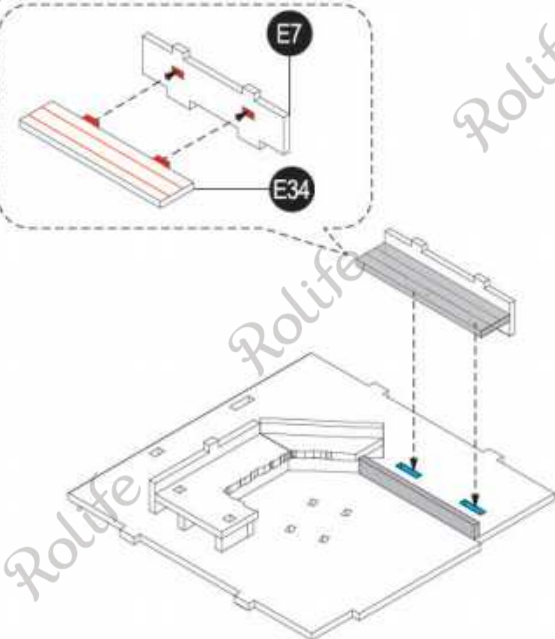




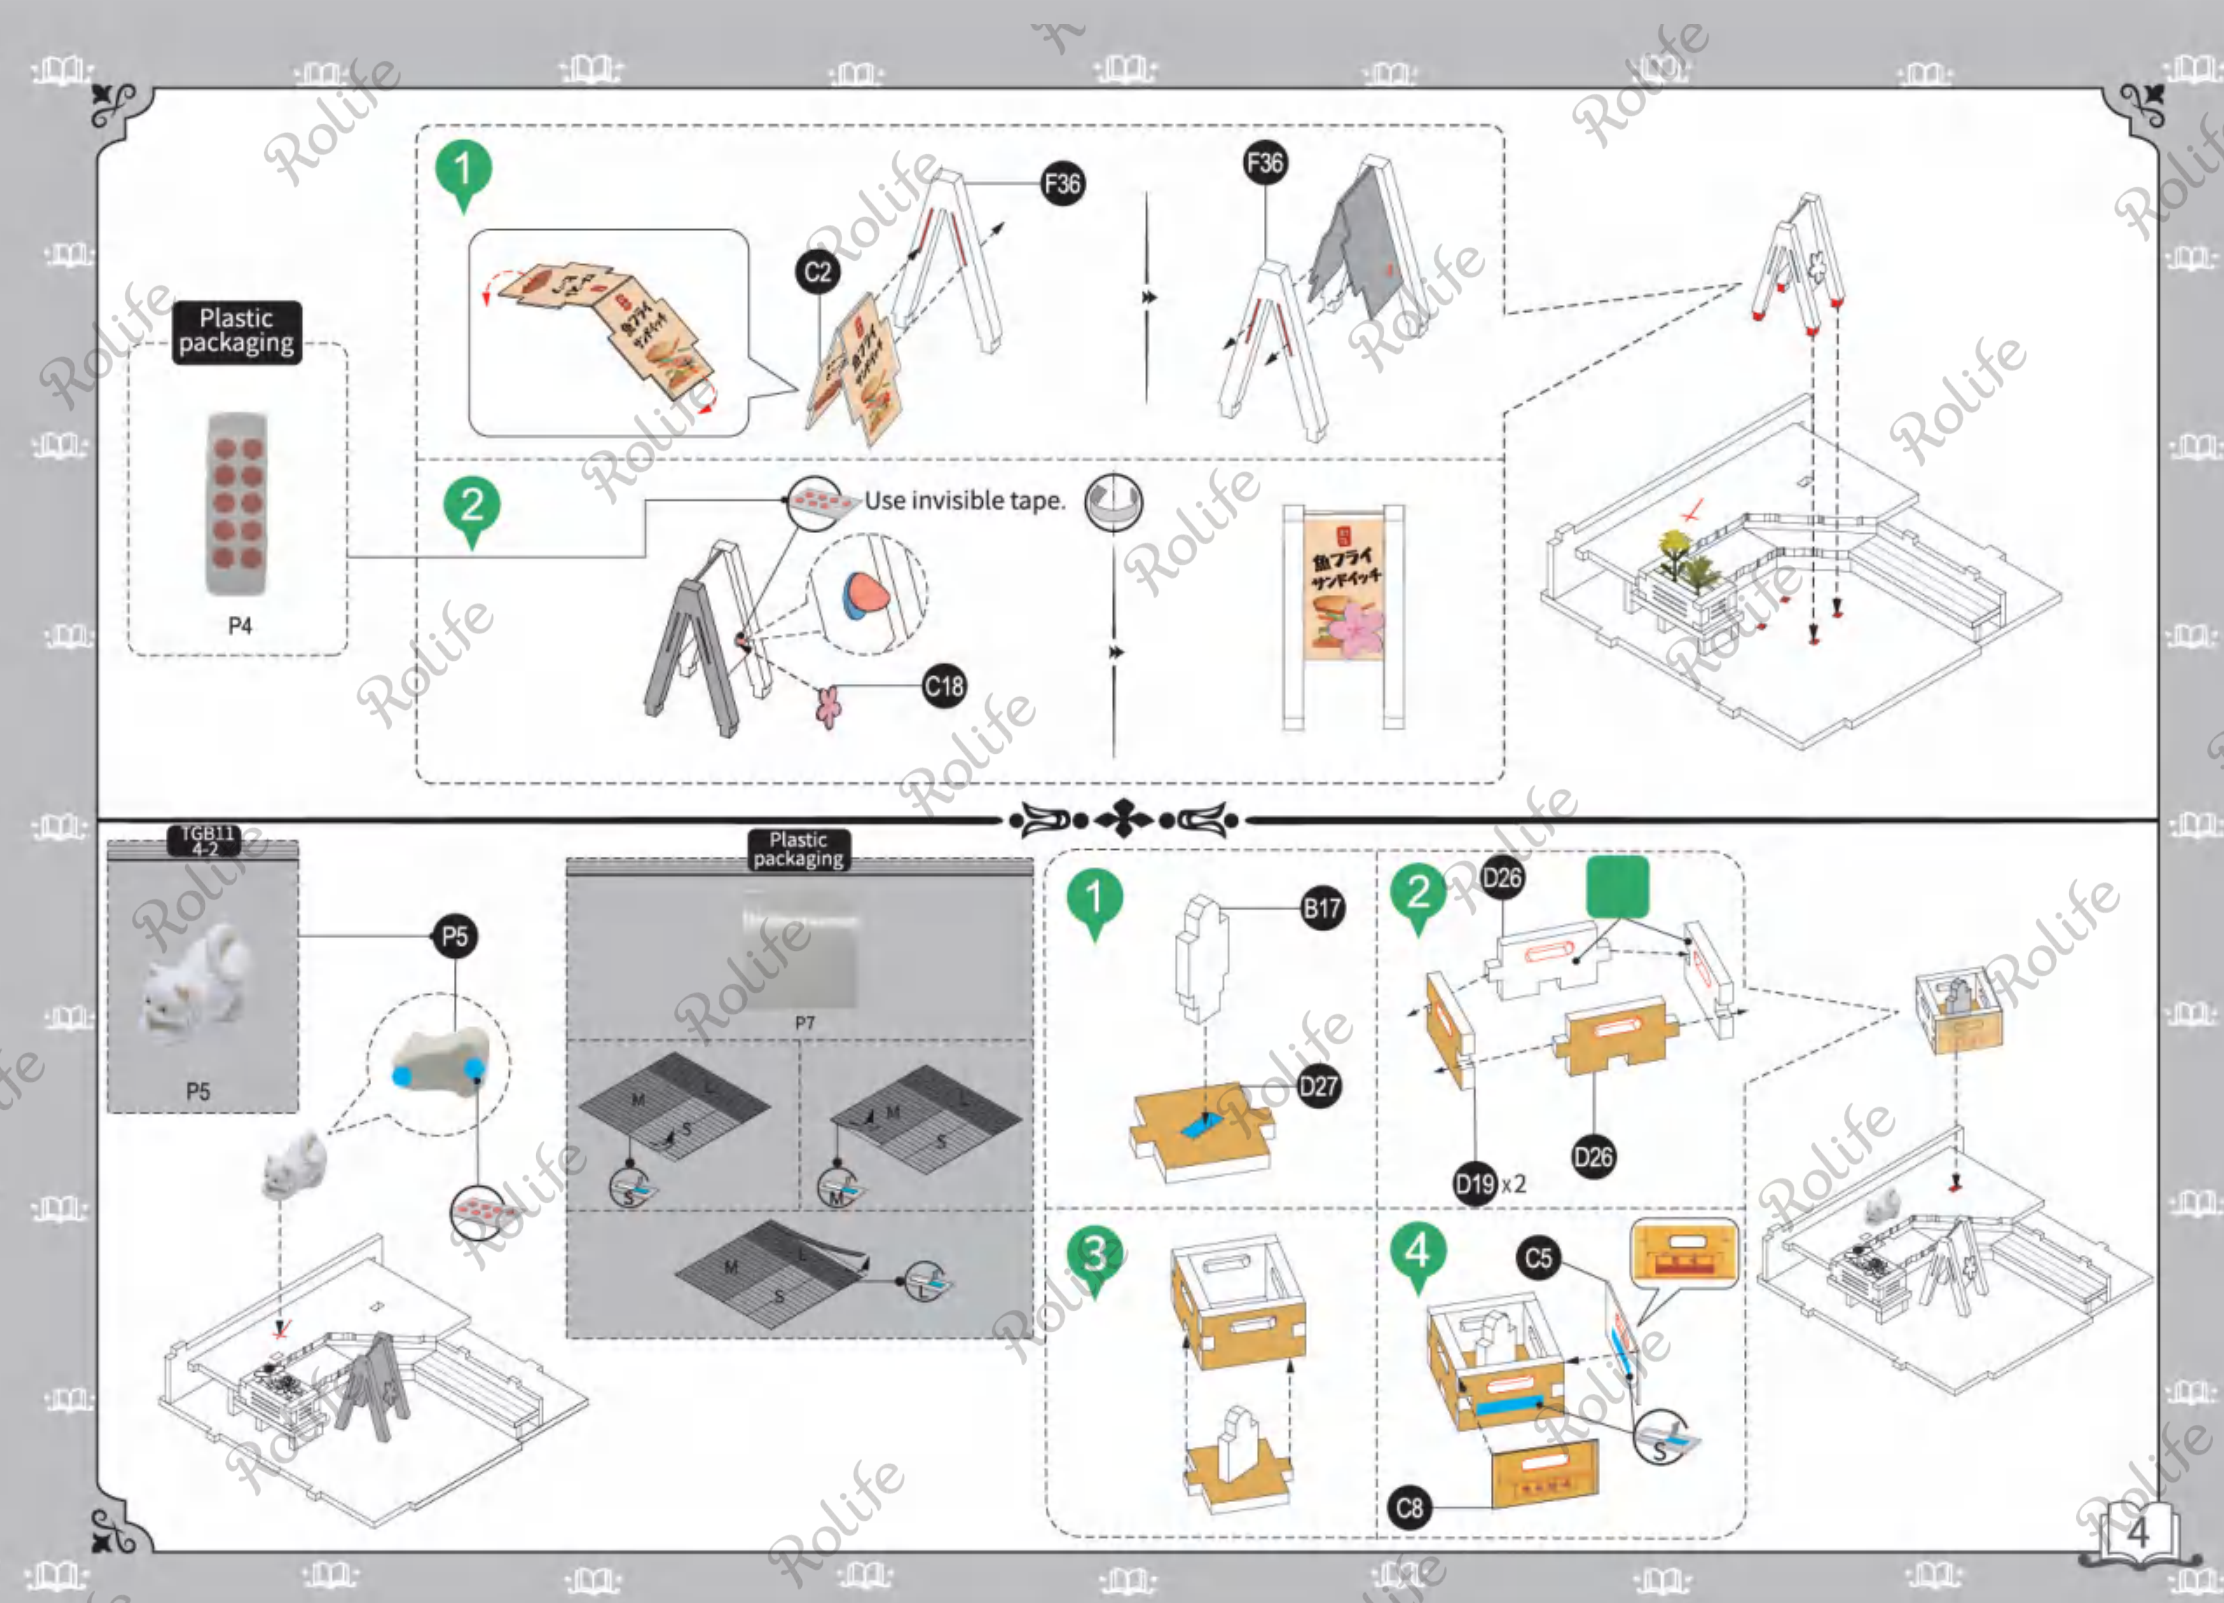
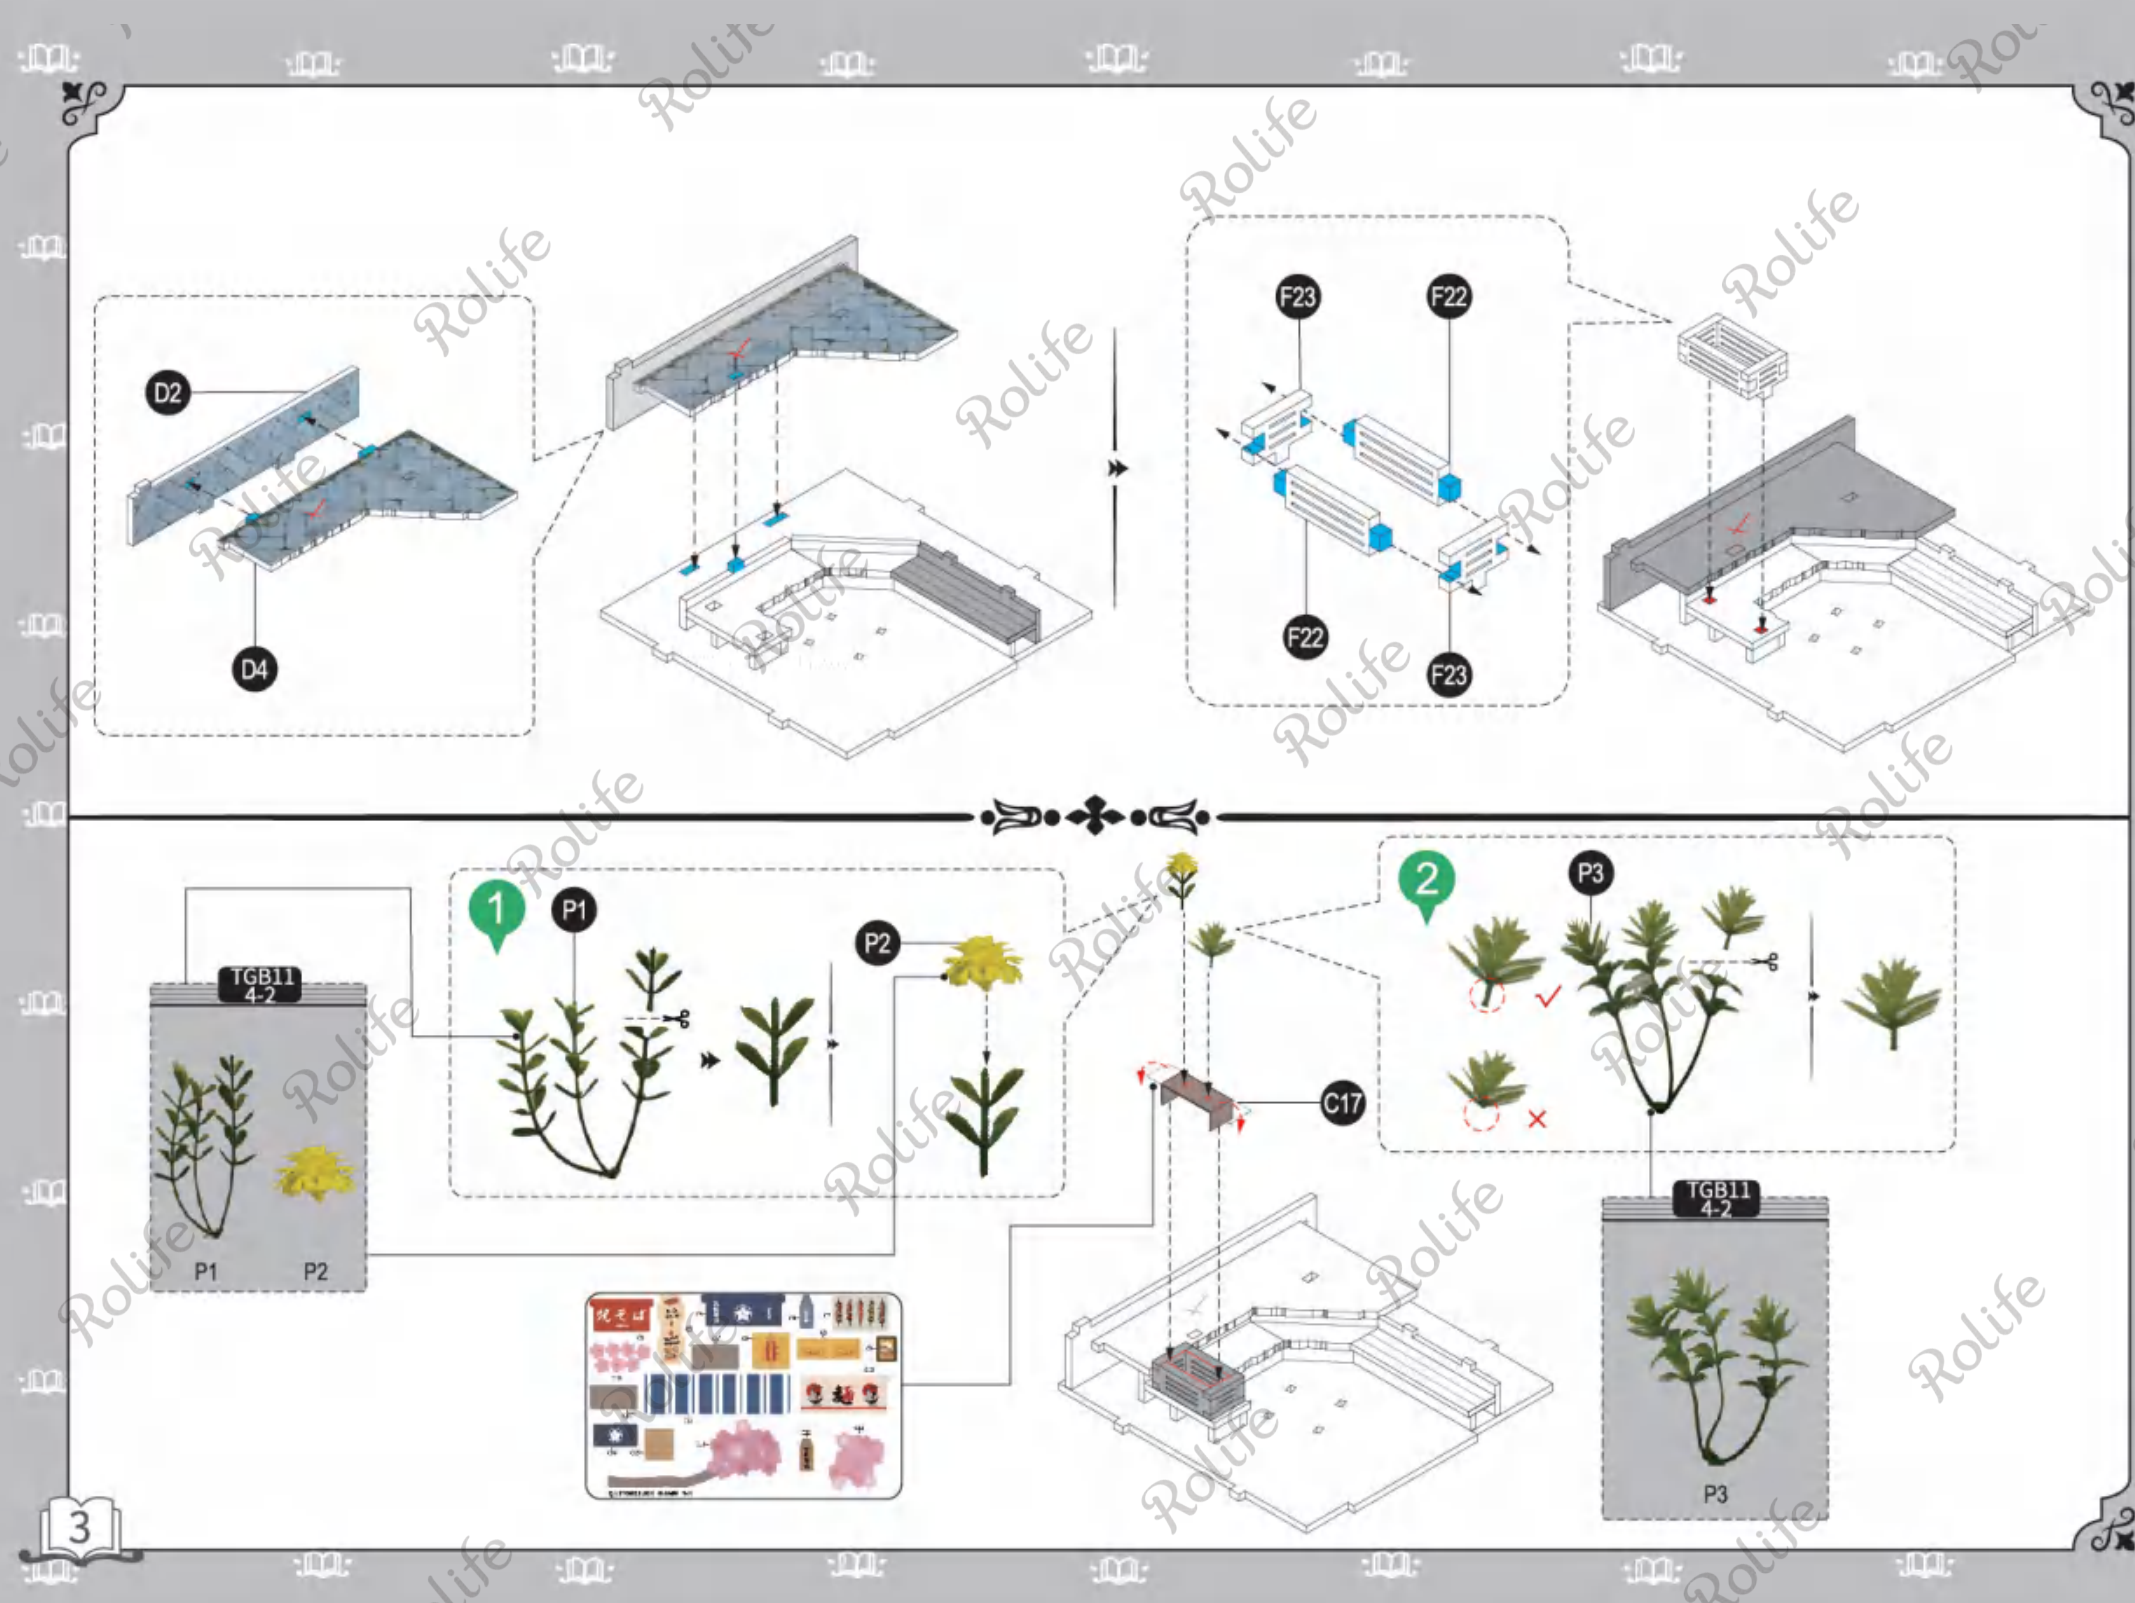



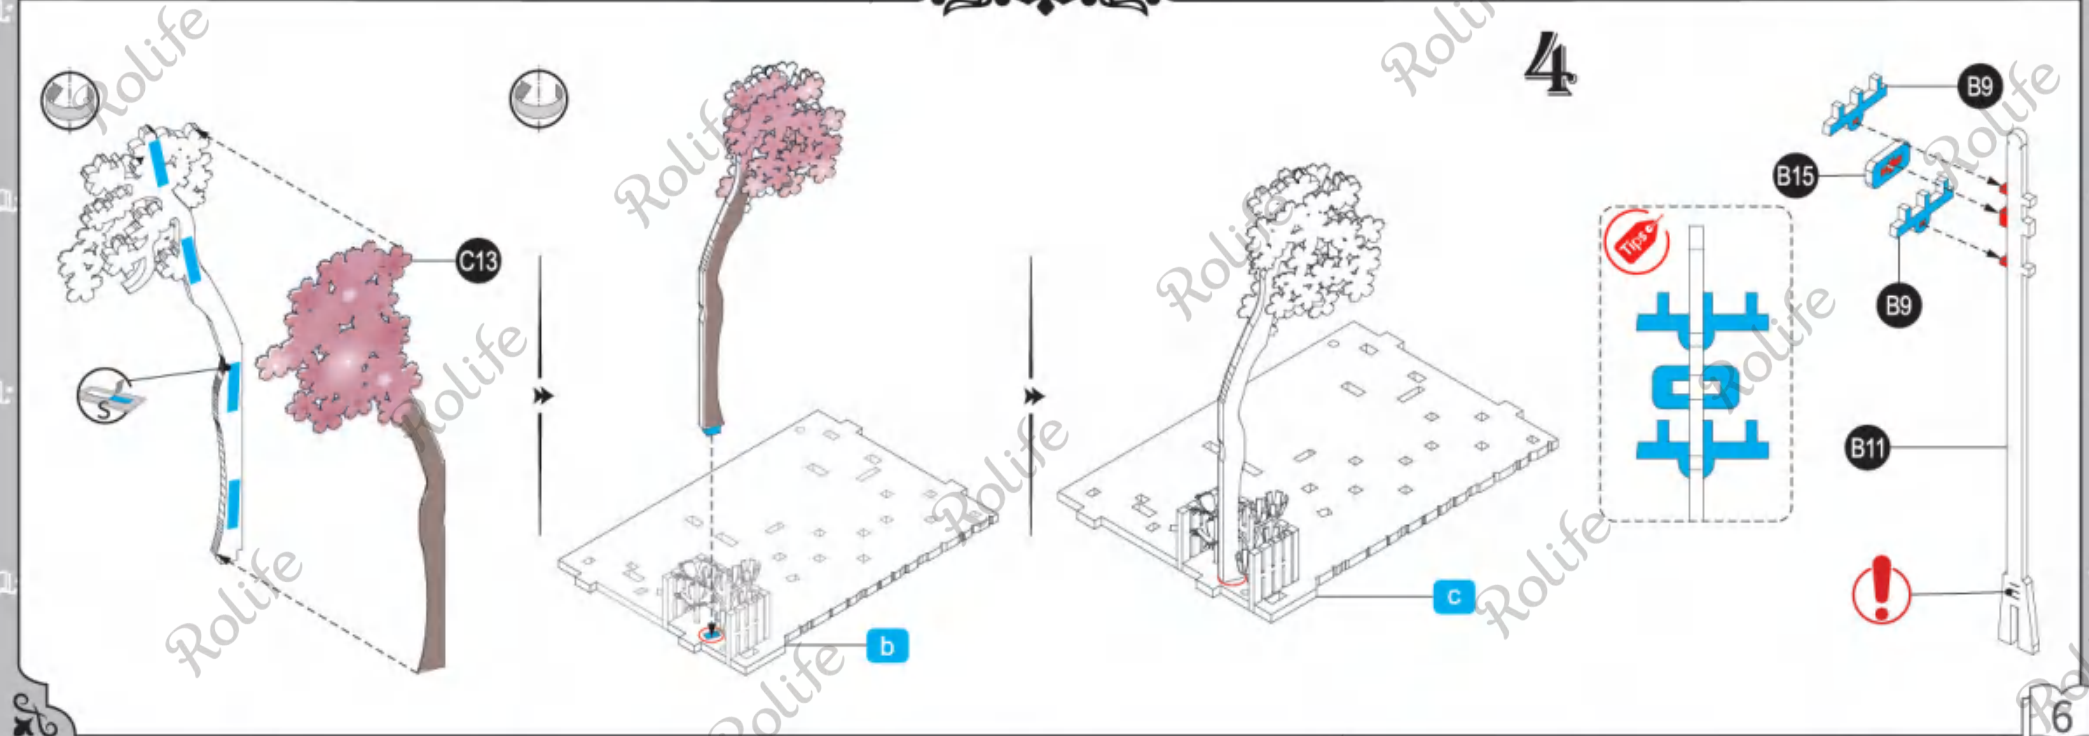
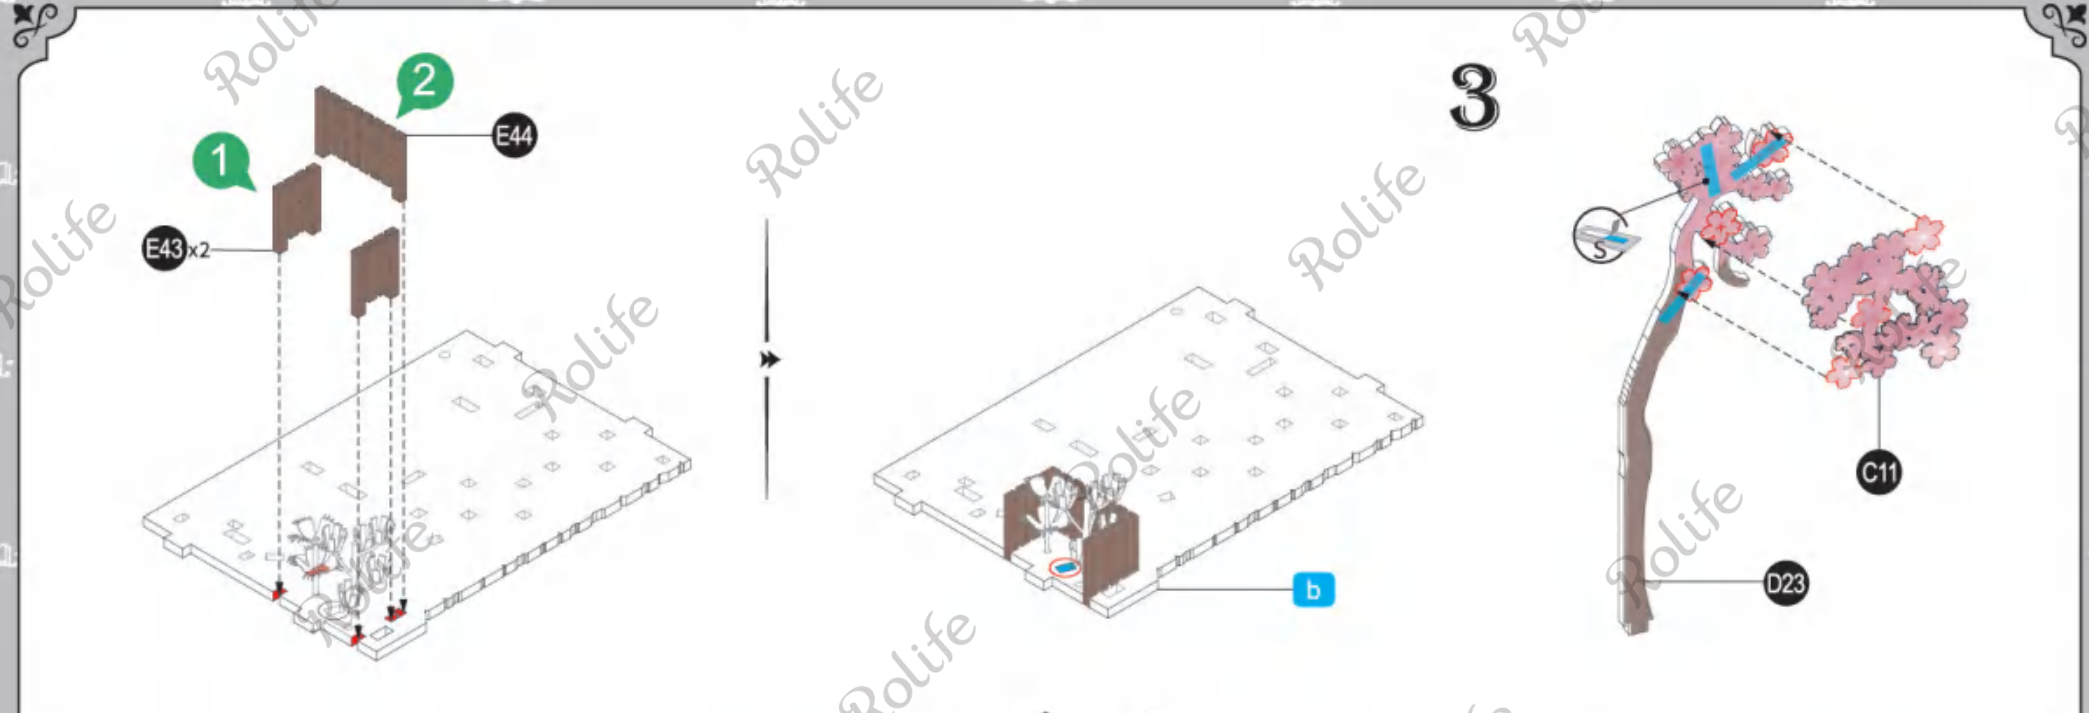
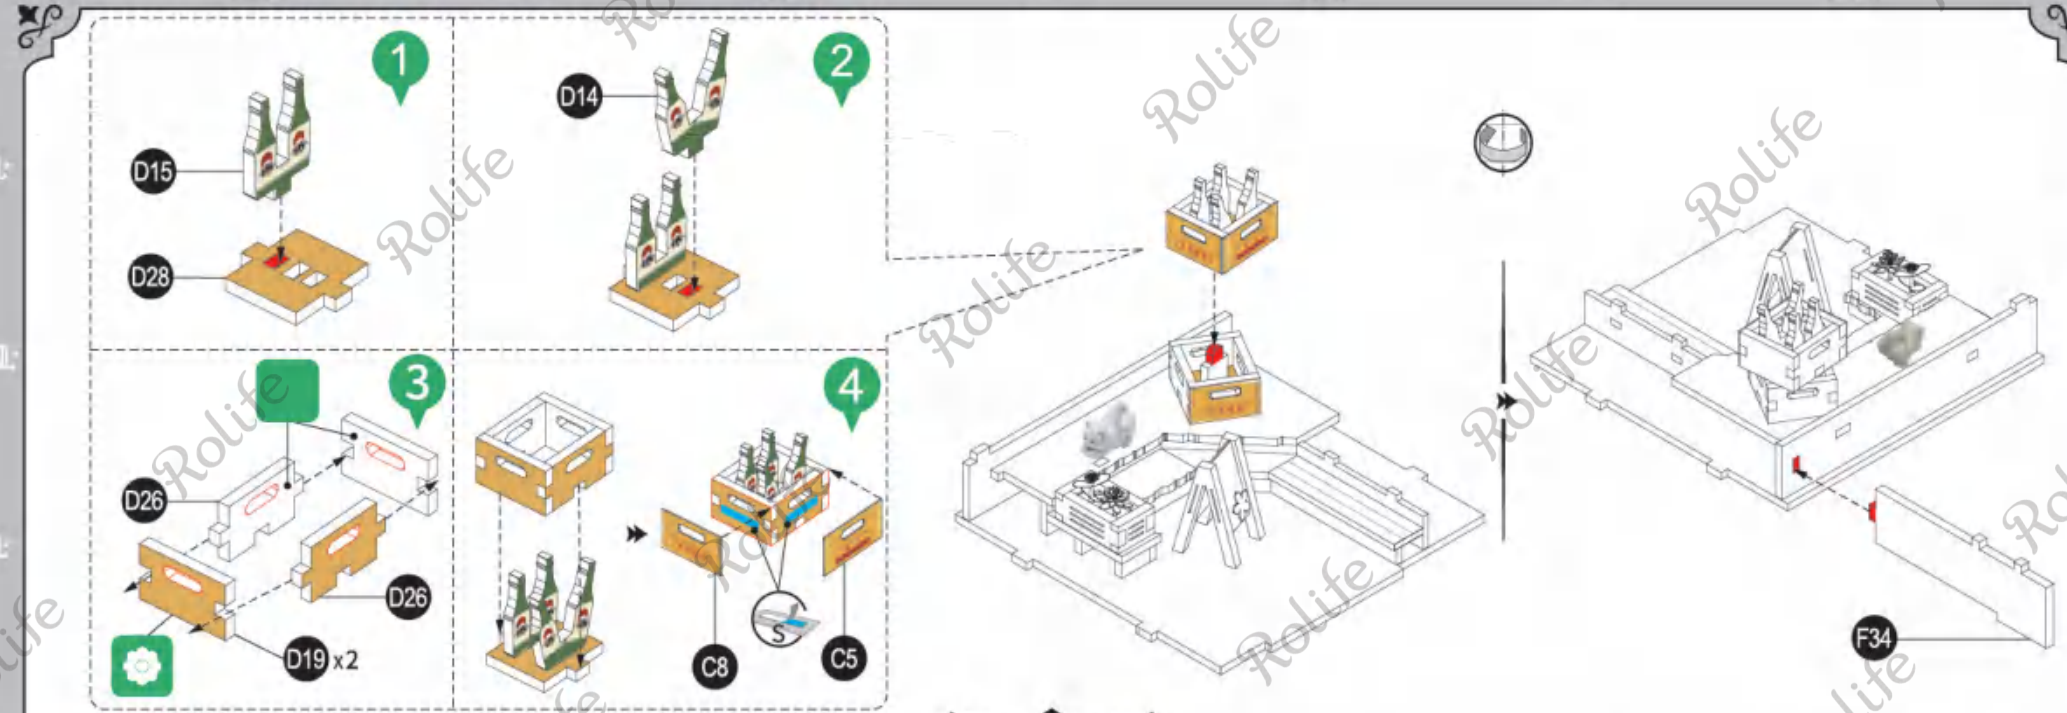


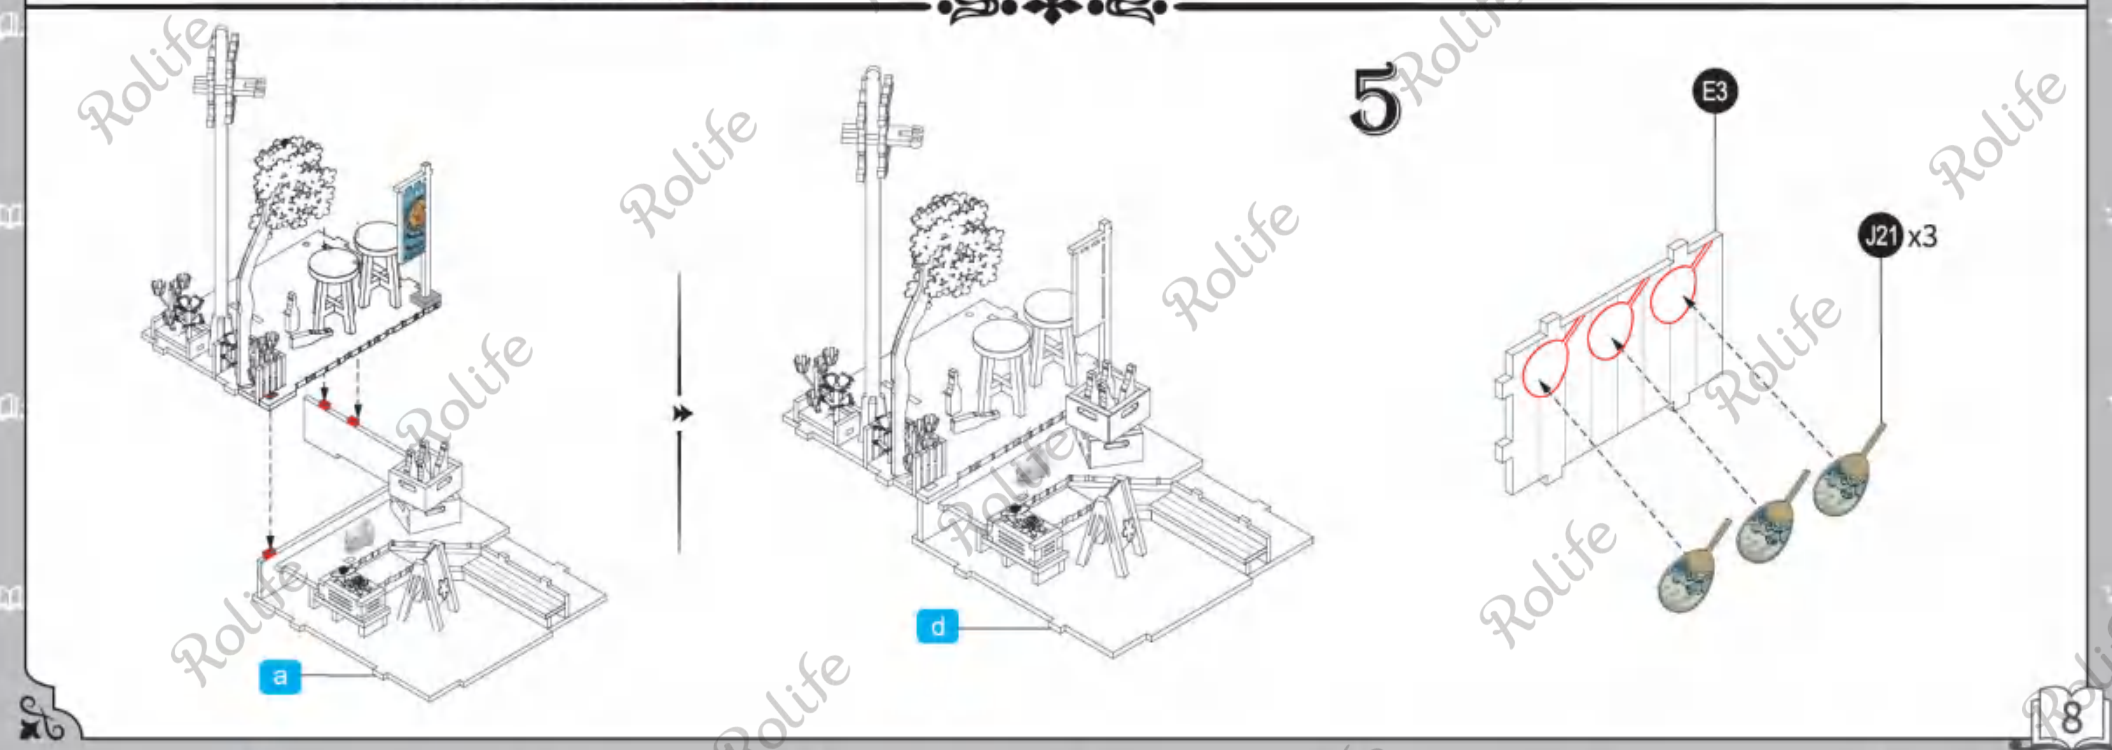
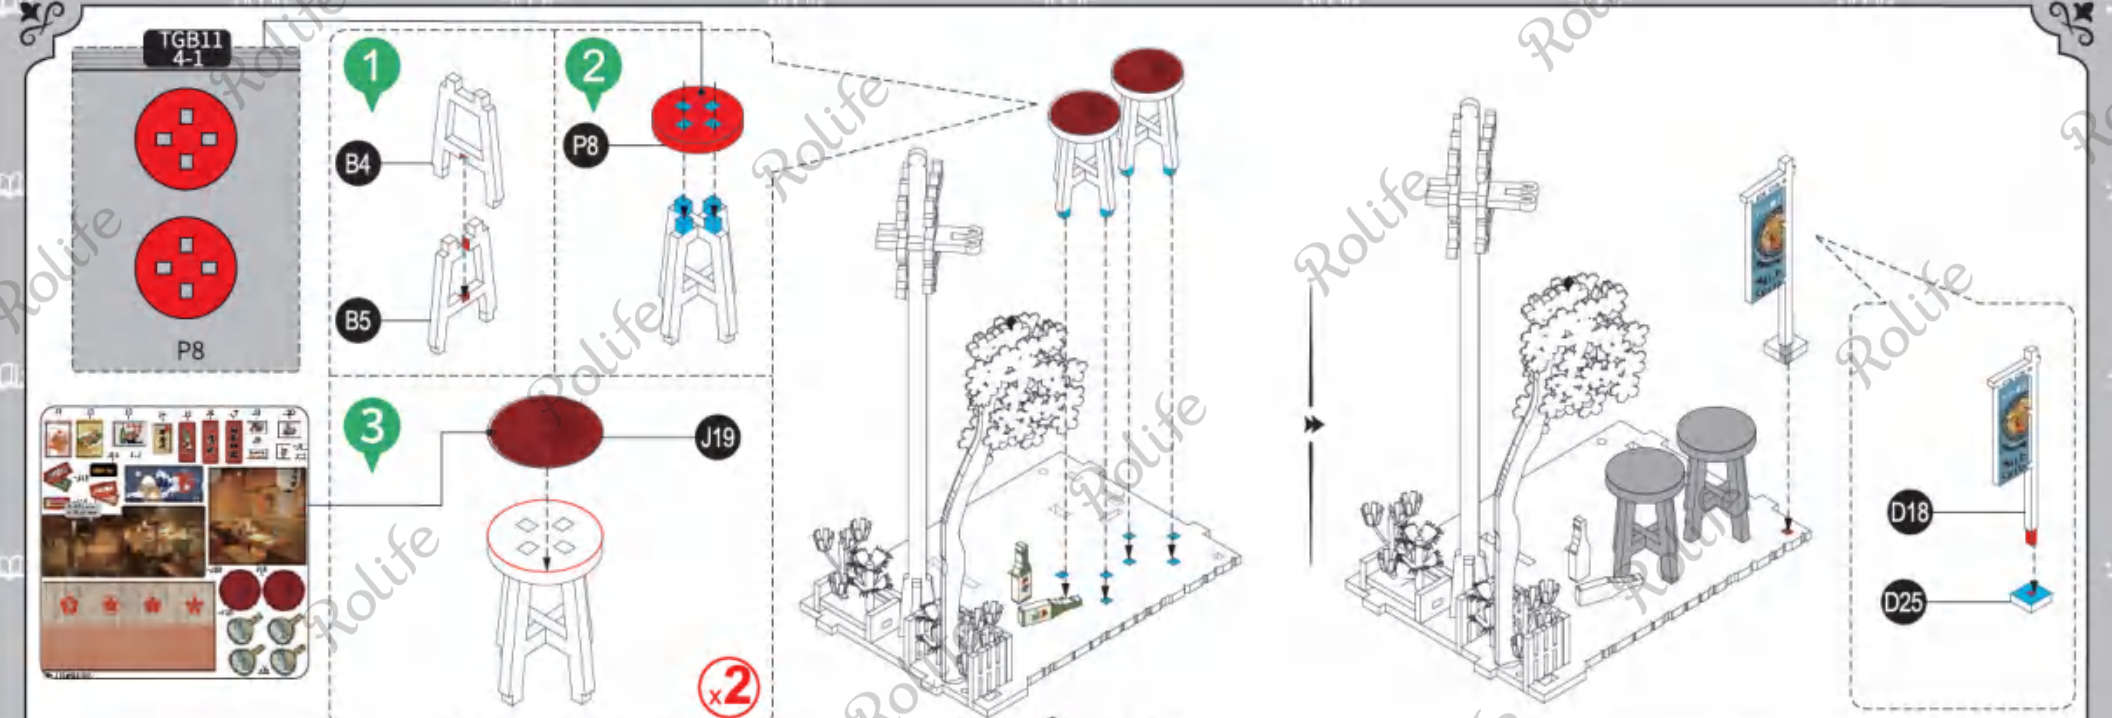
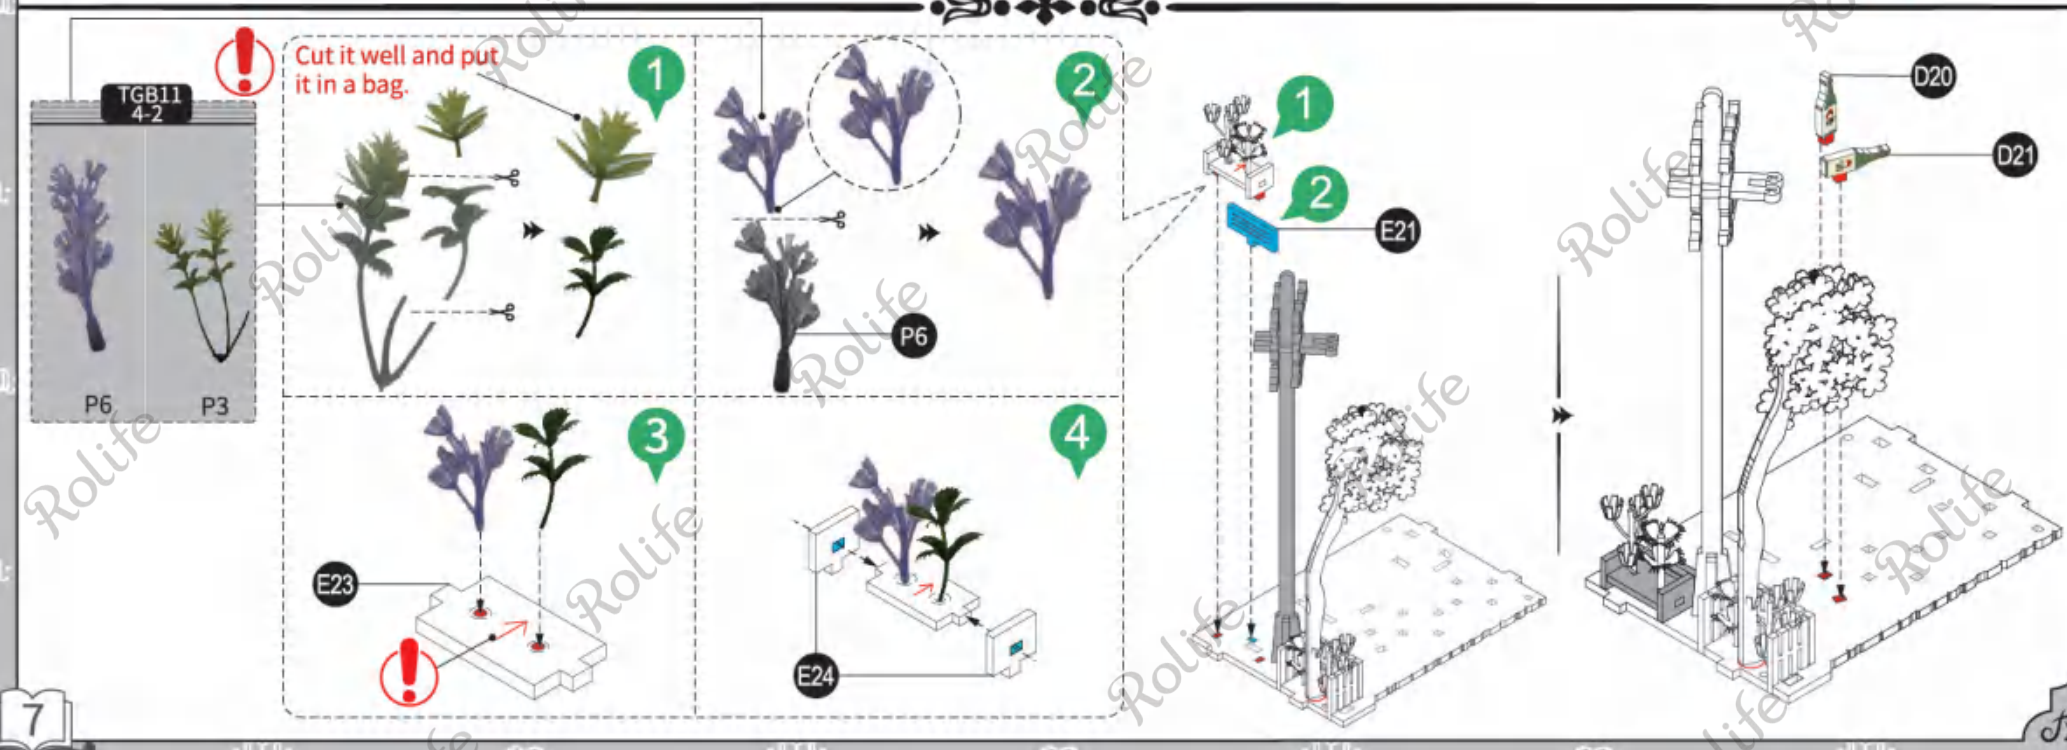
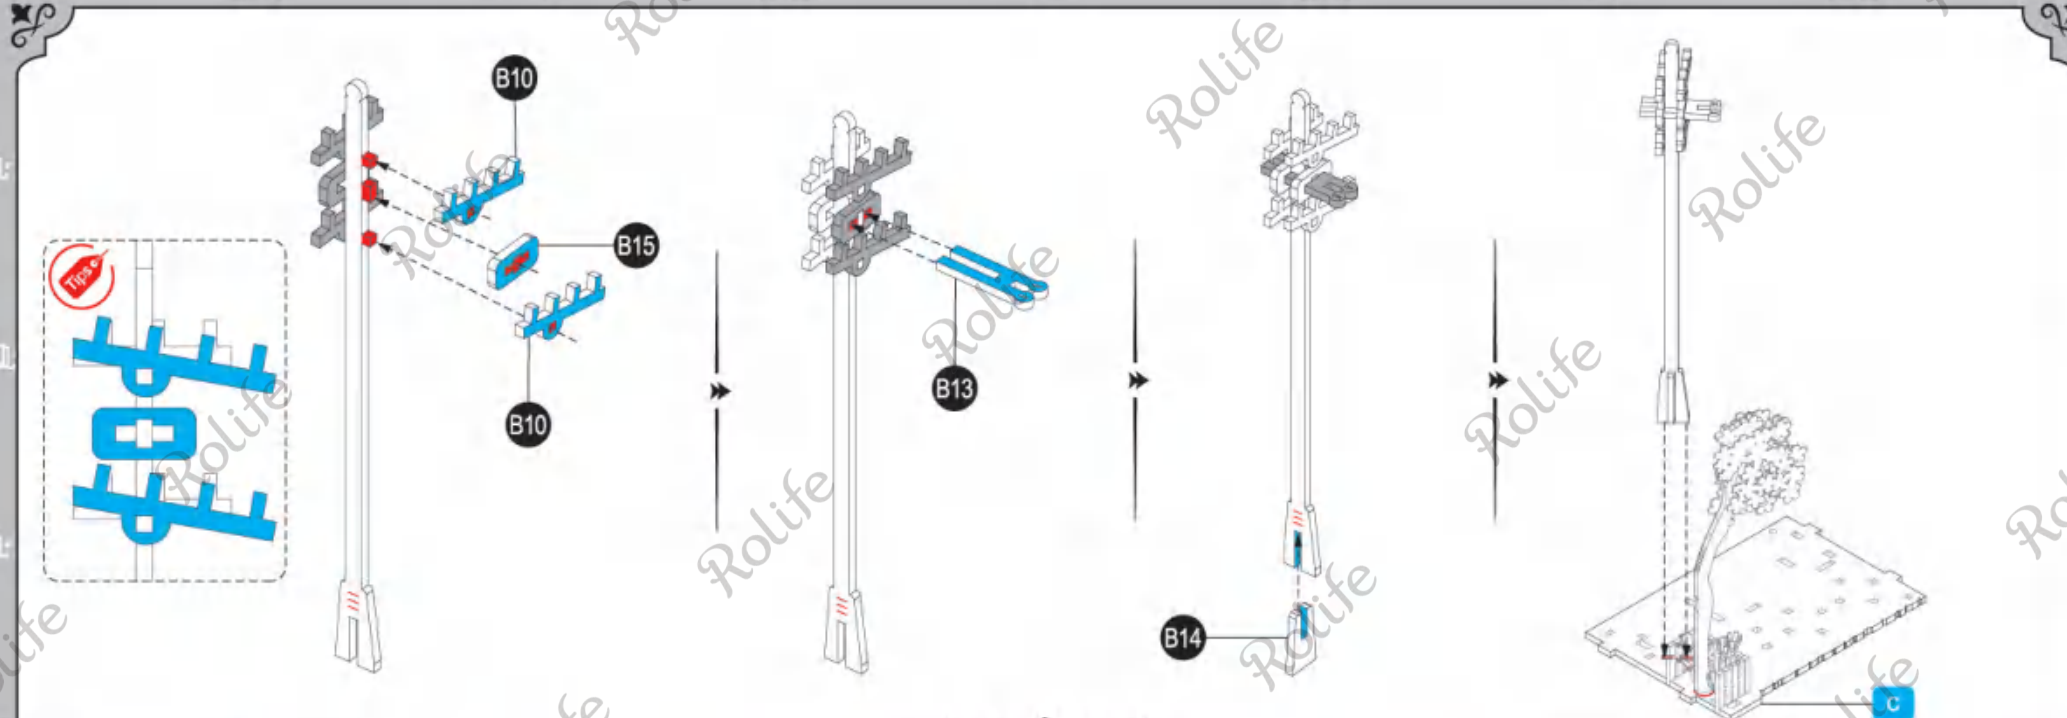


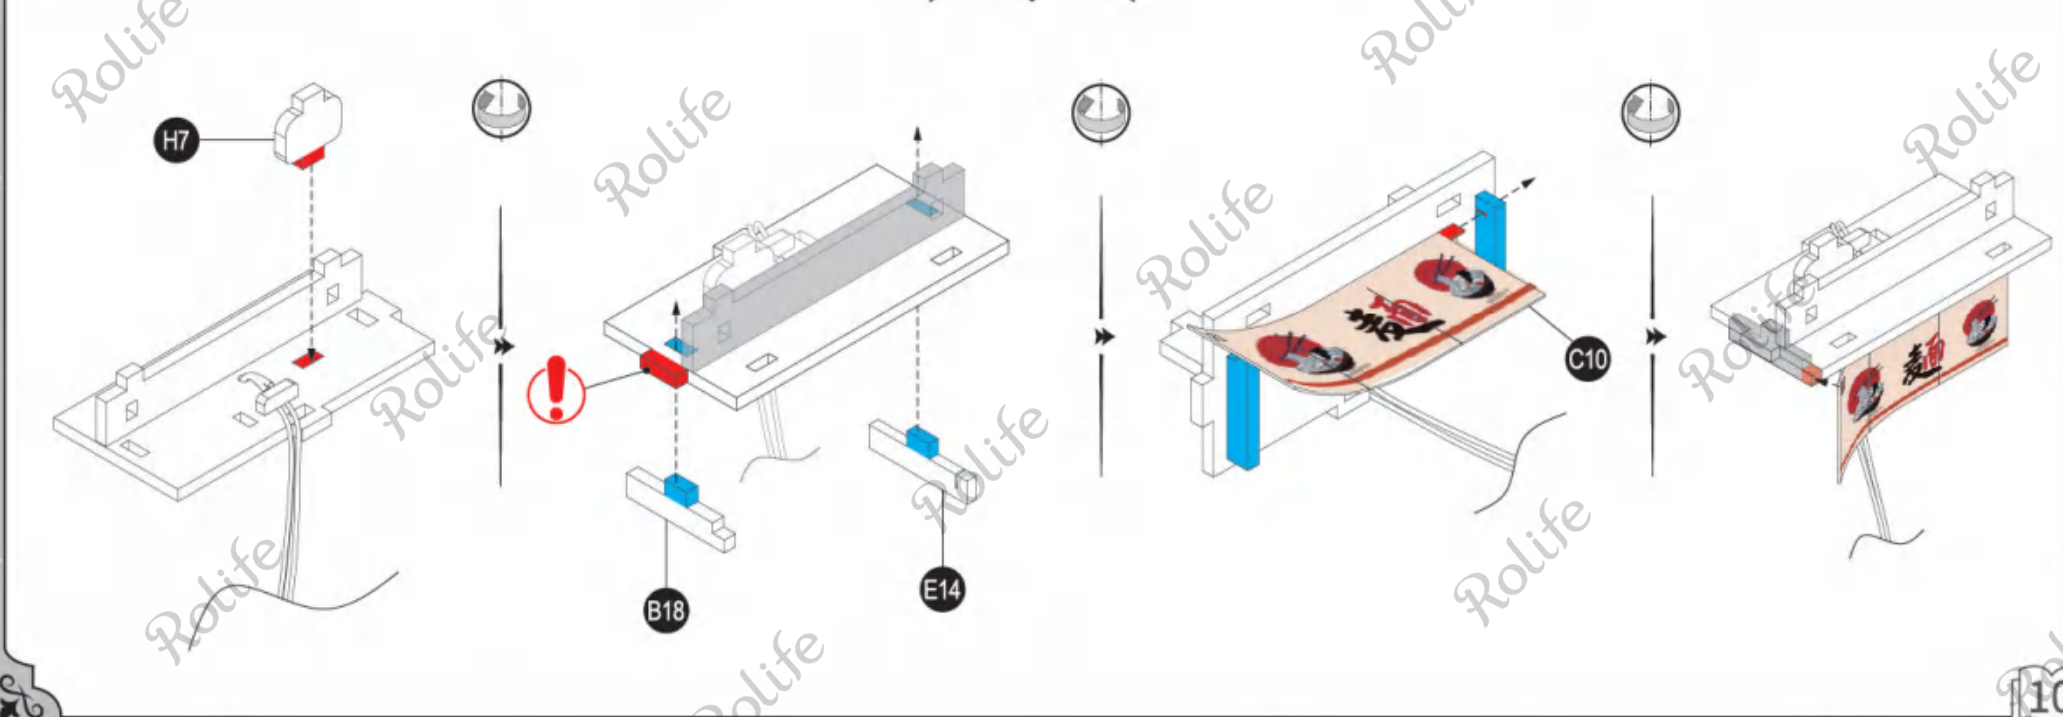
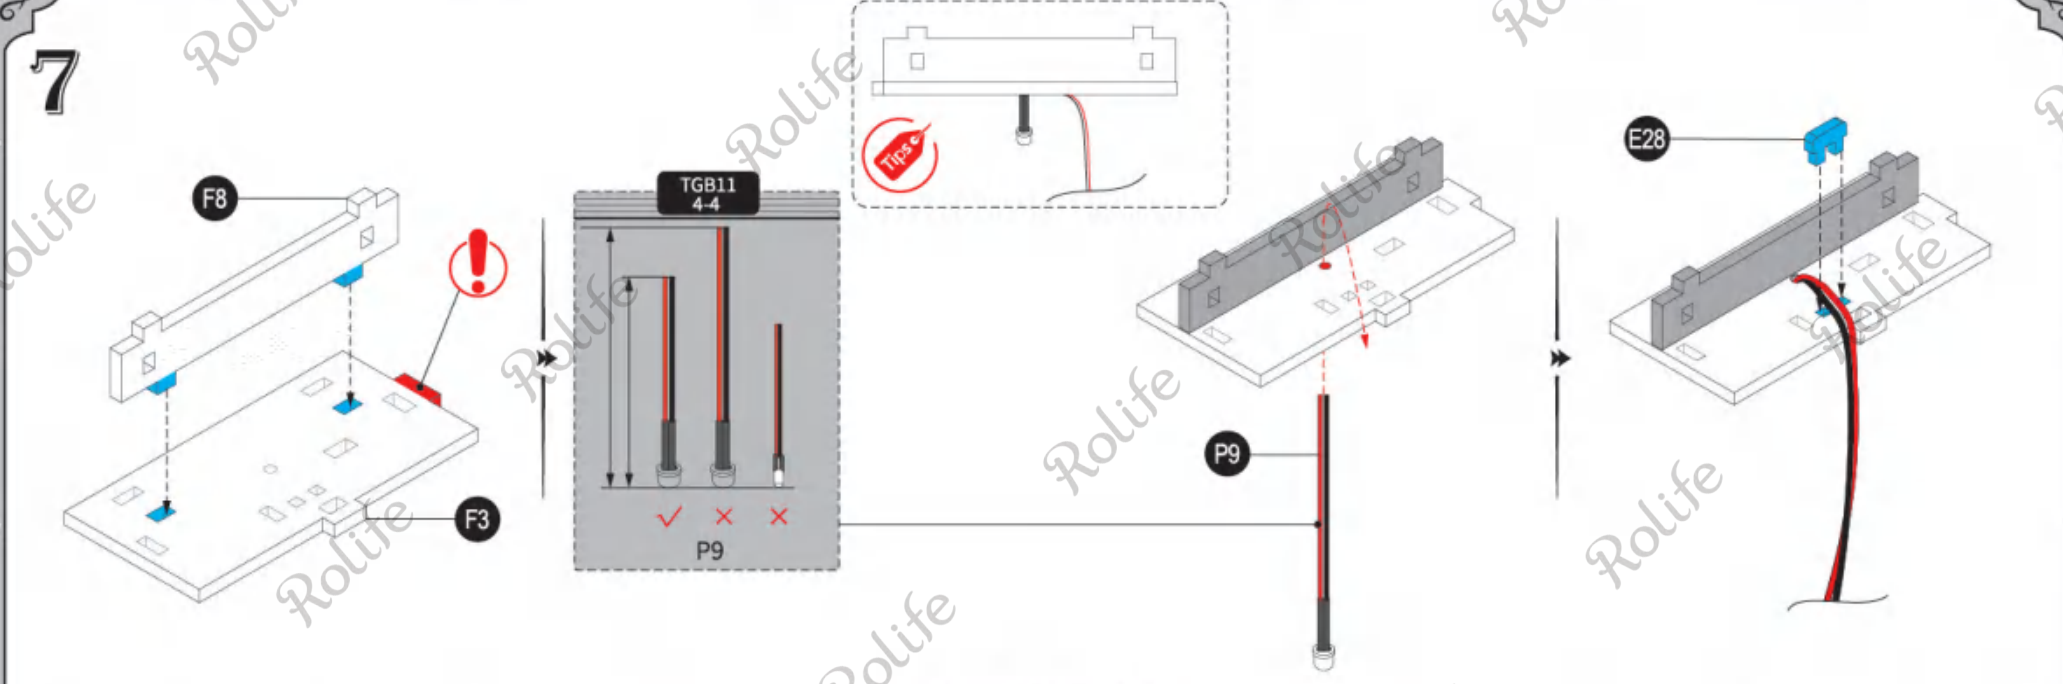
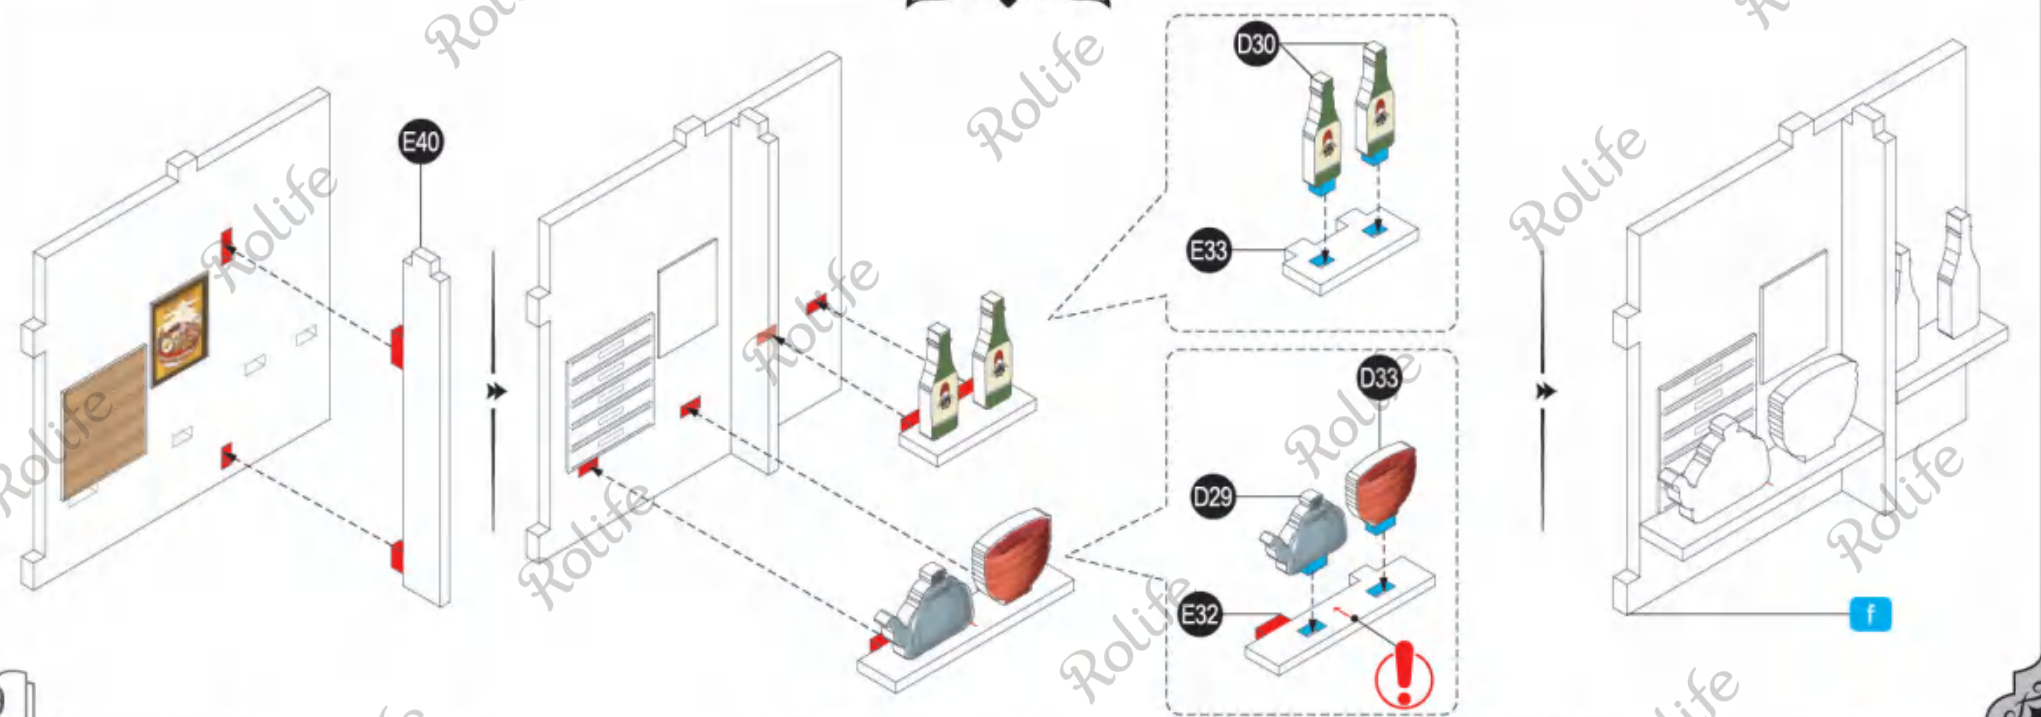
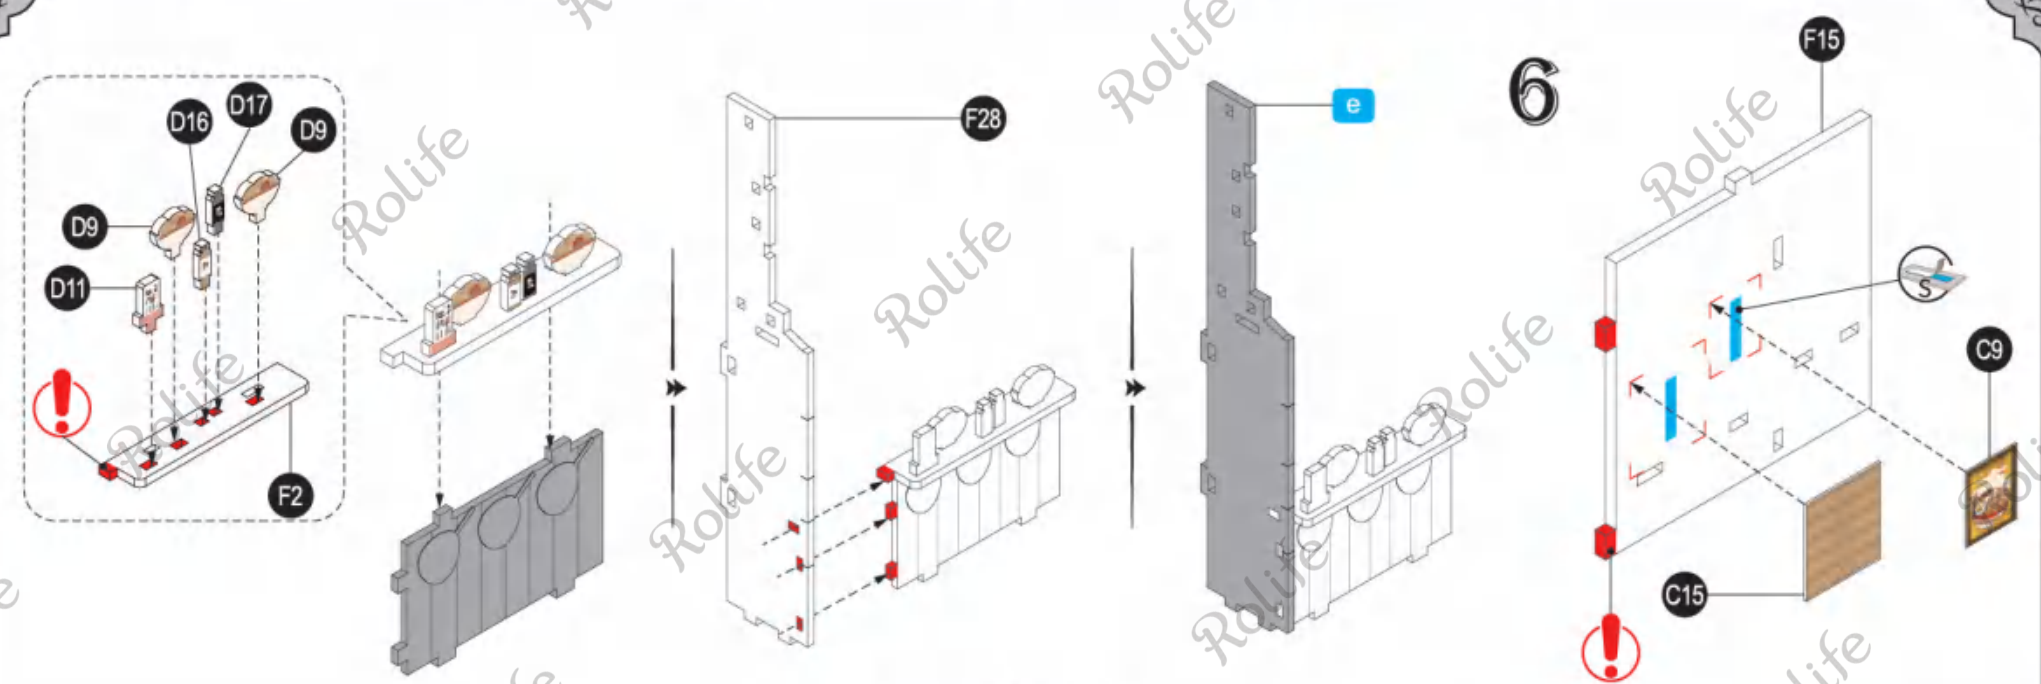


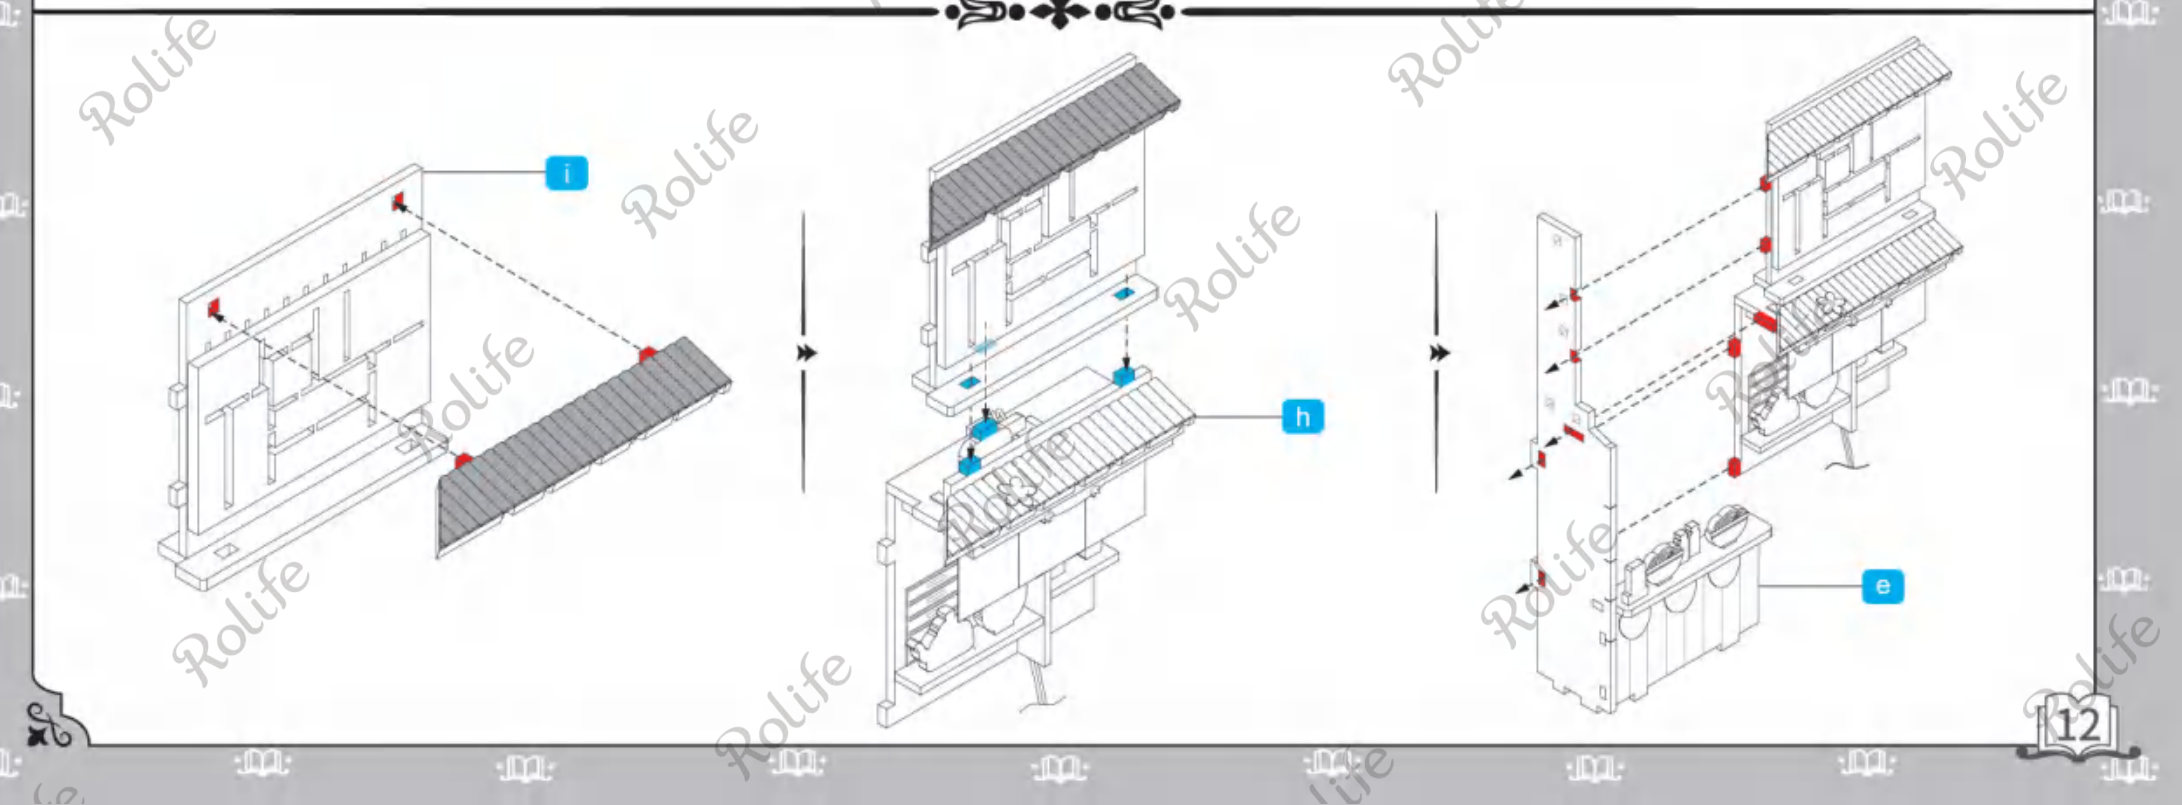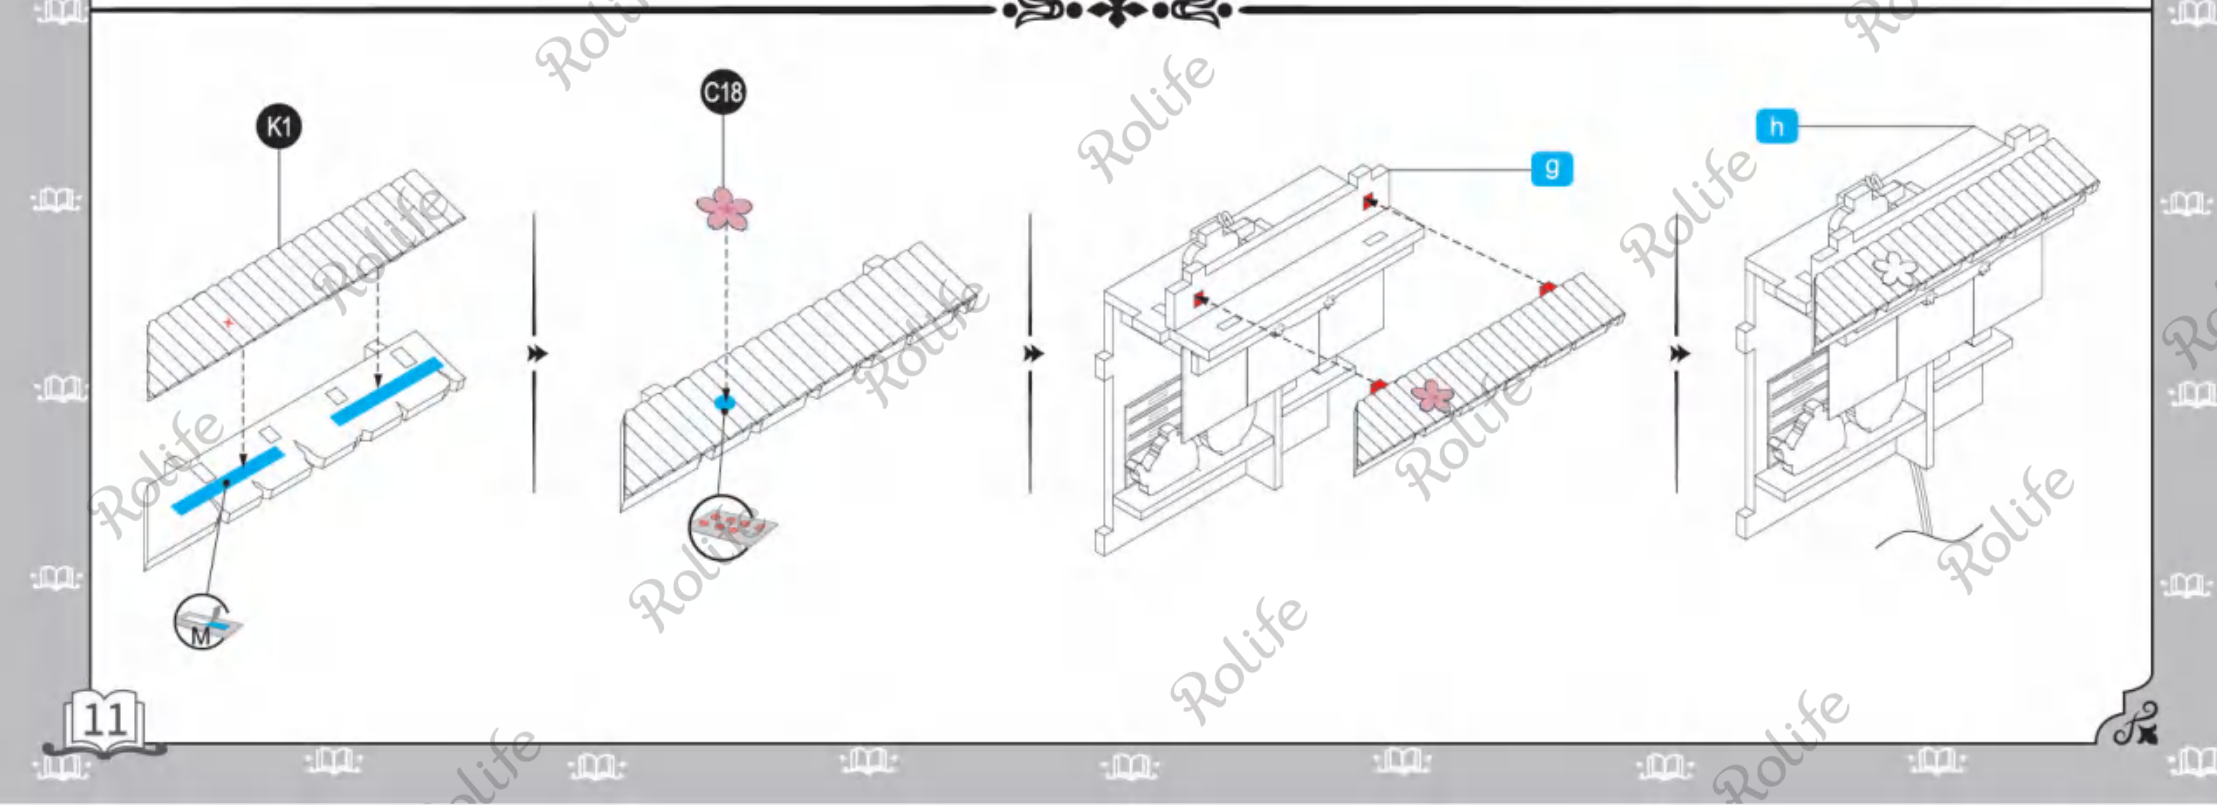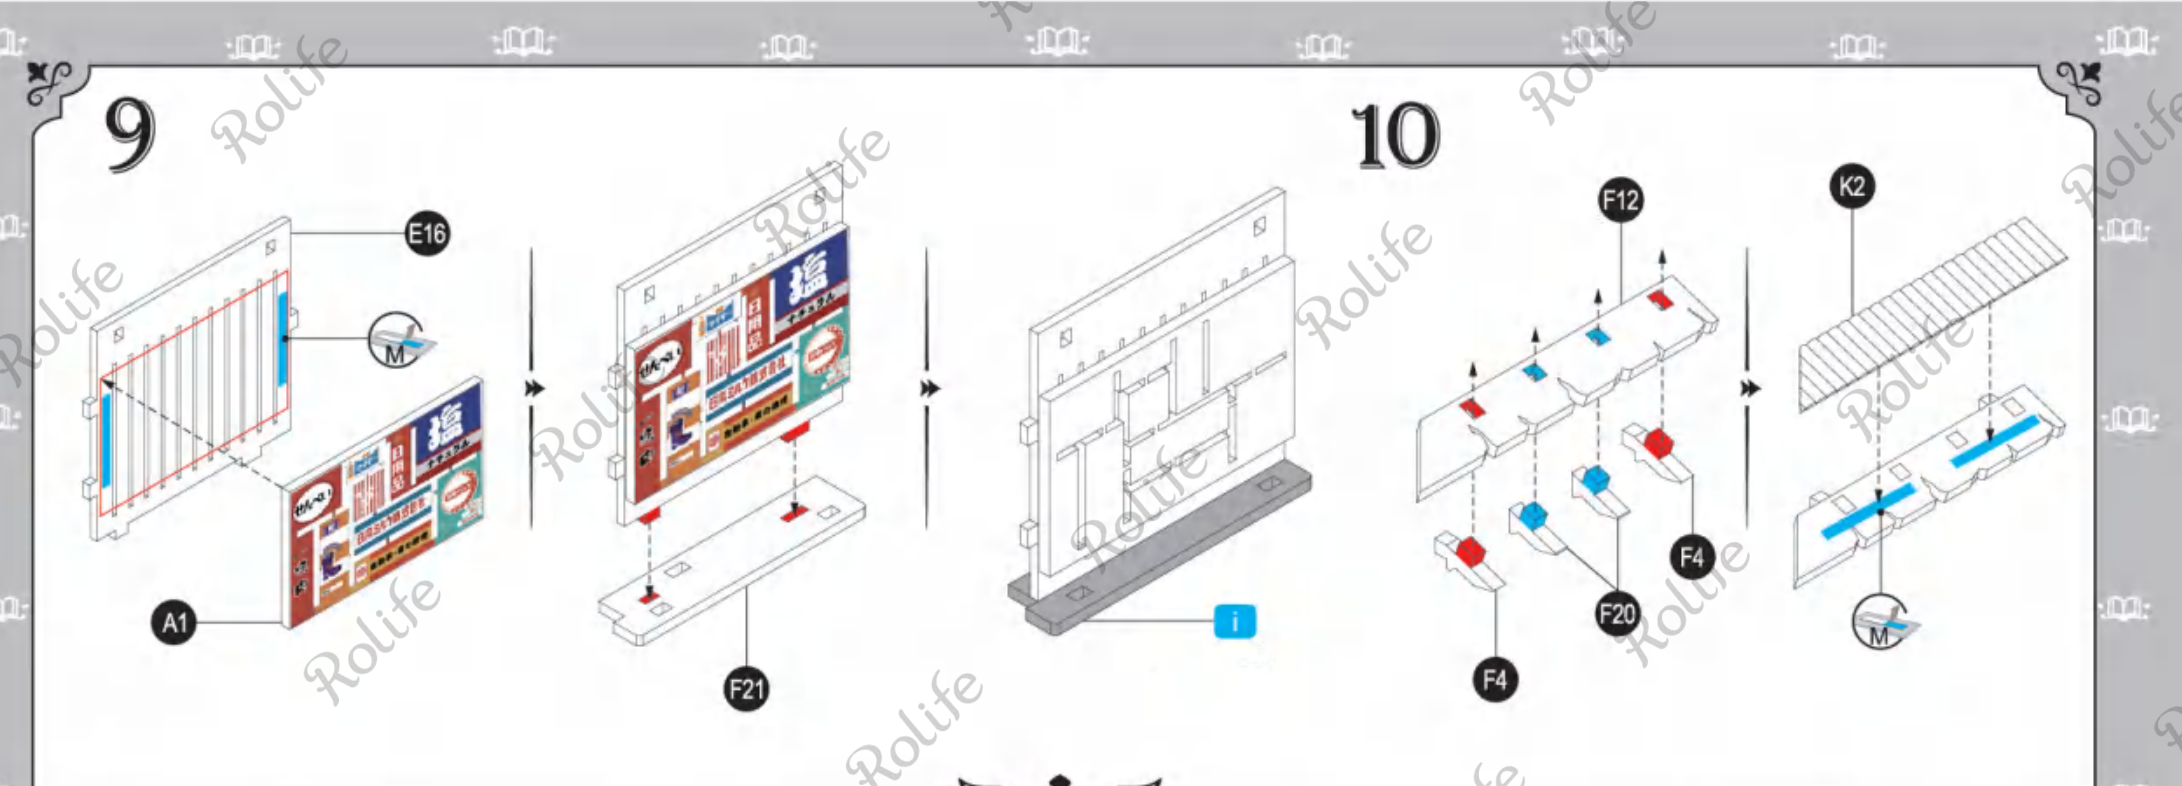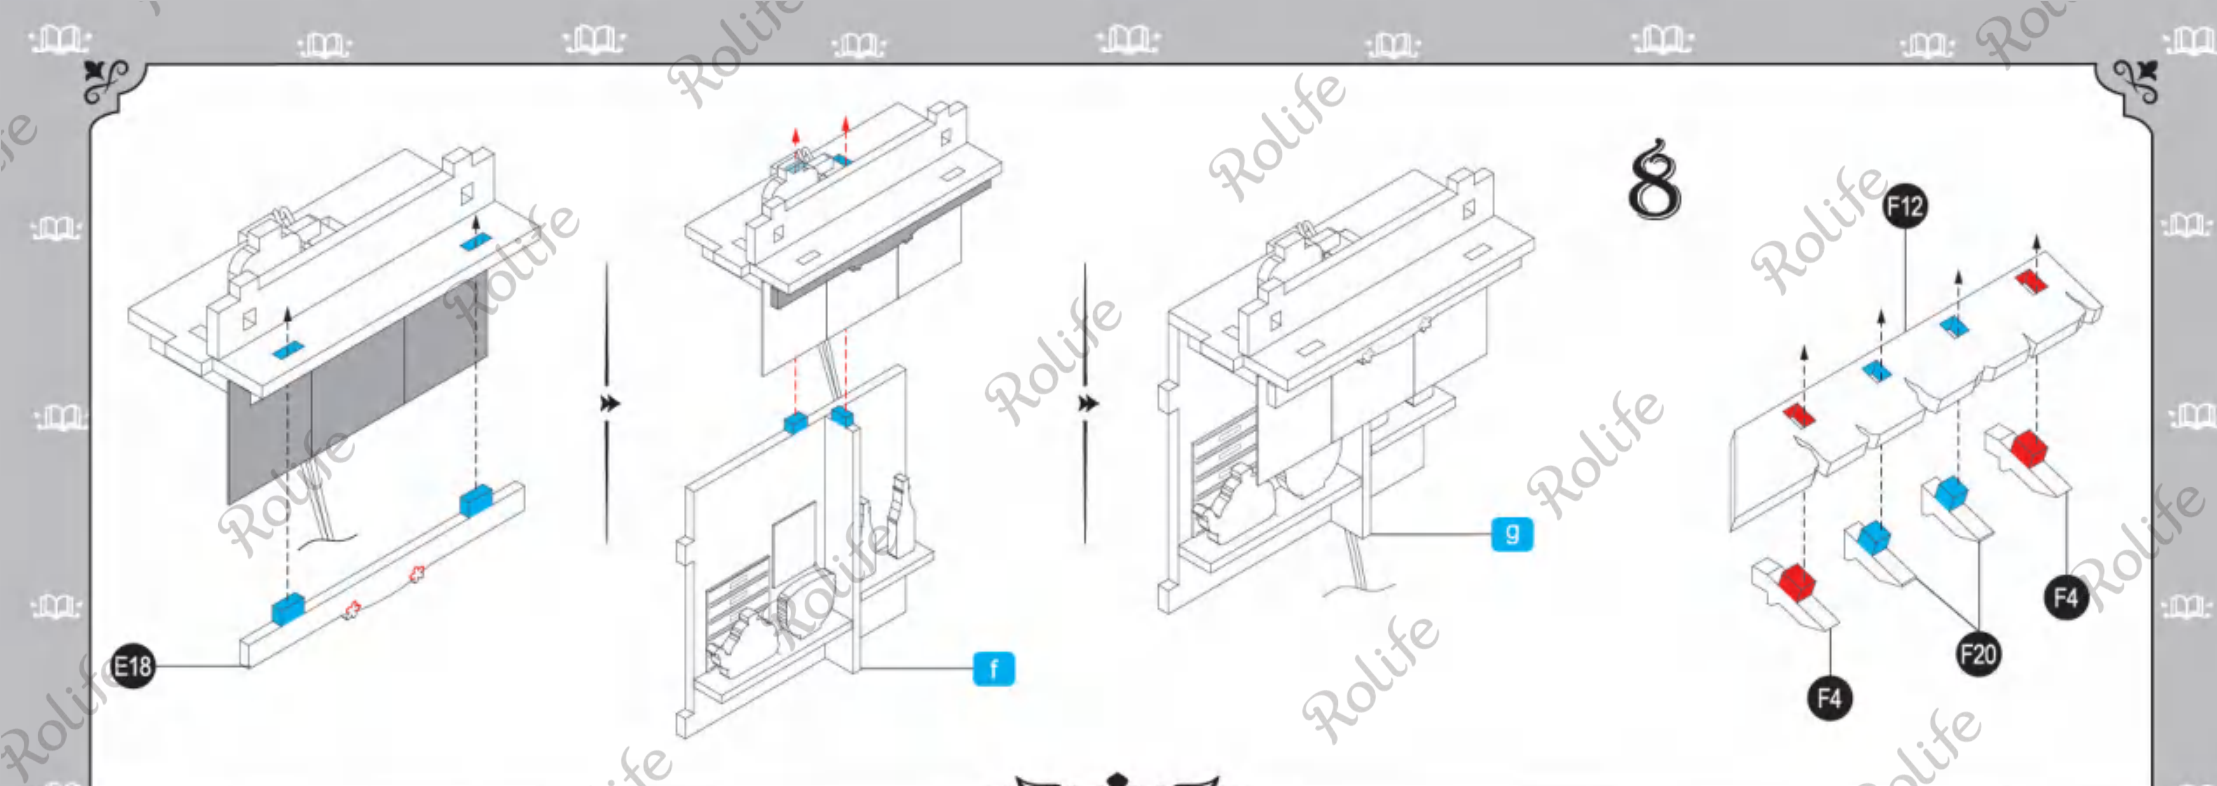

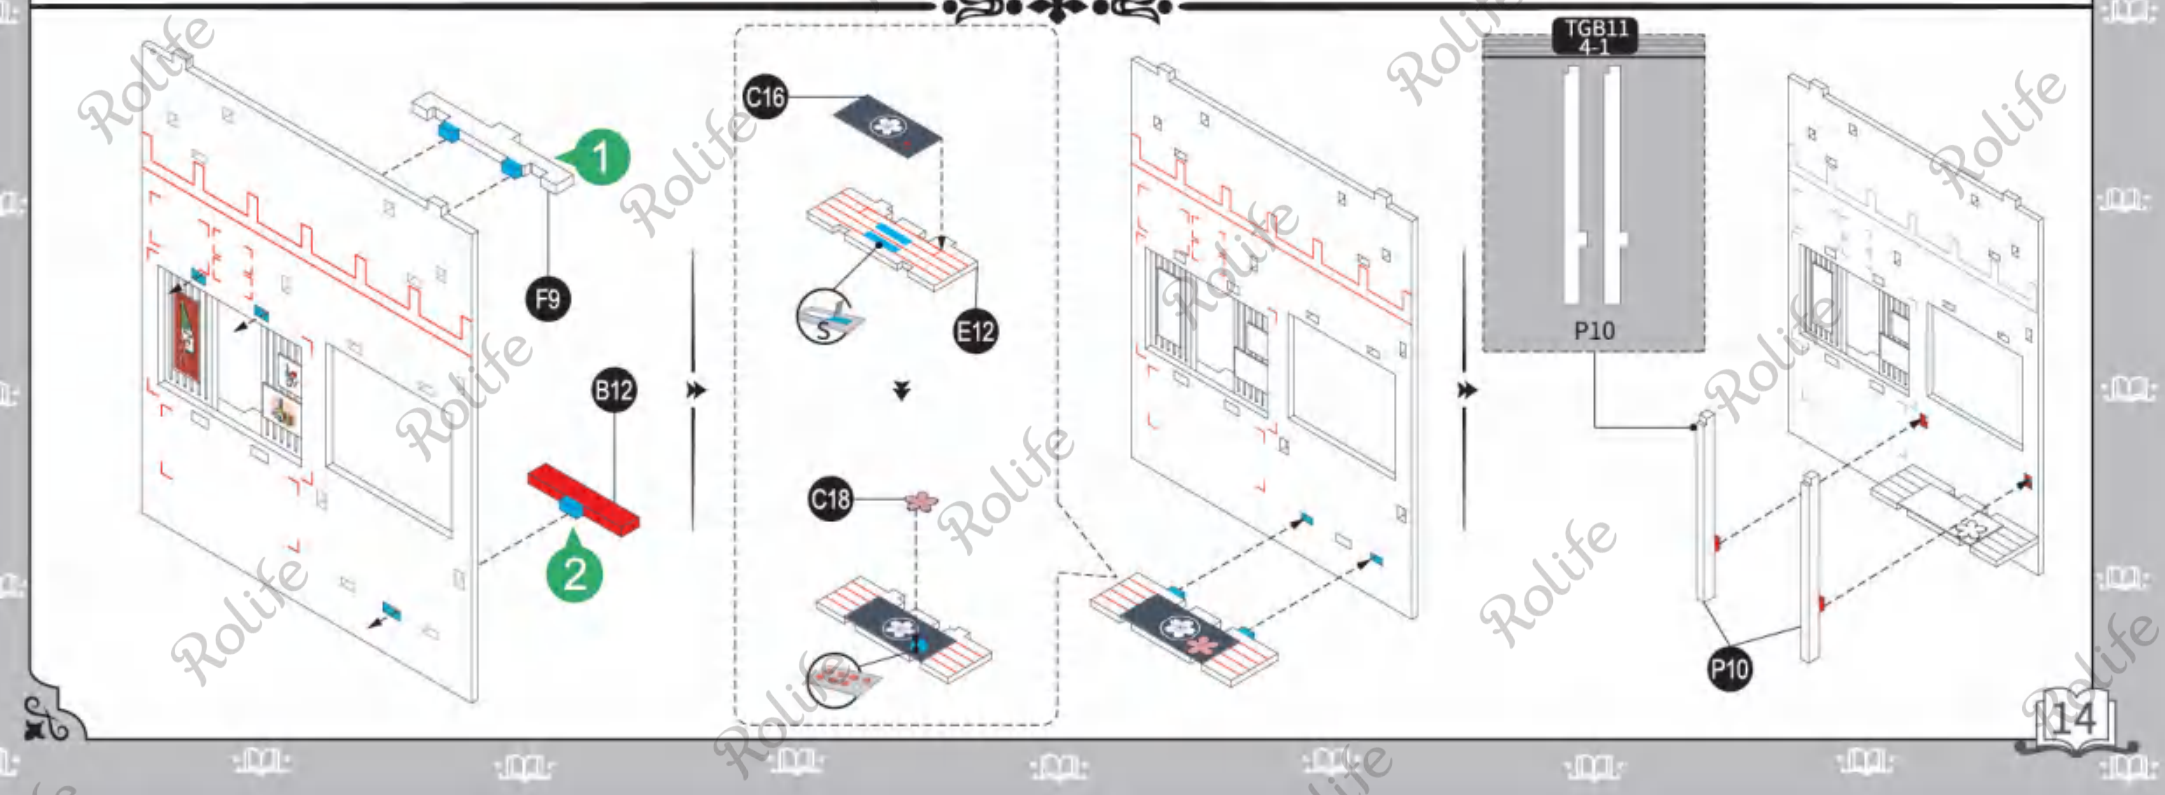
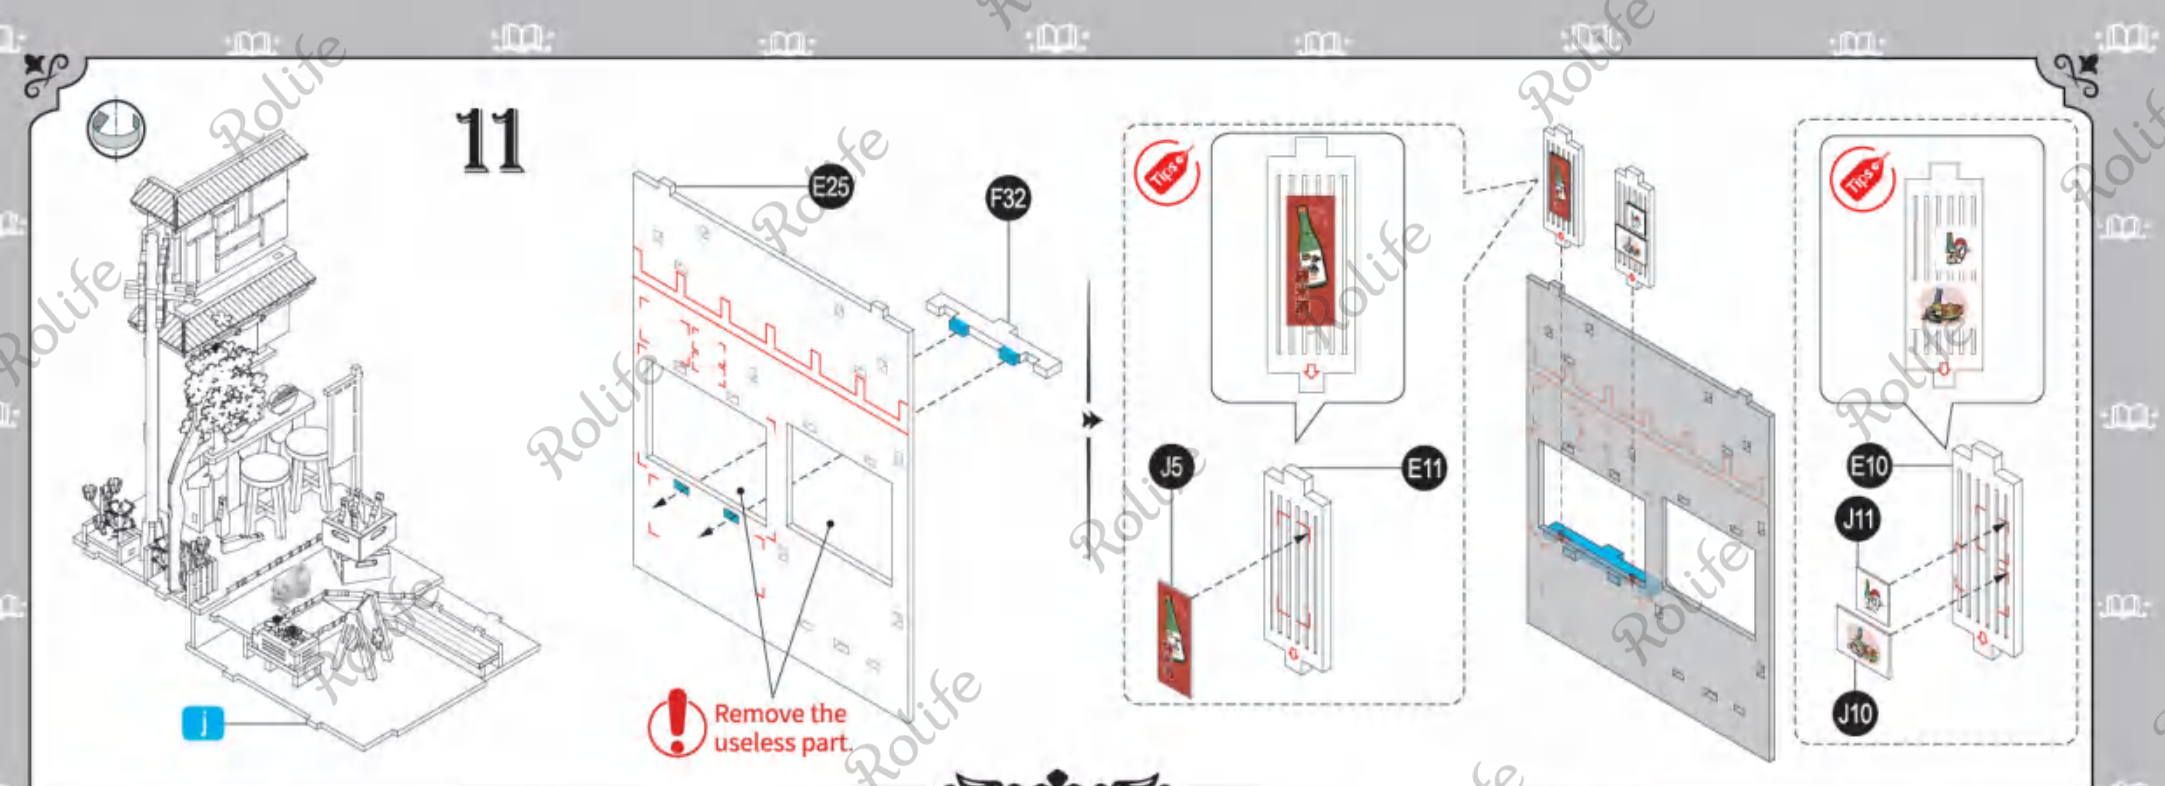
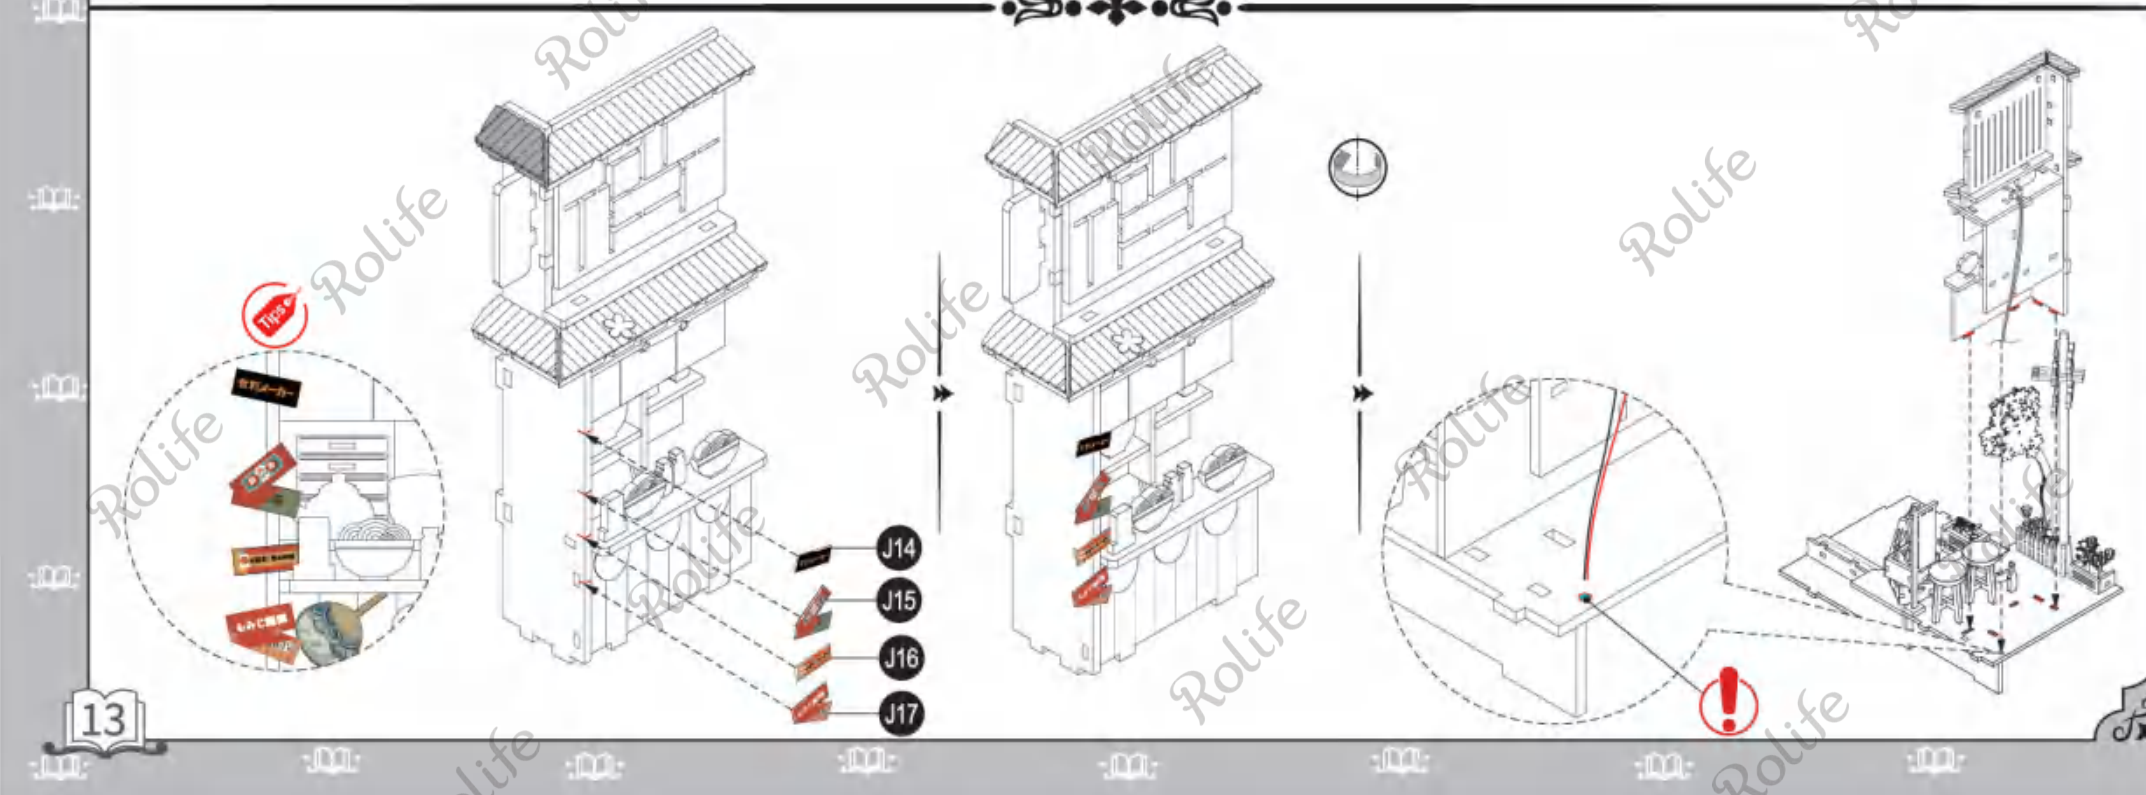
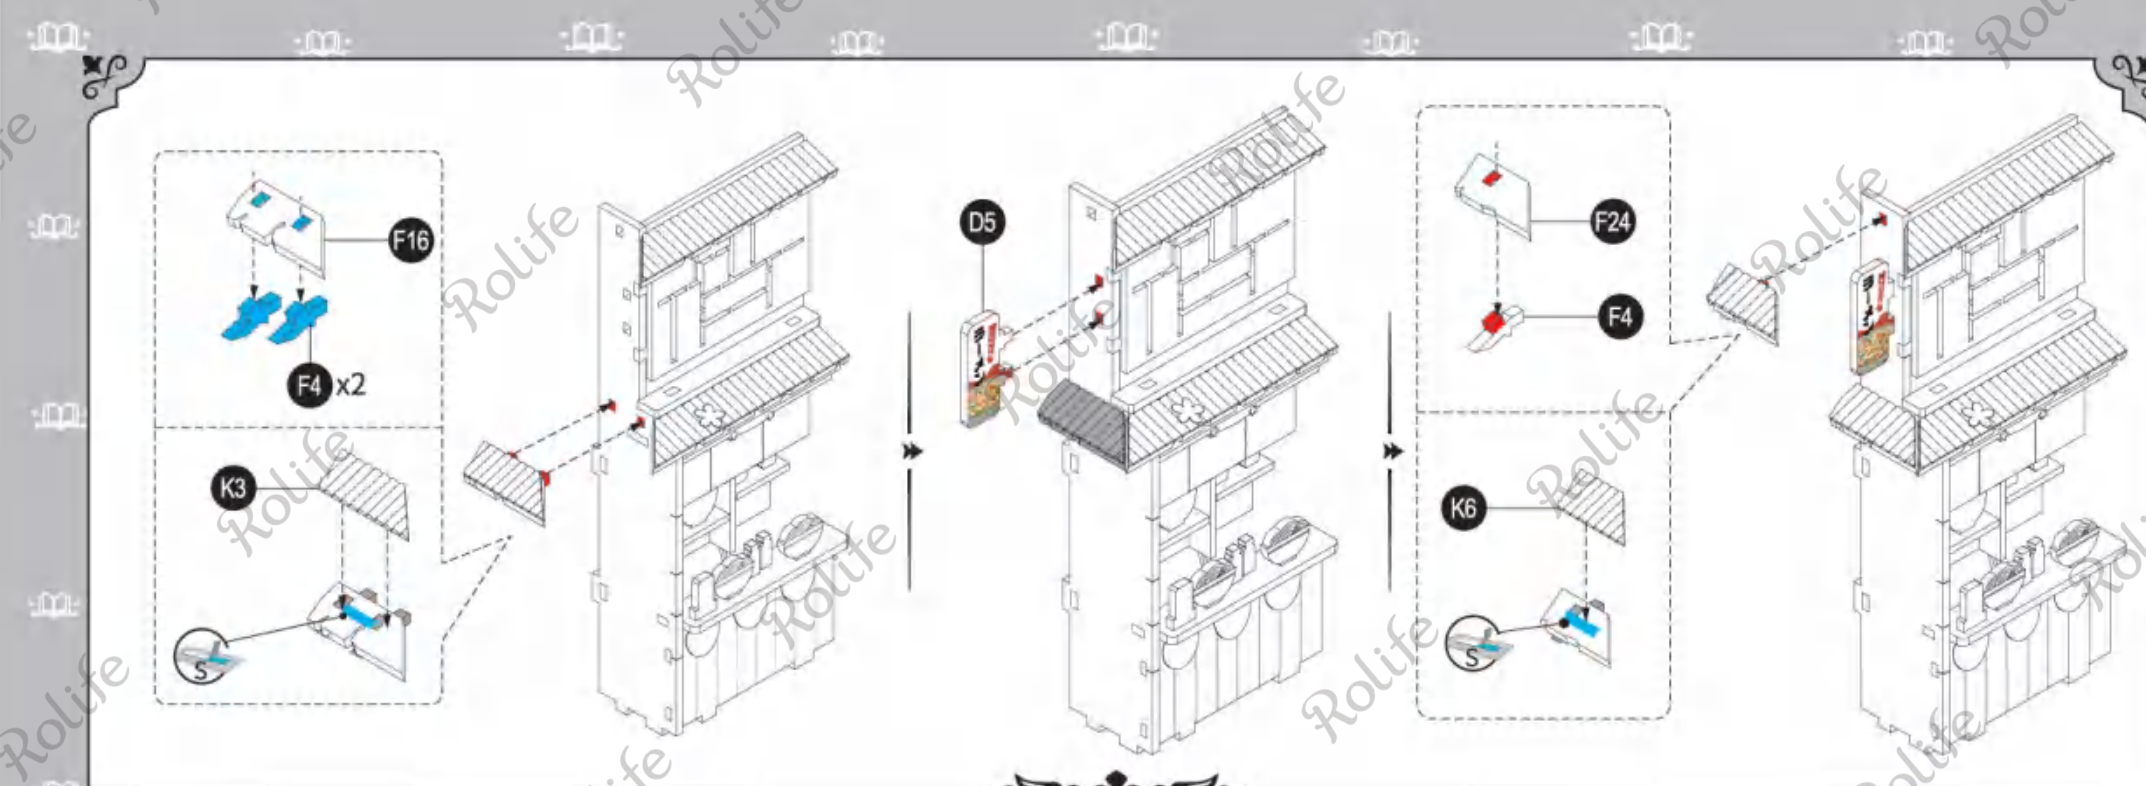


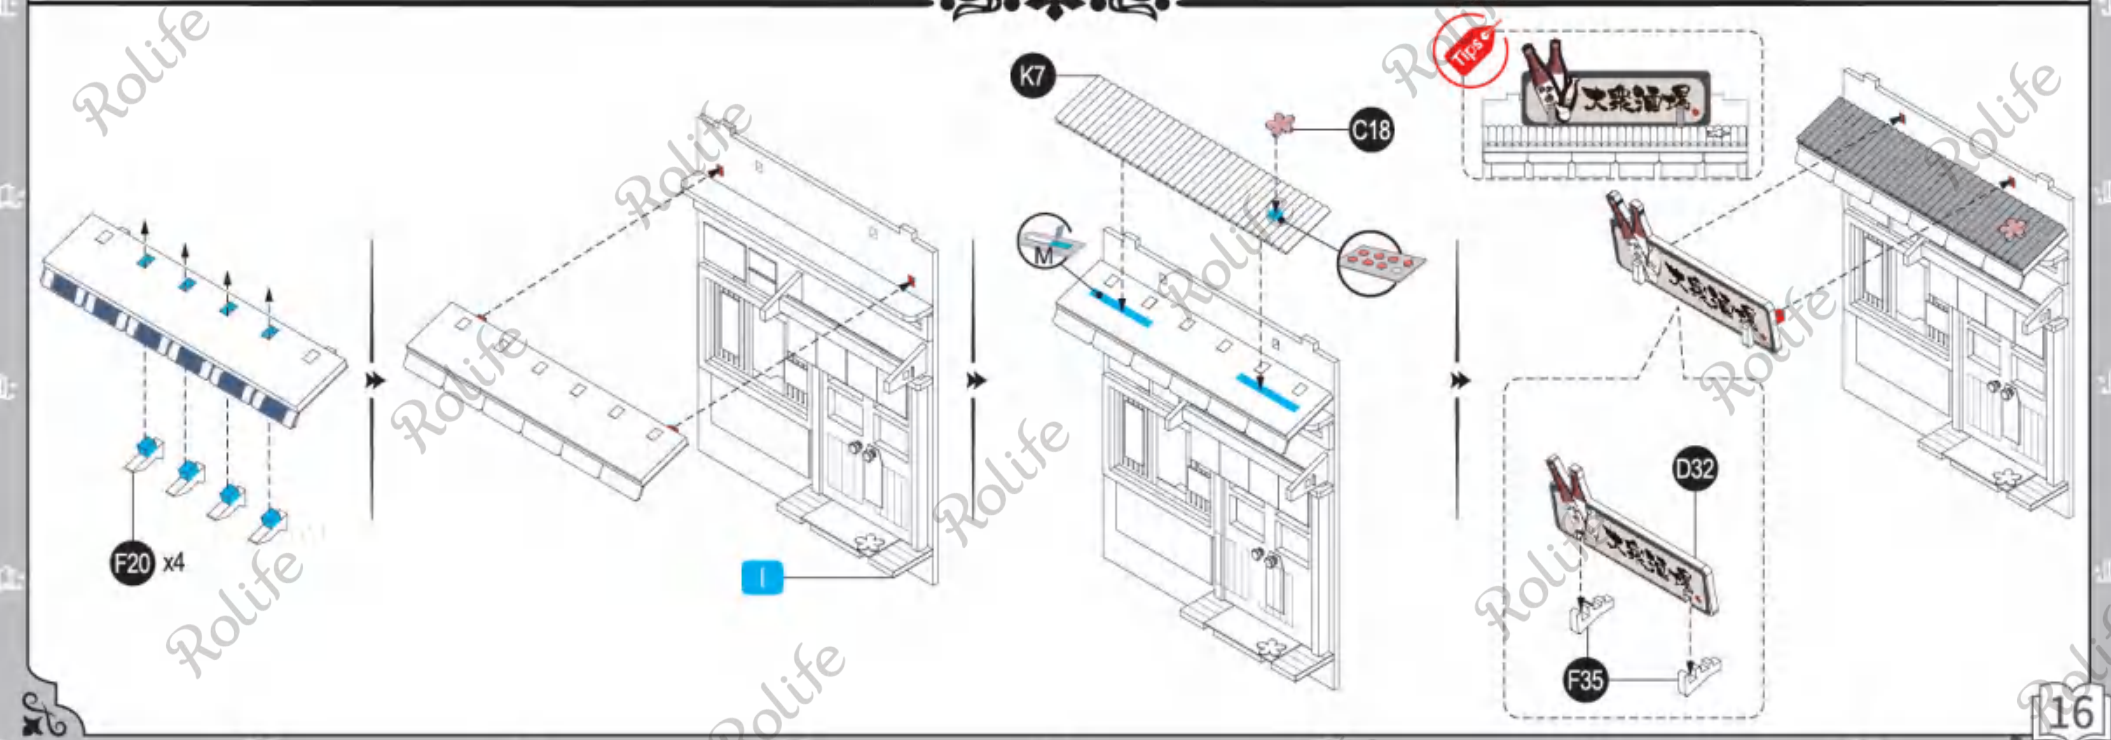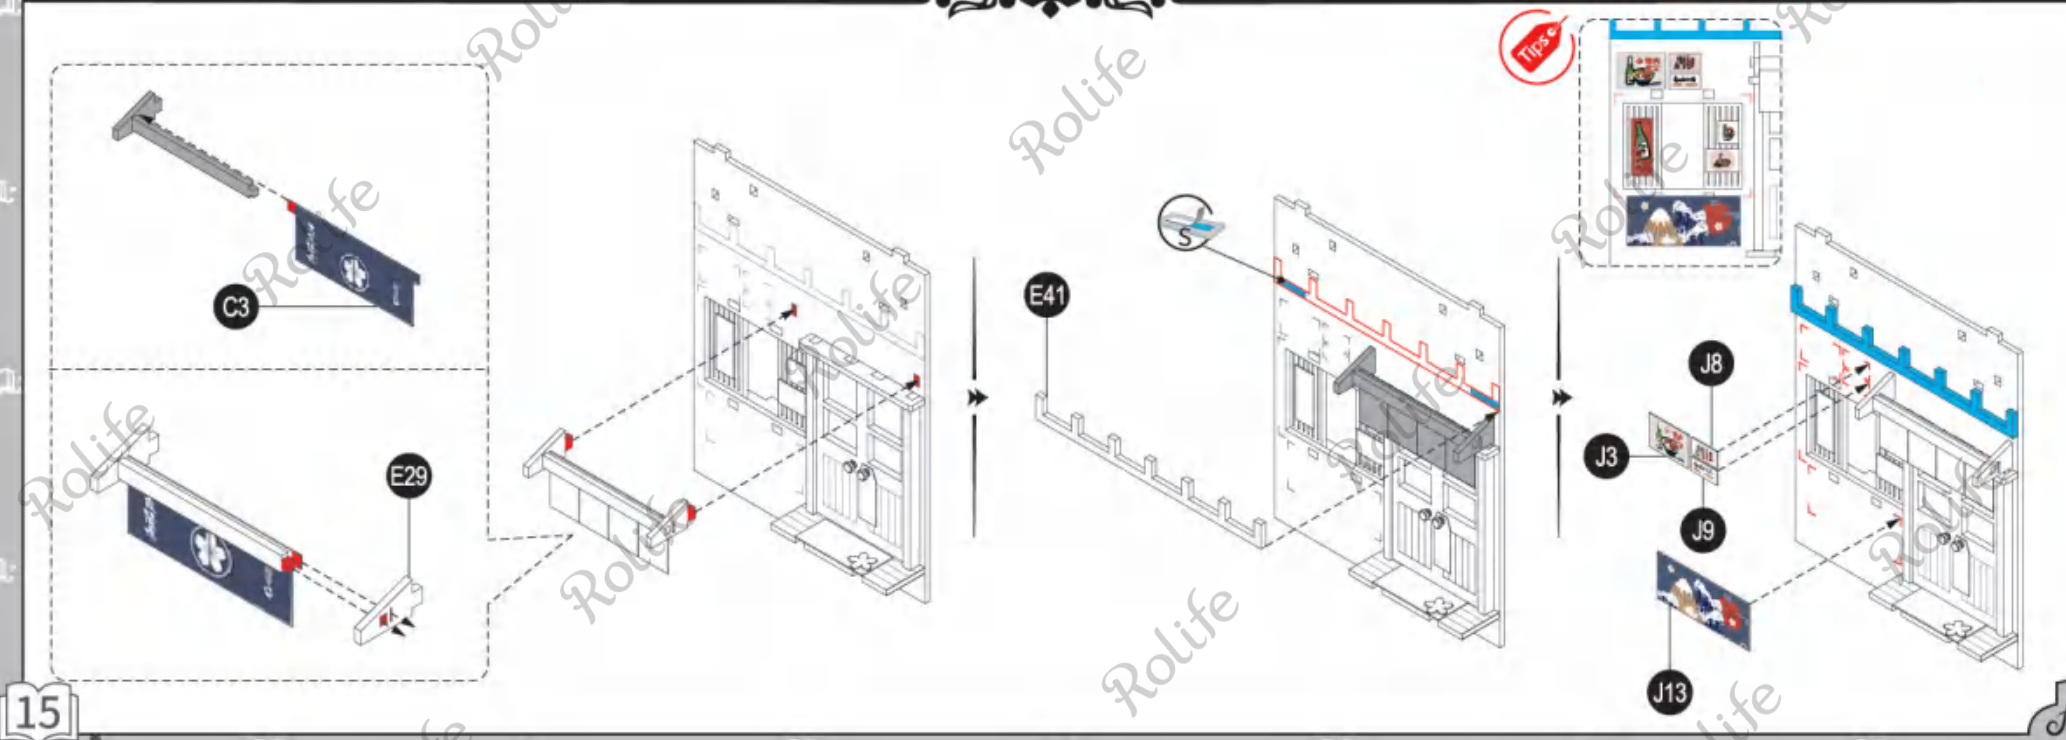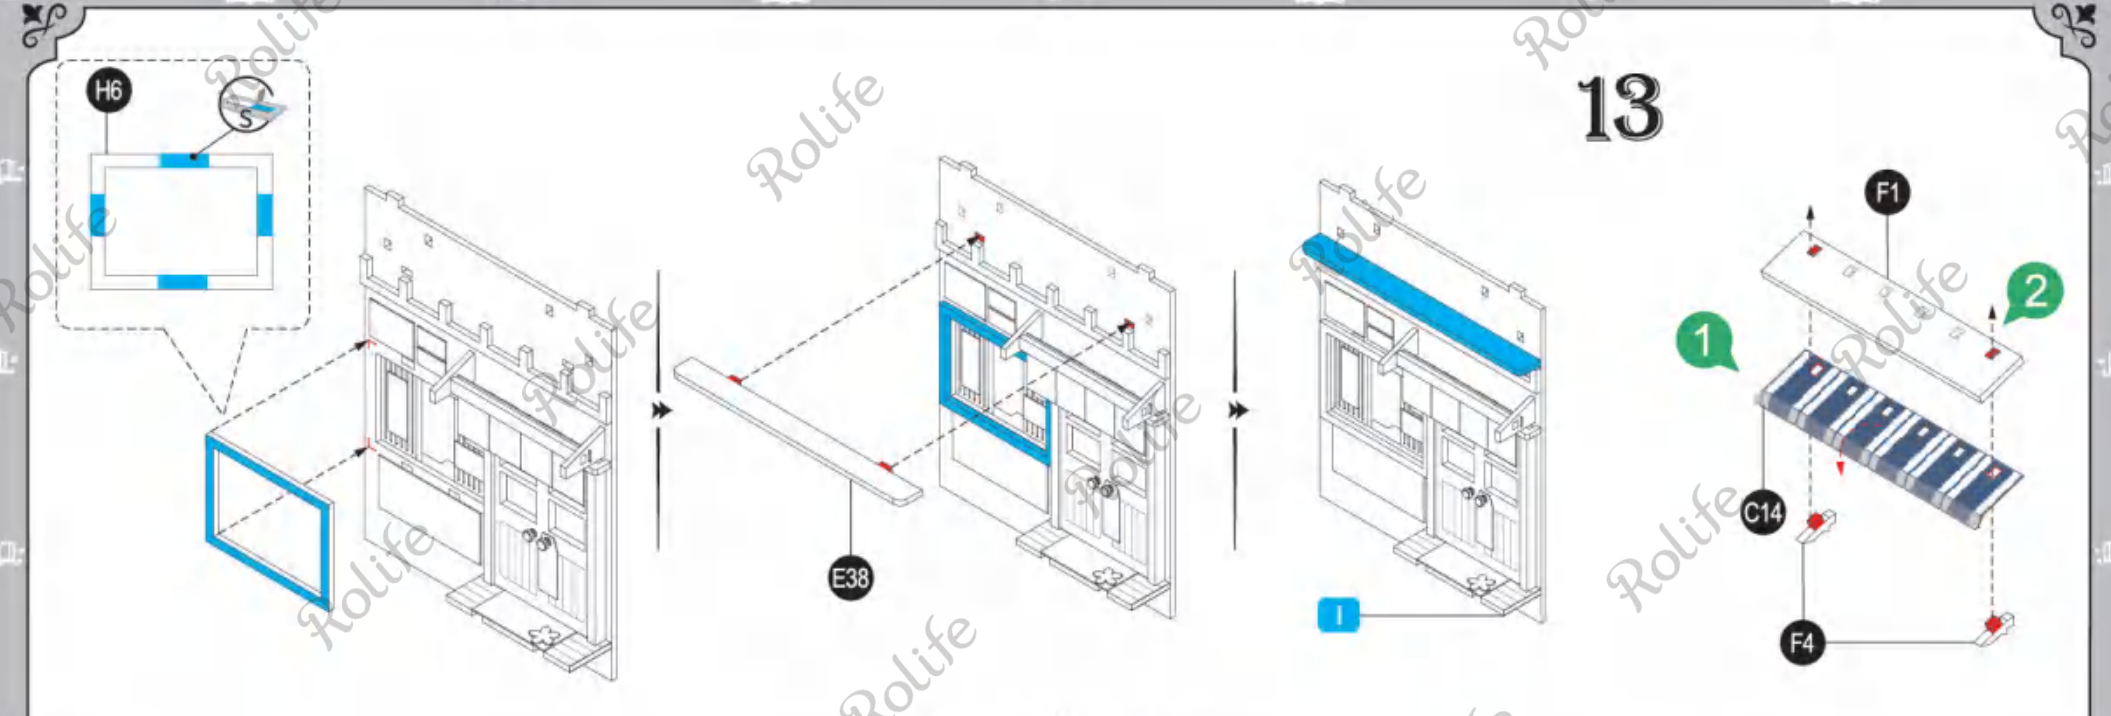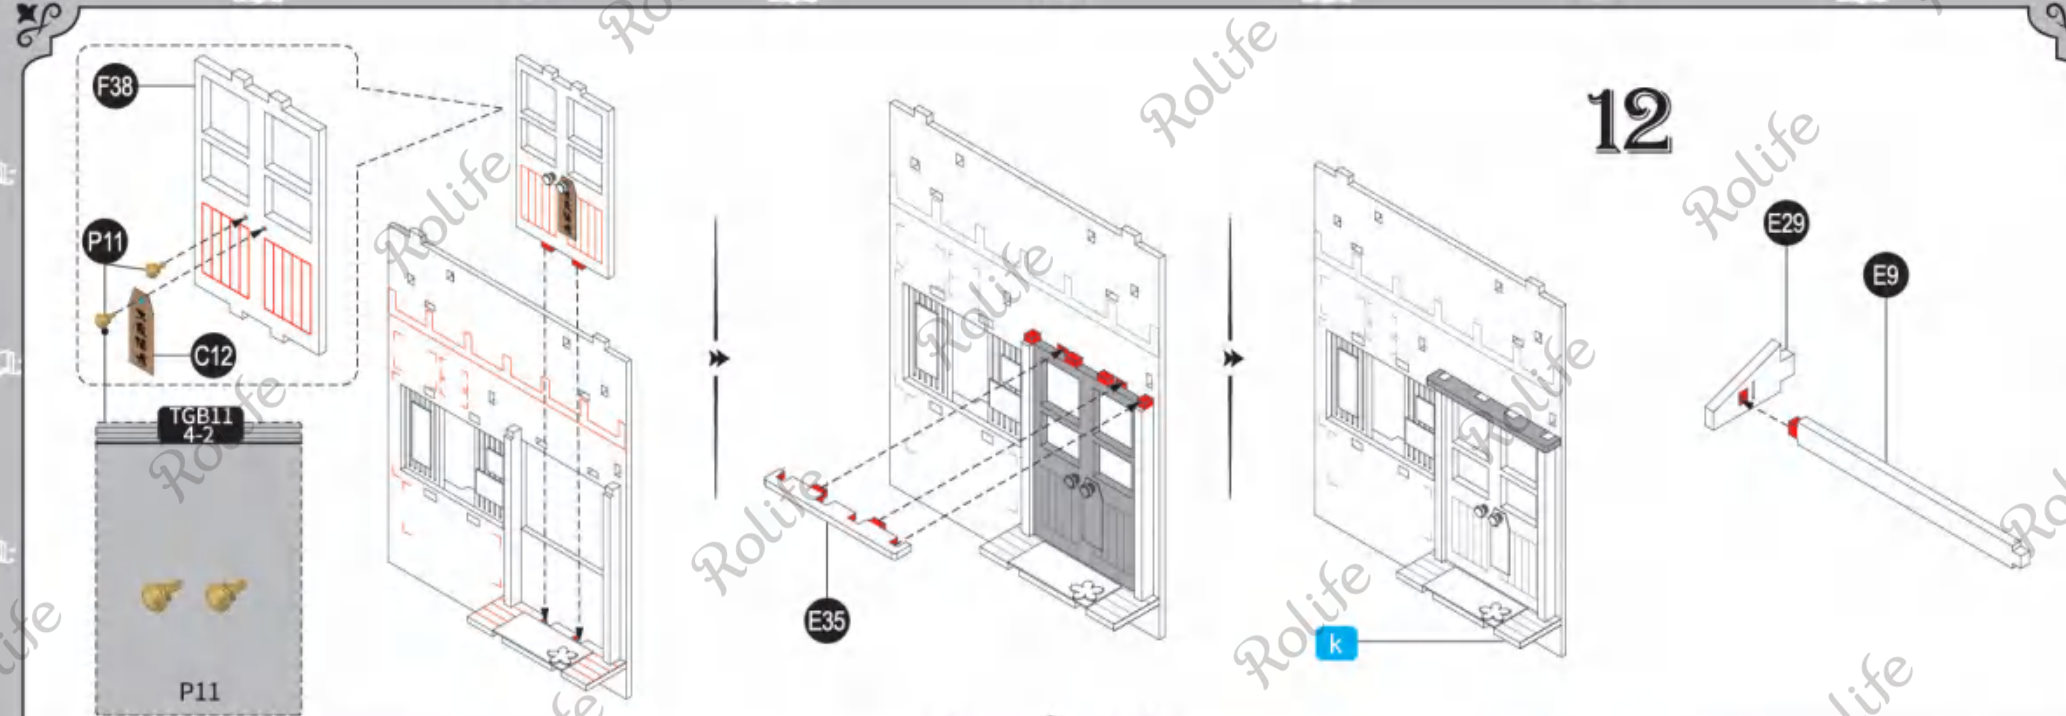

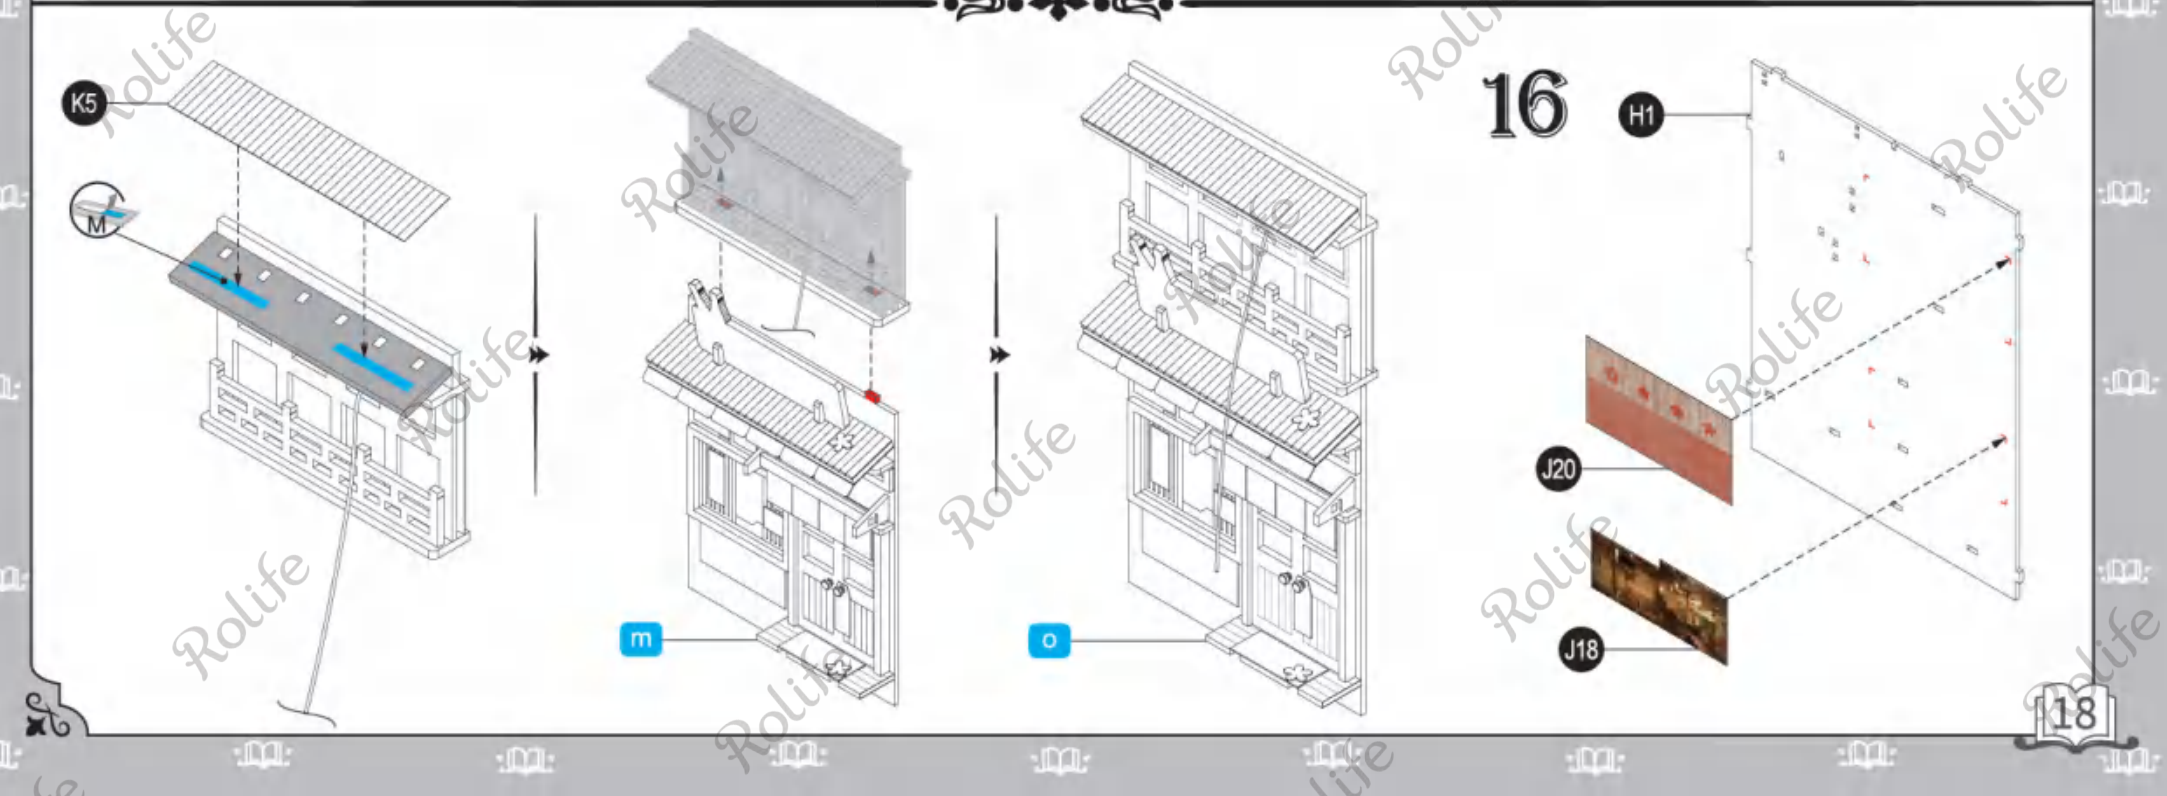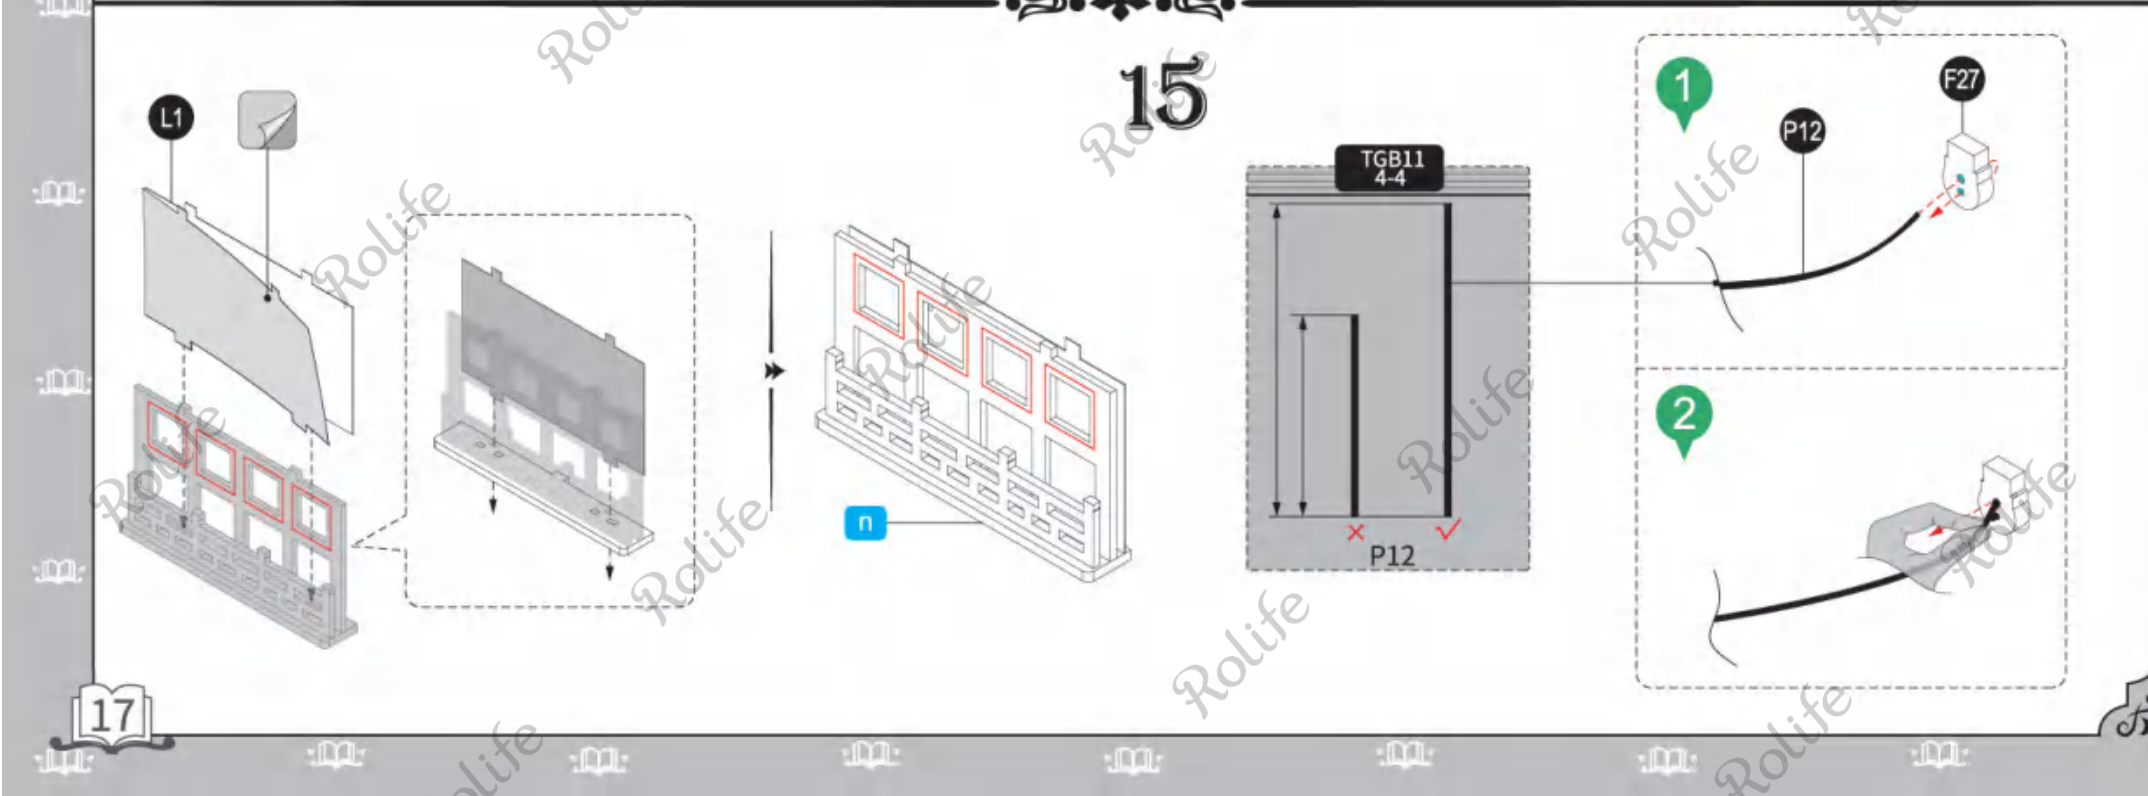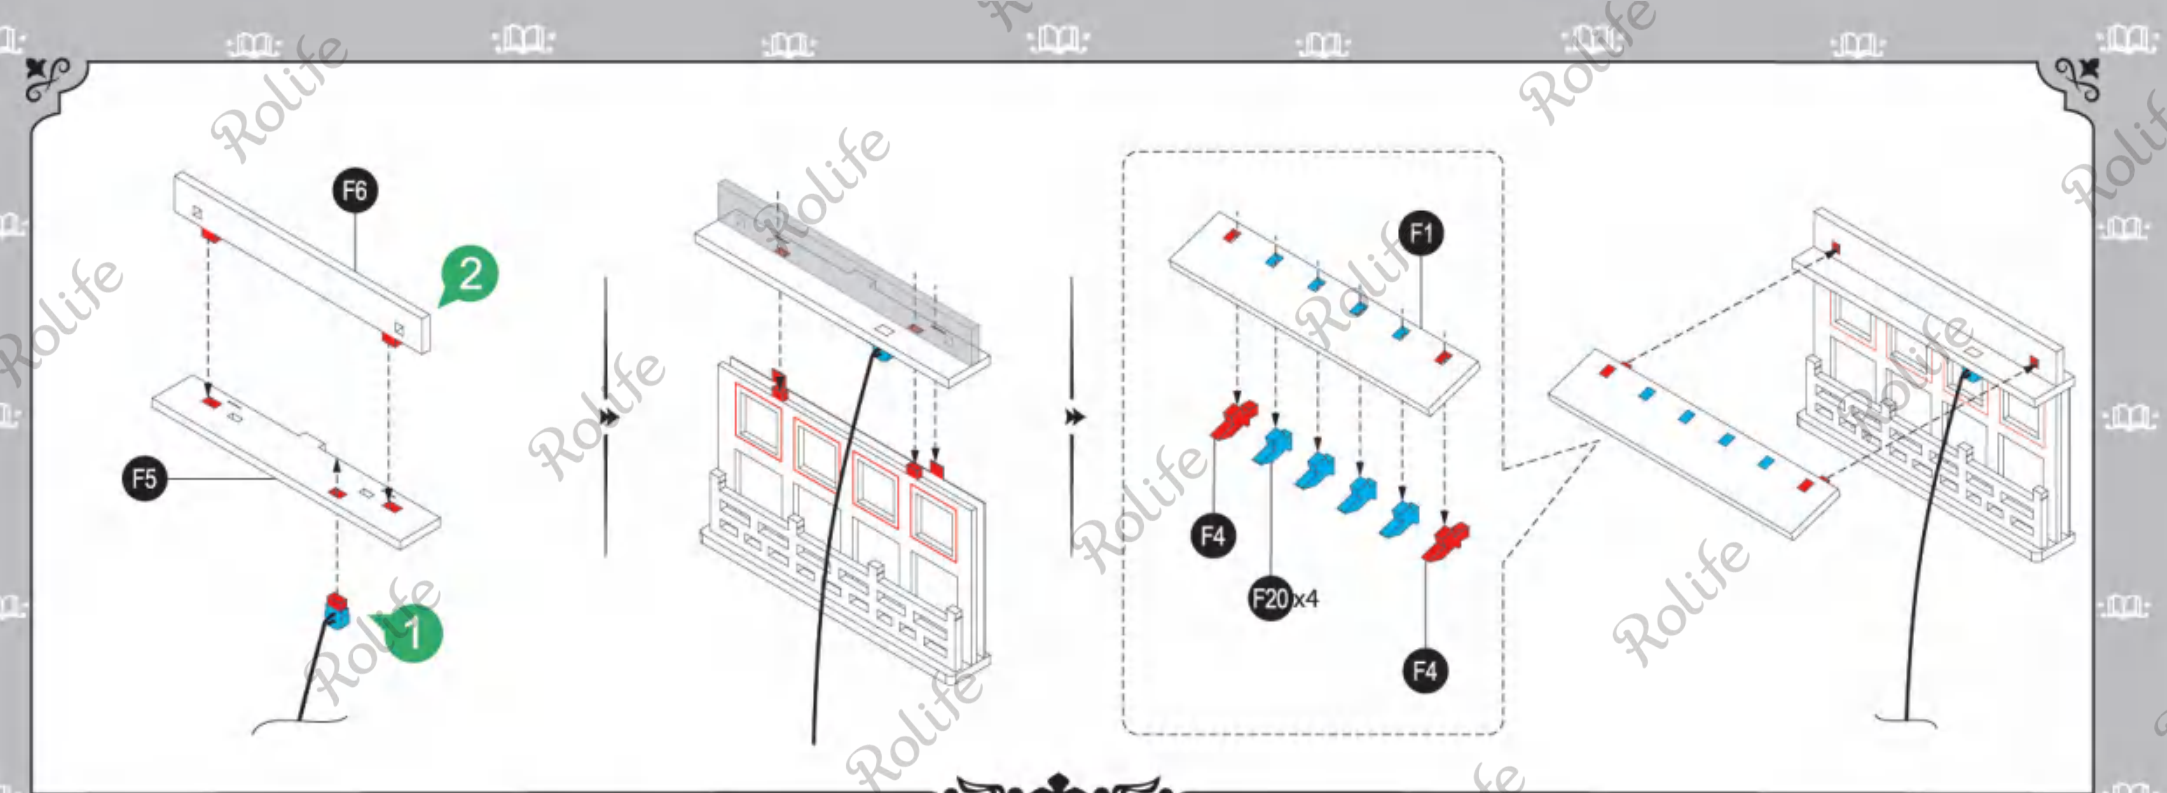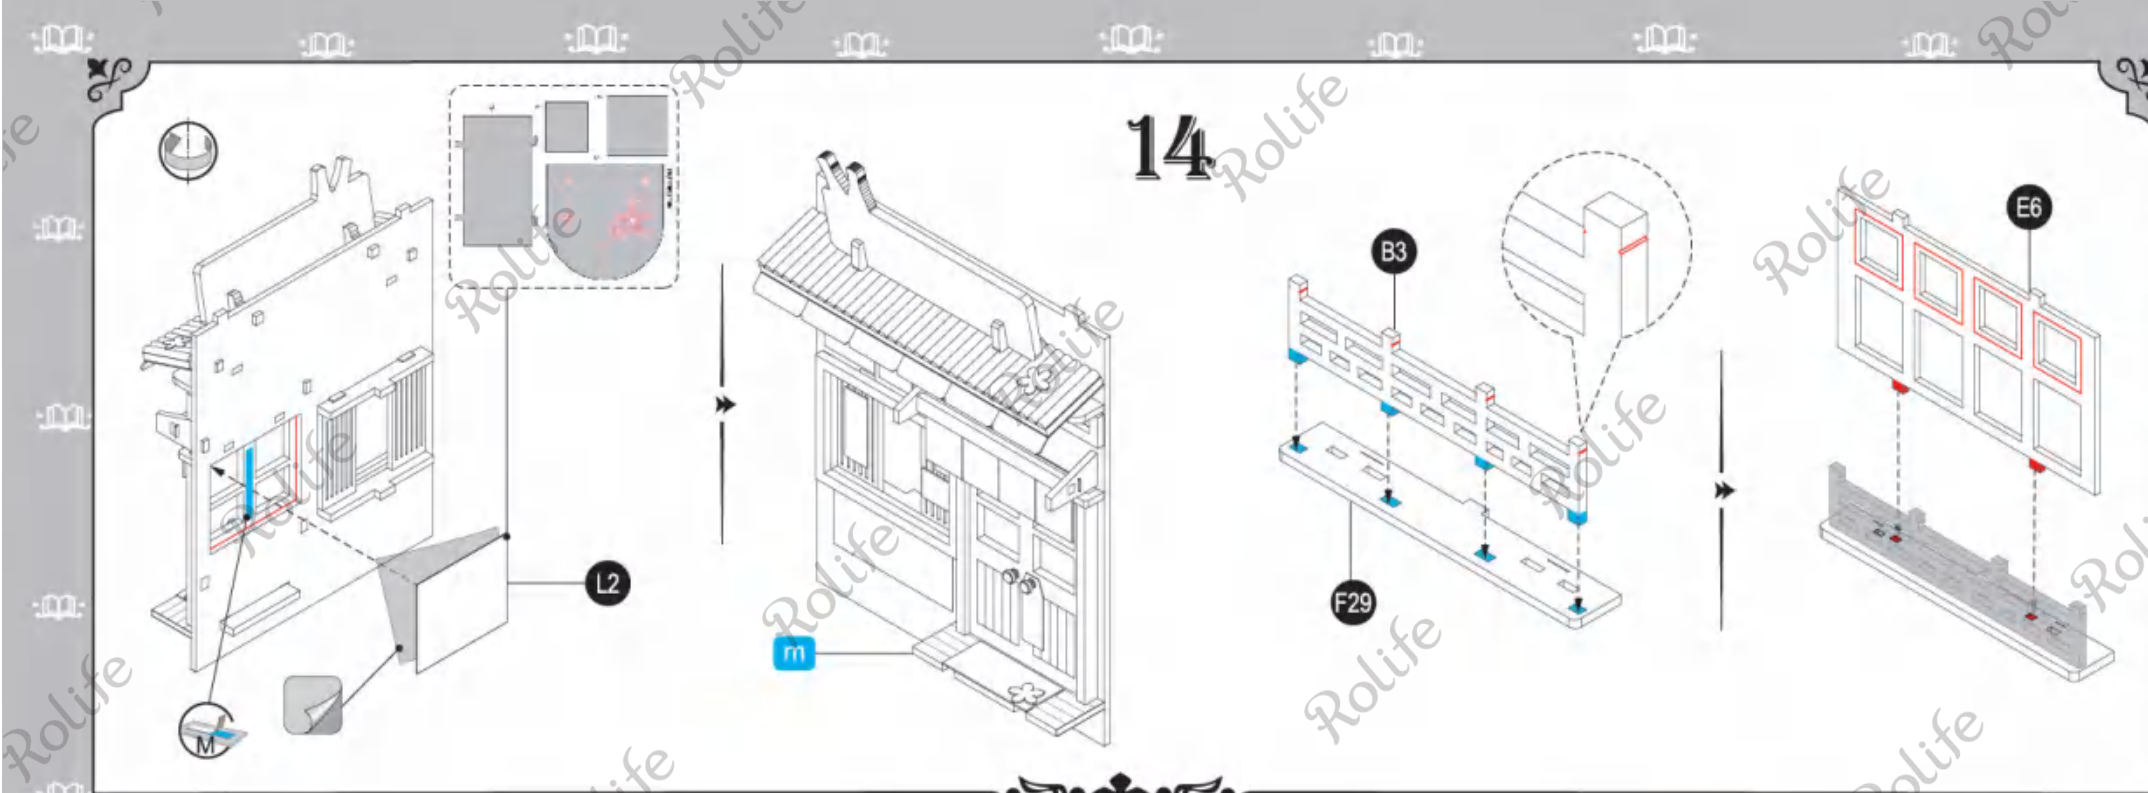


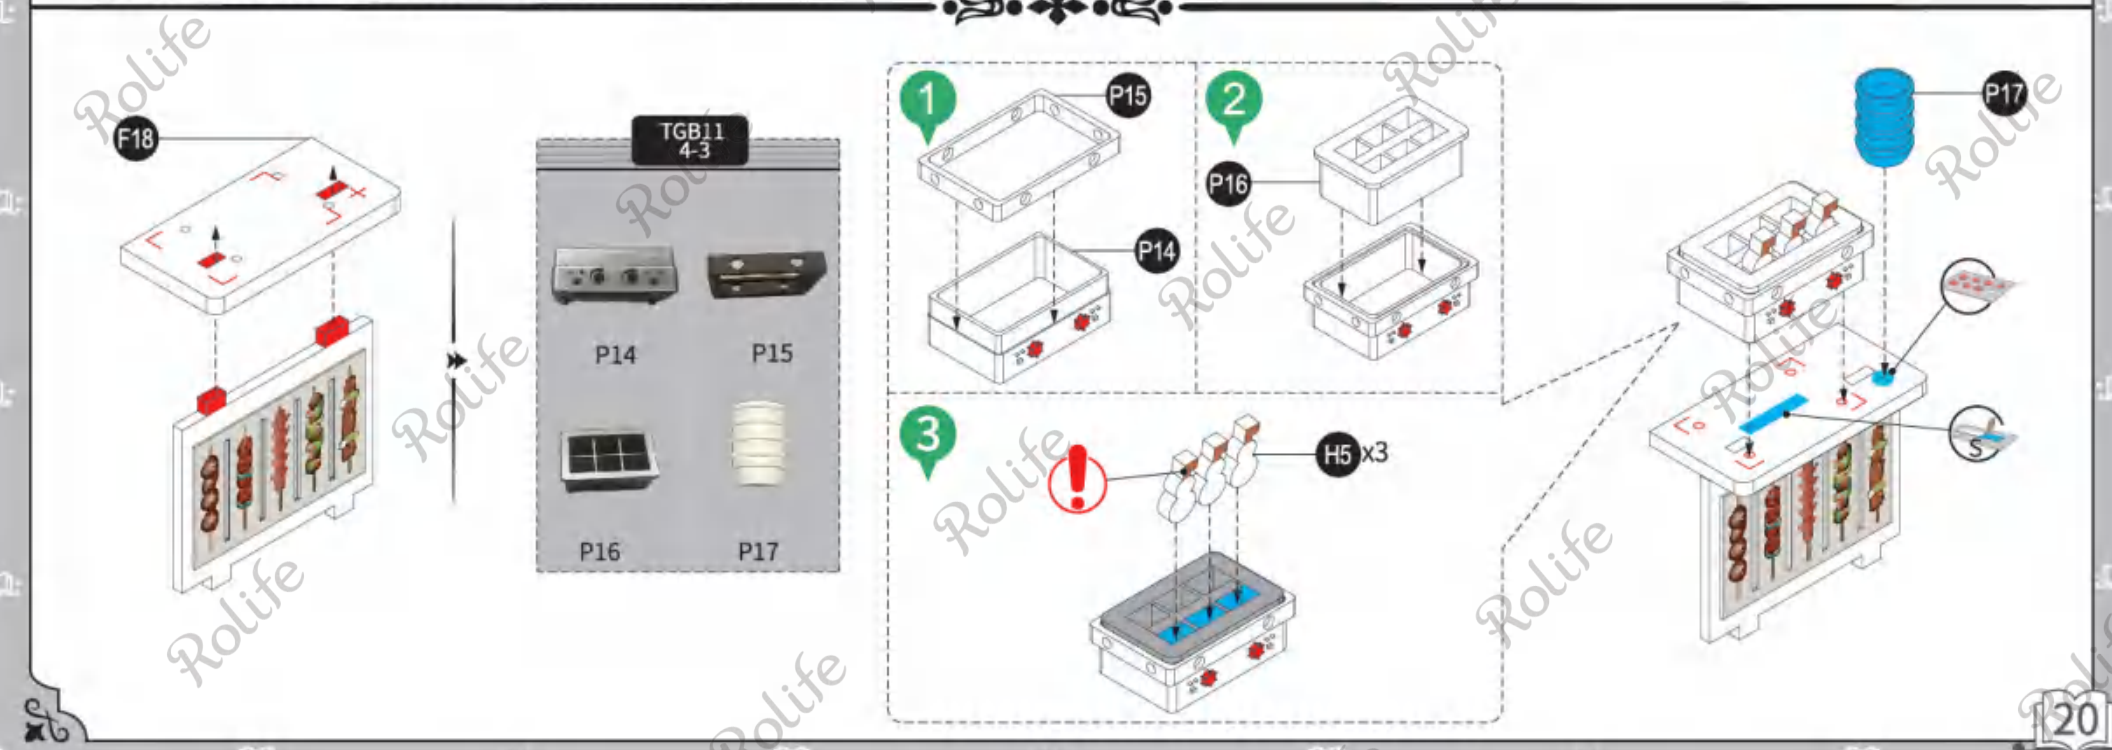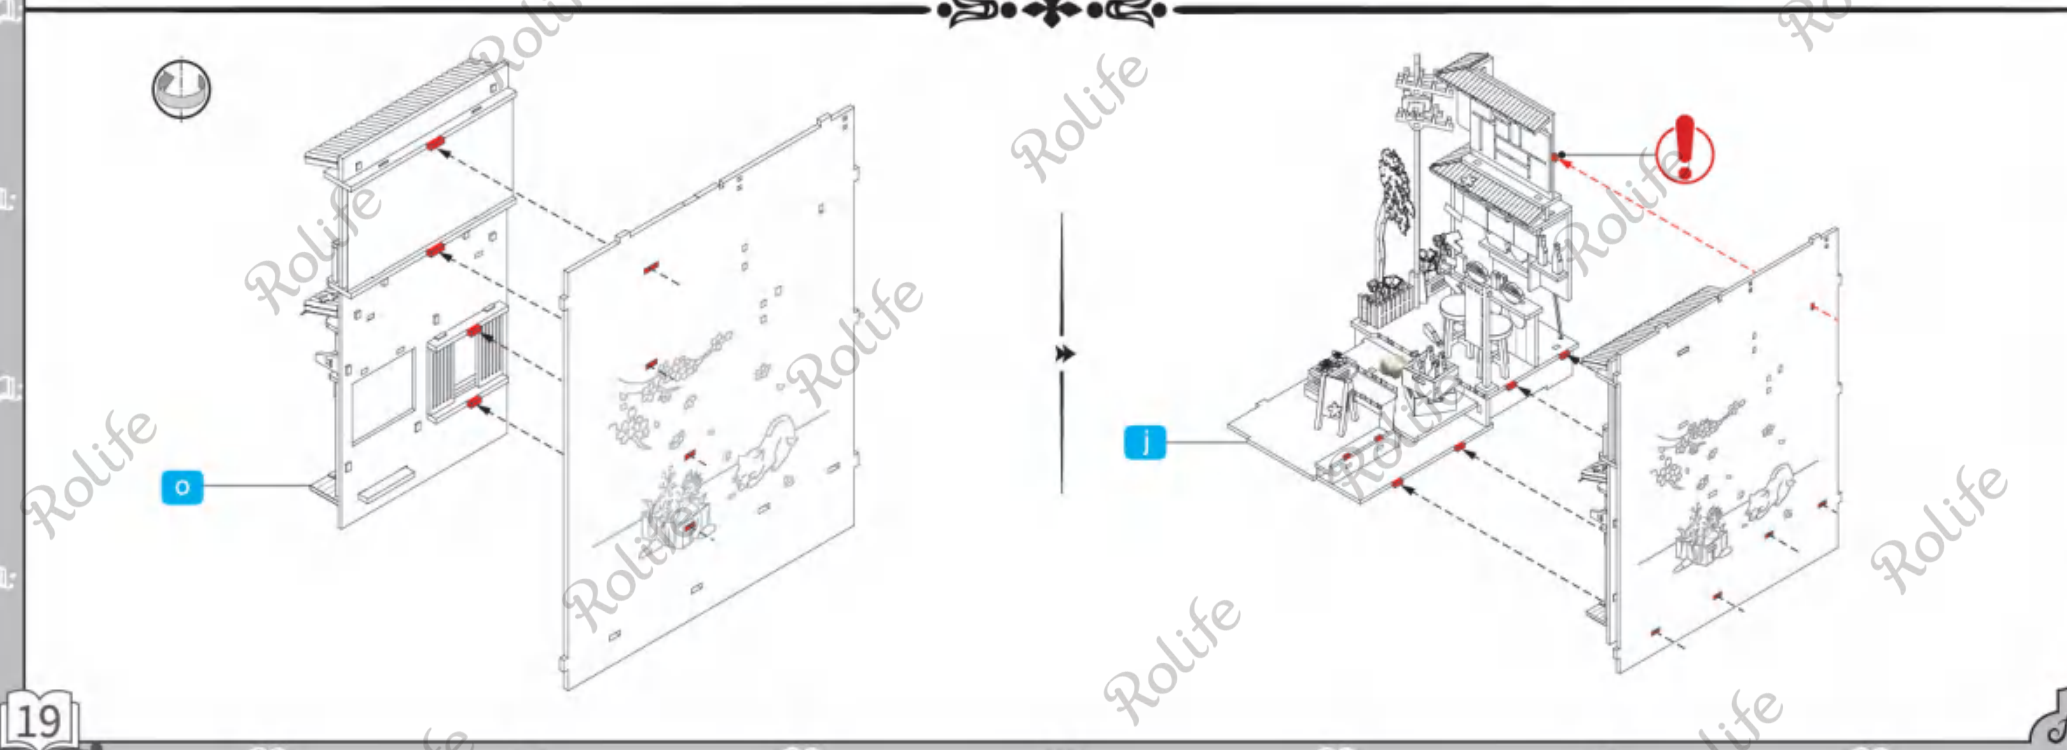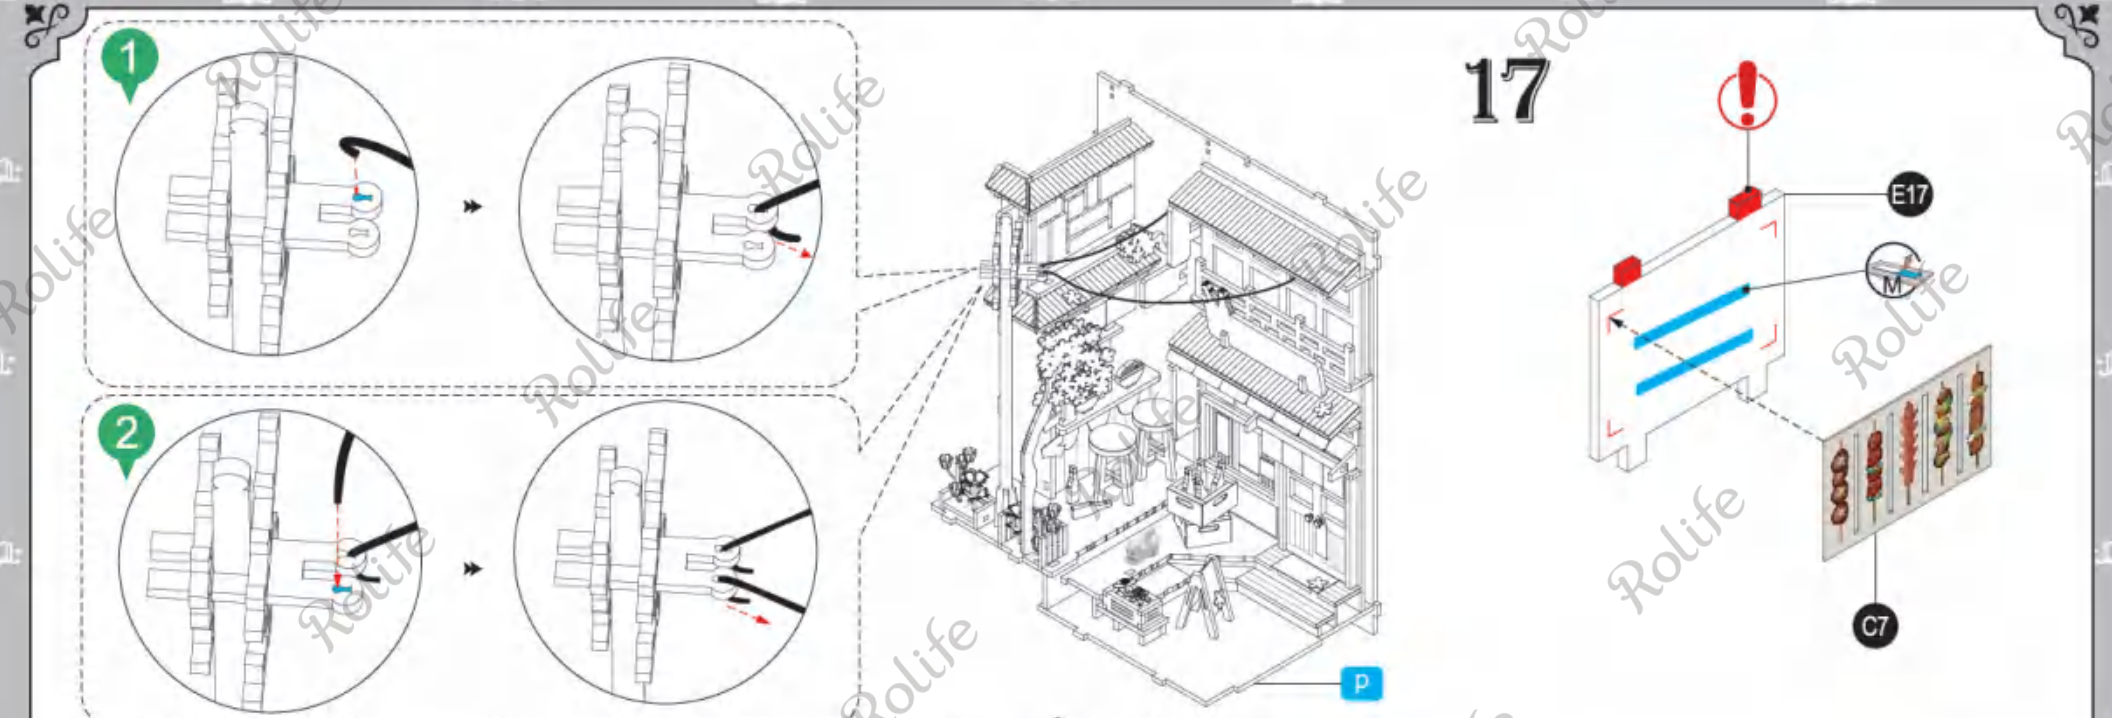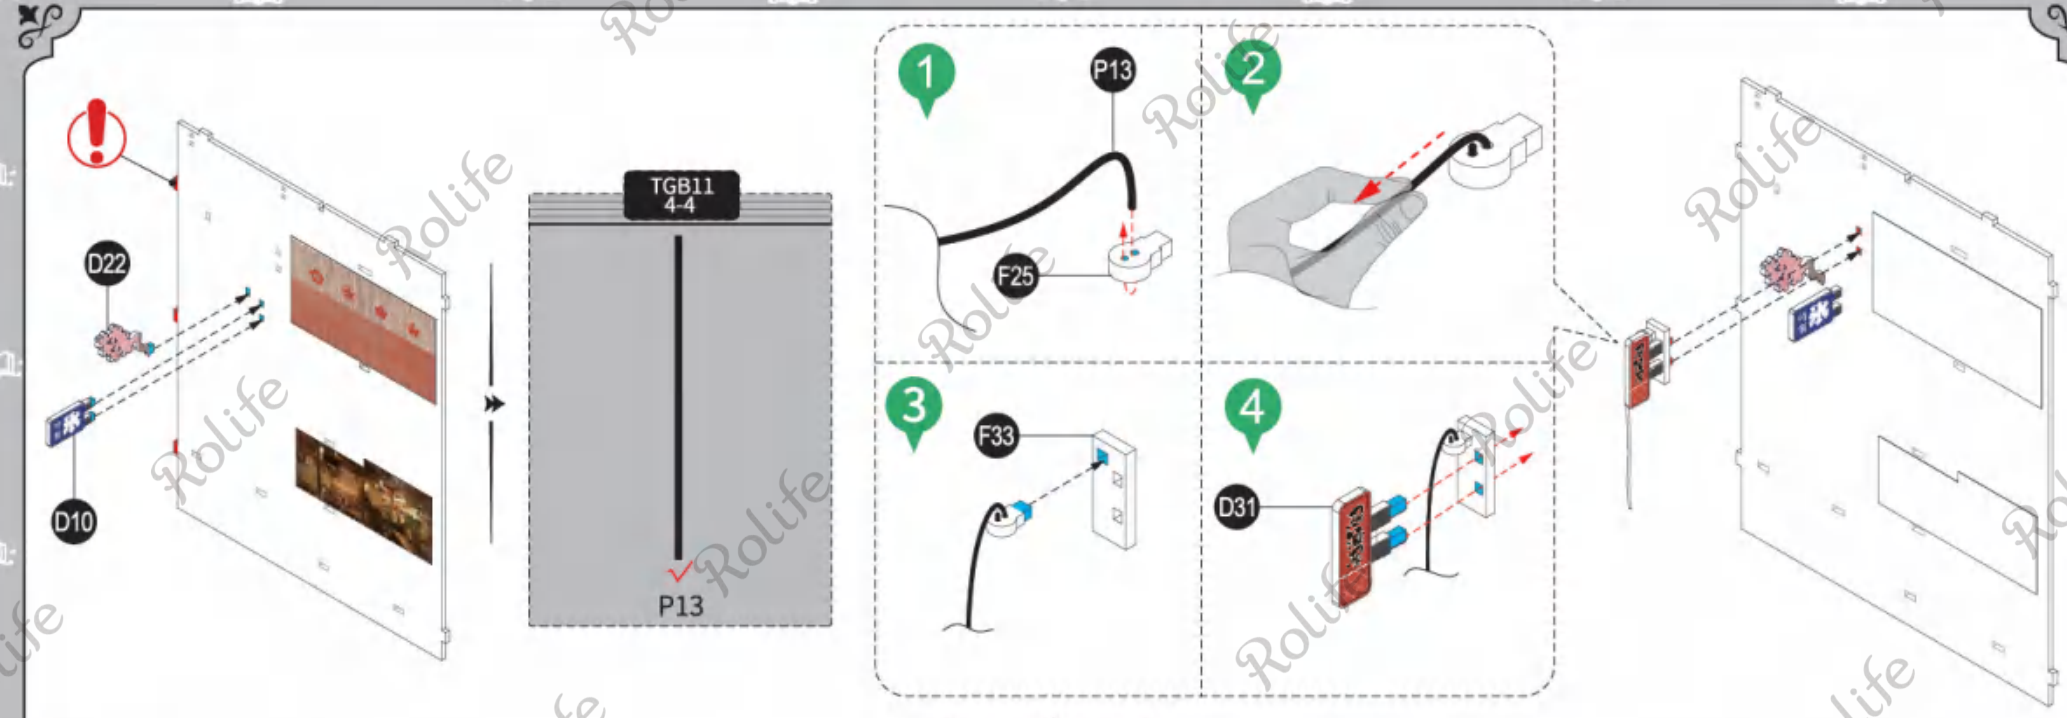


18

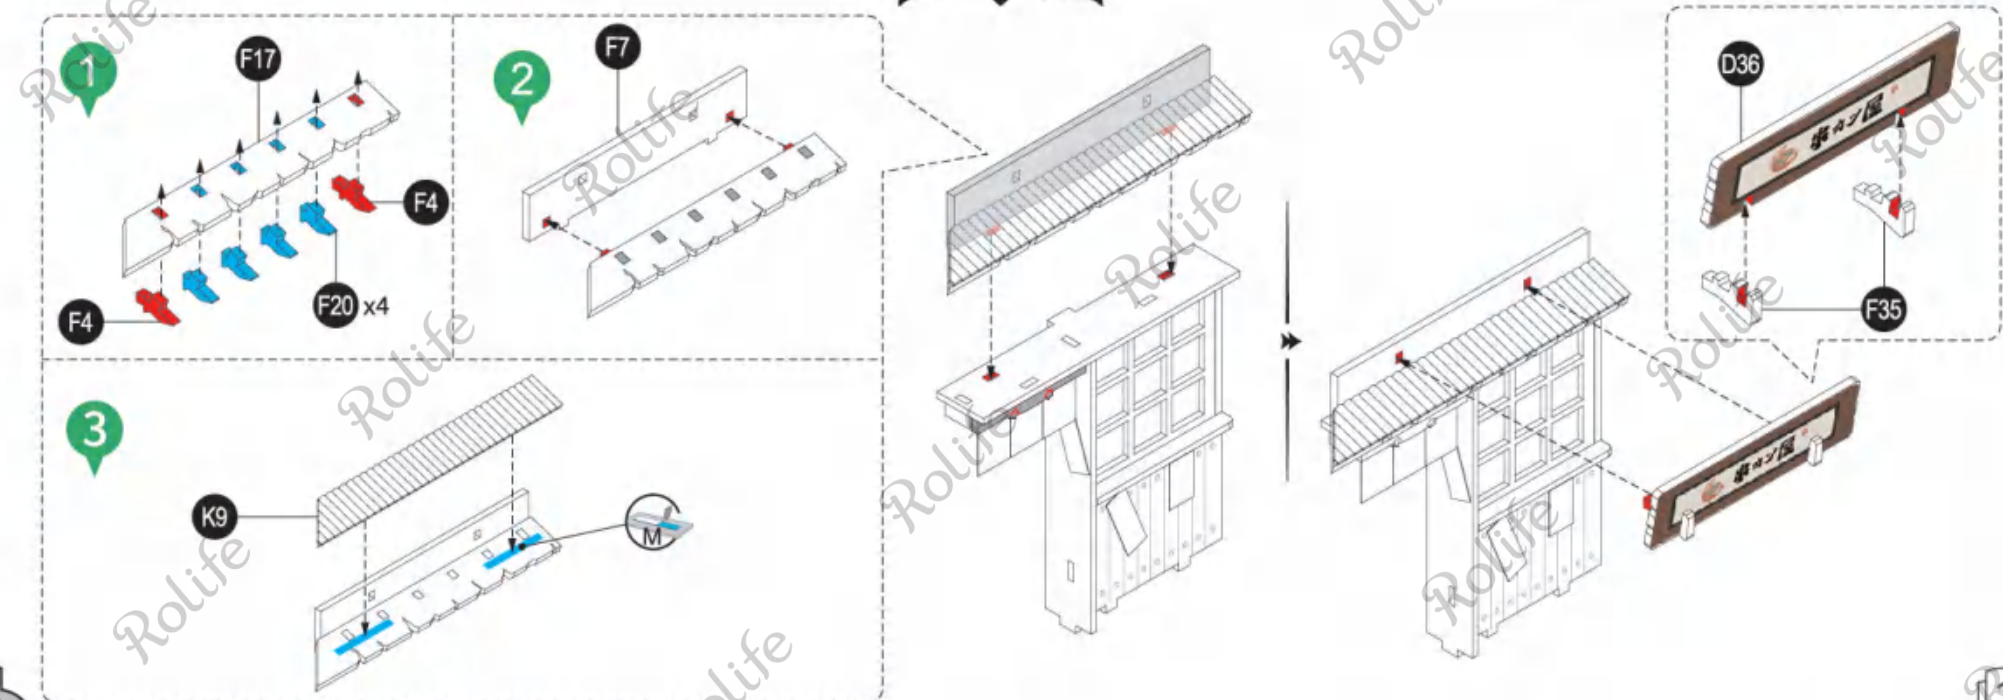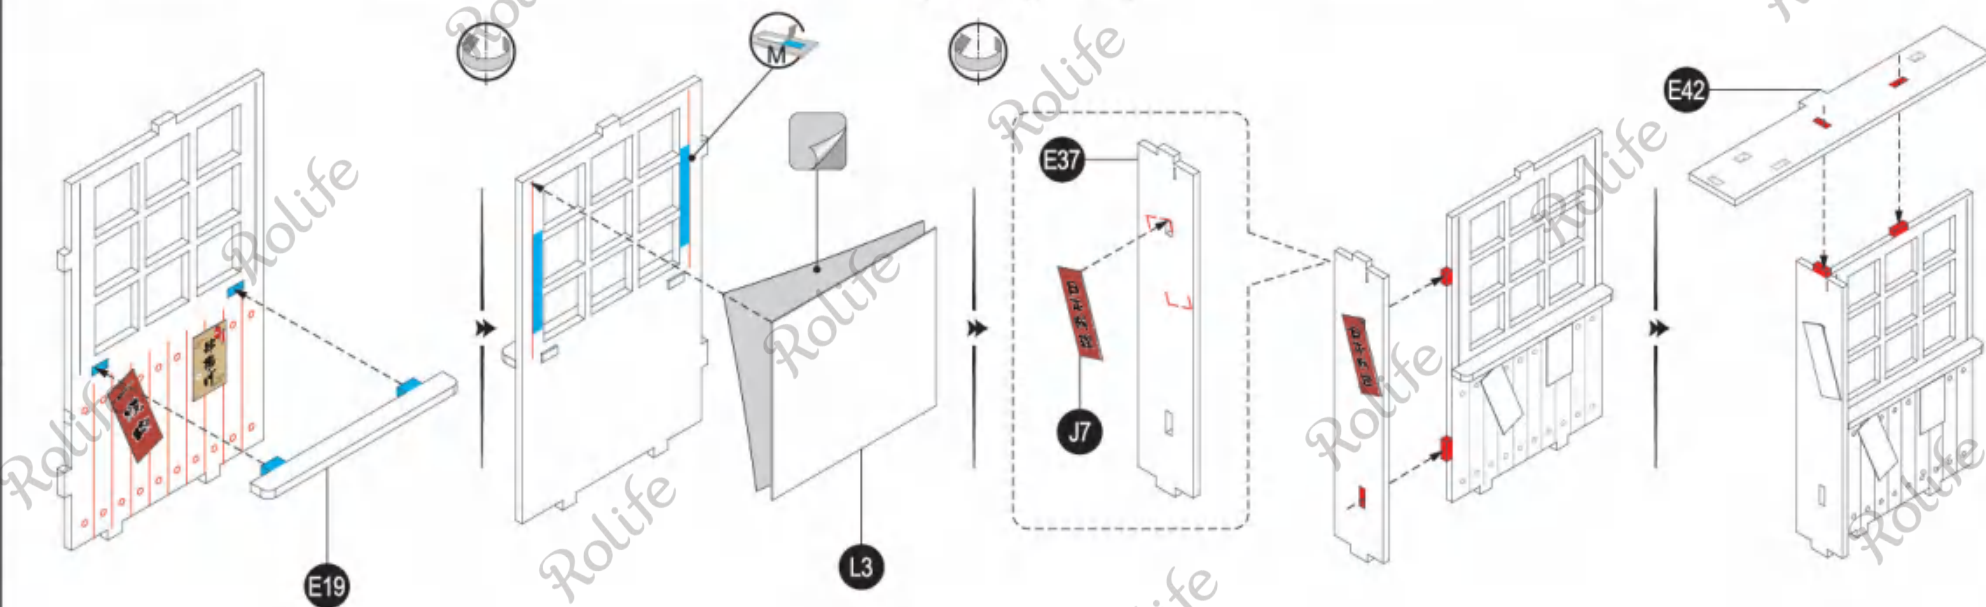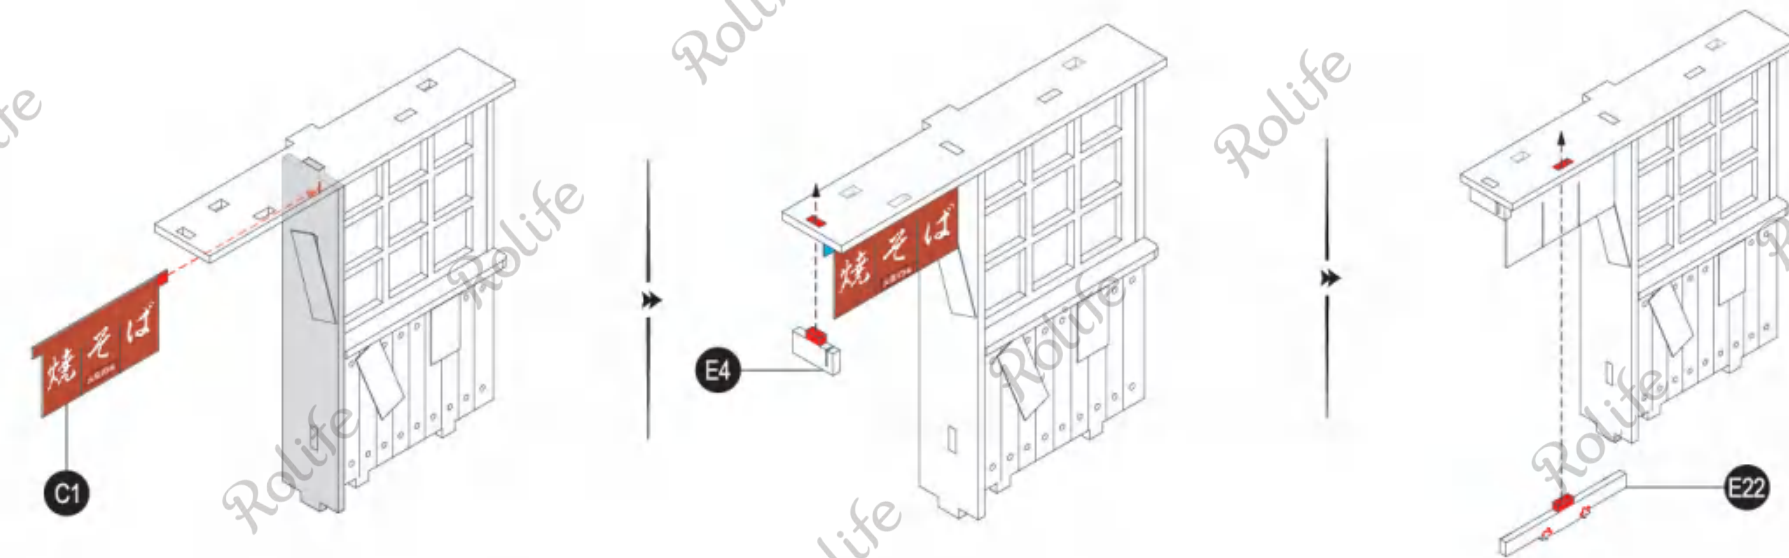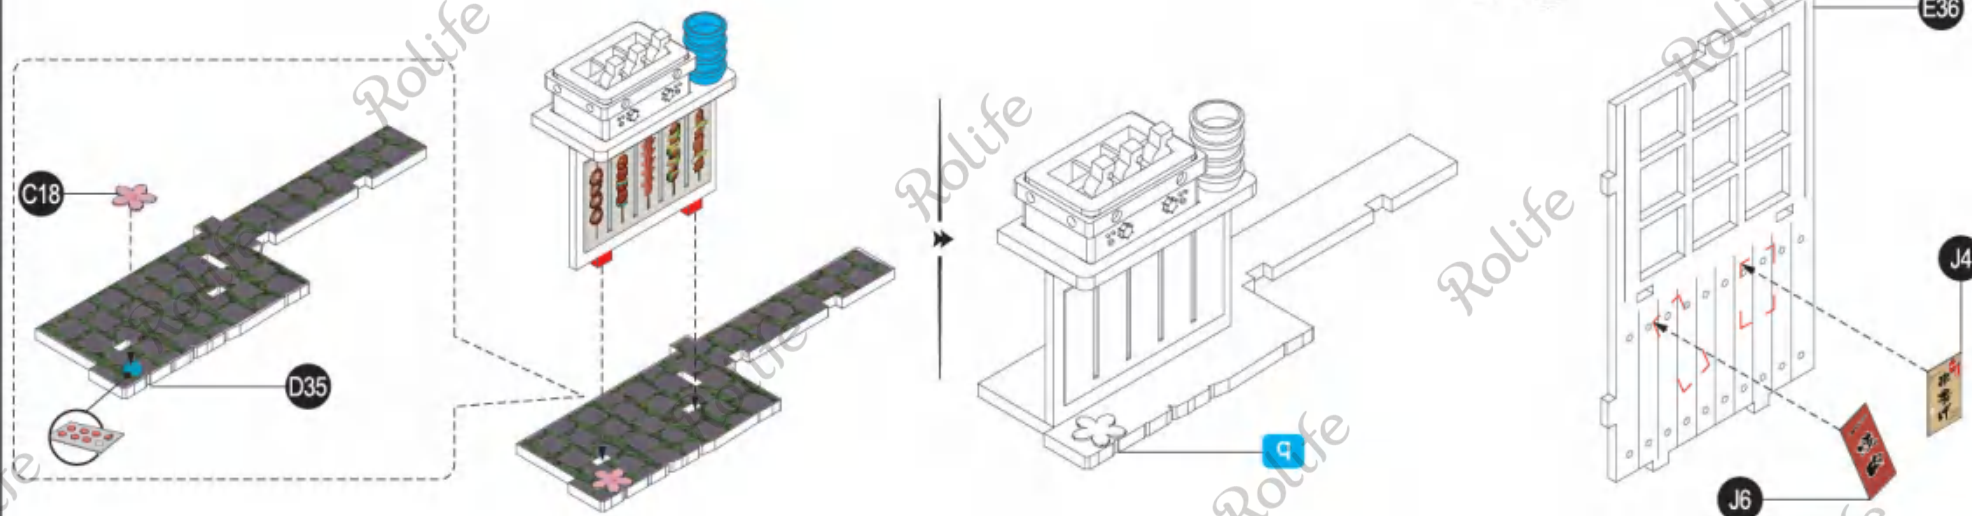


19

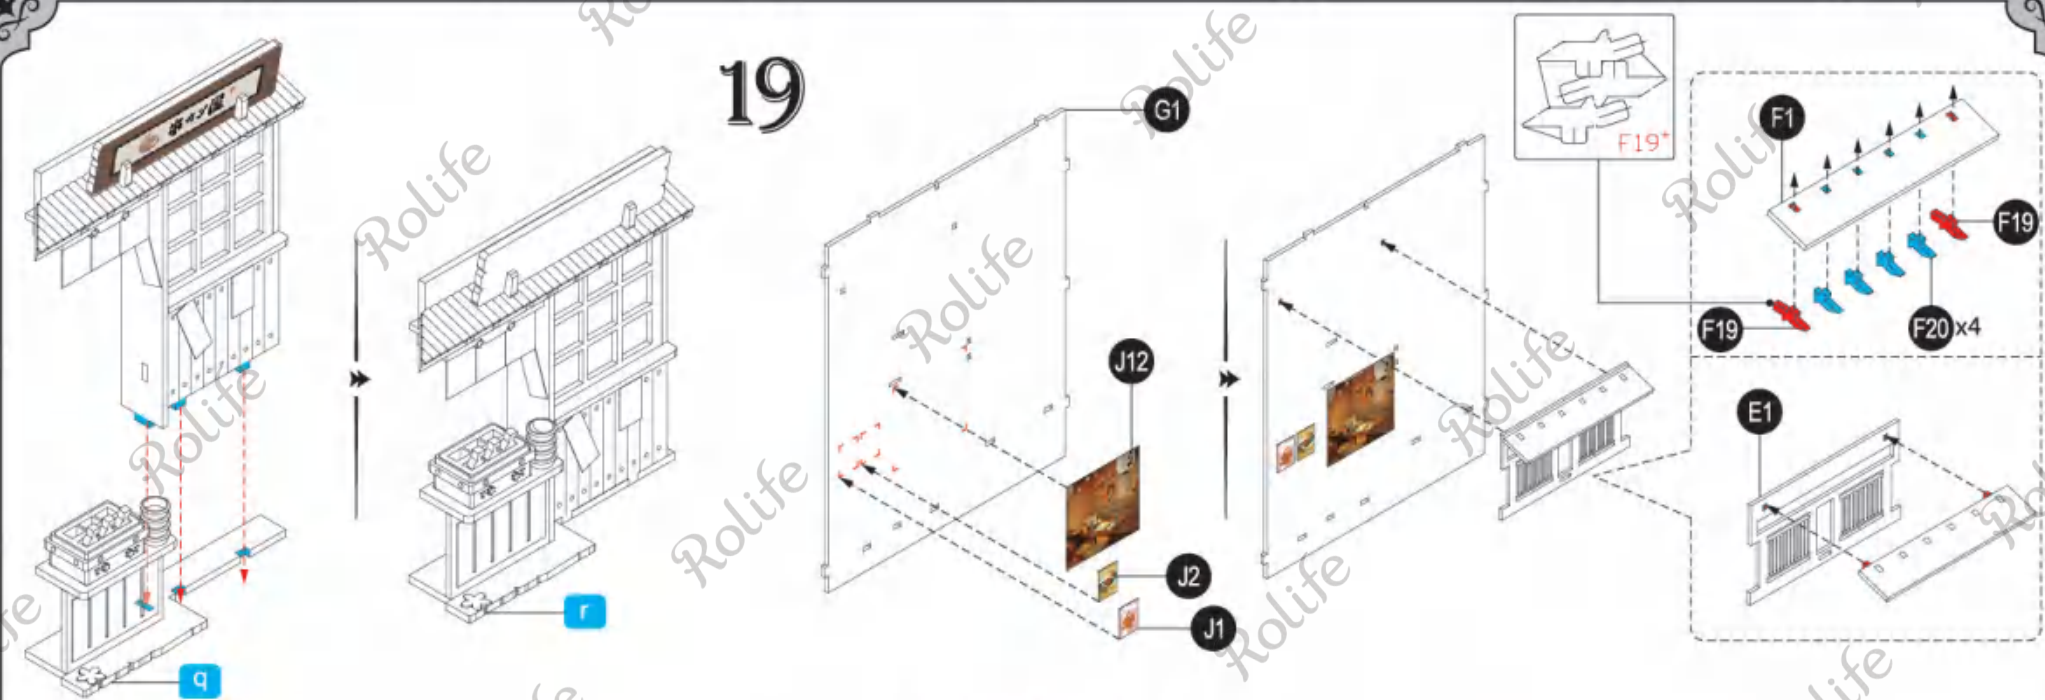


20




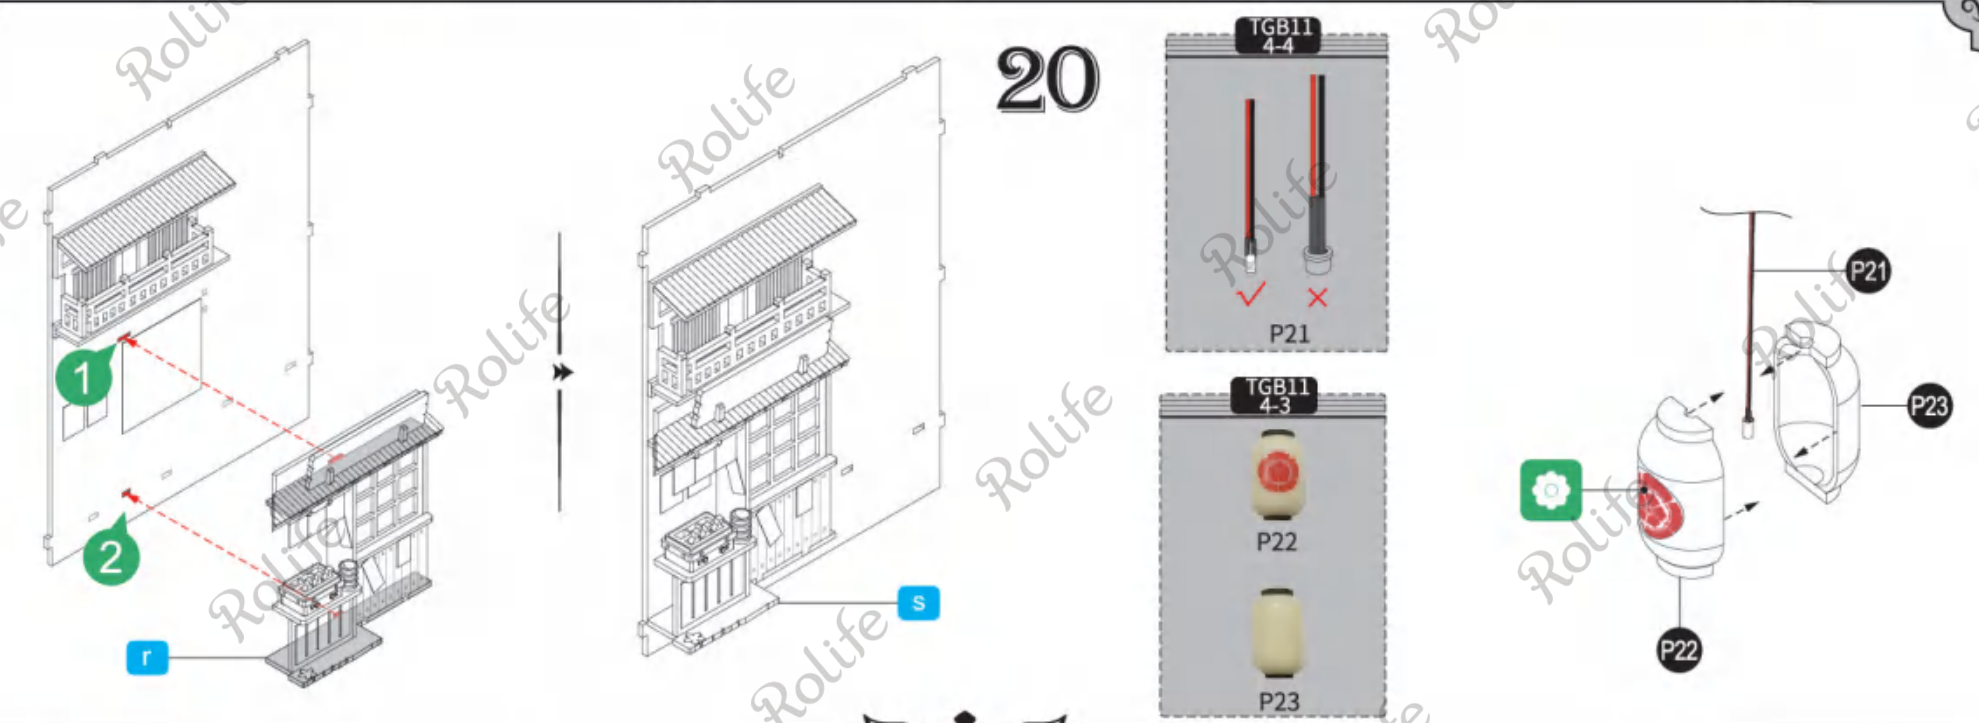


23











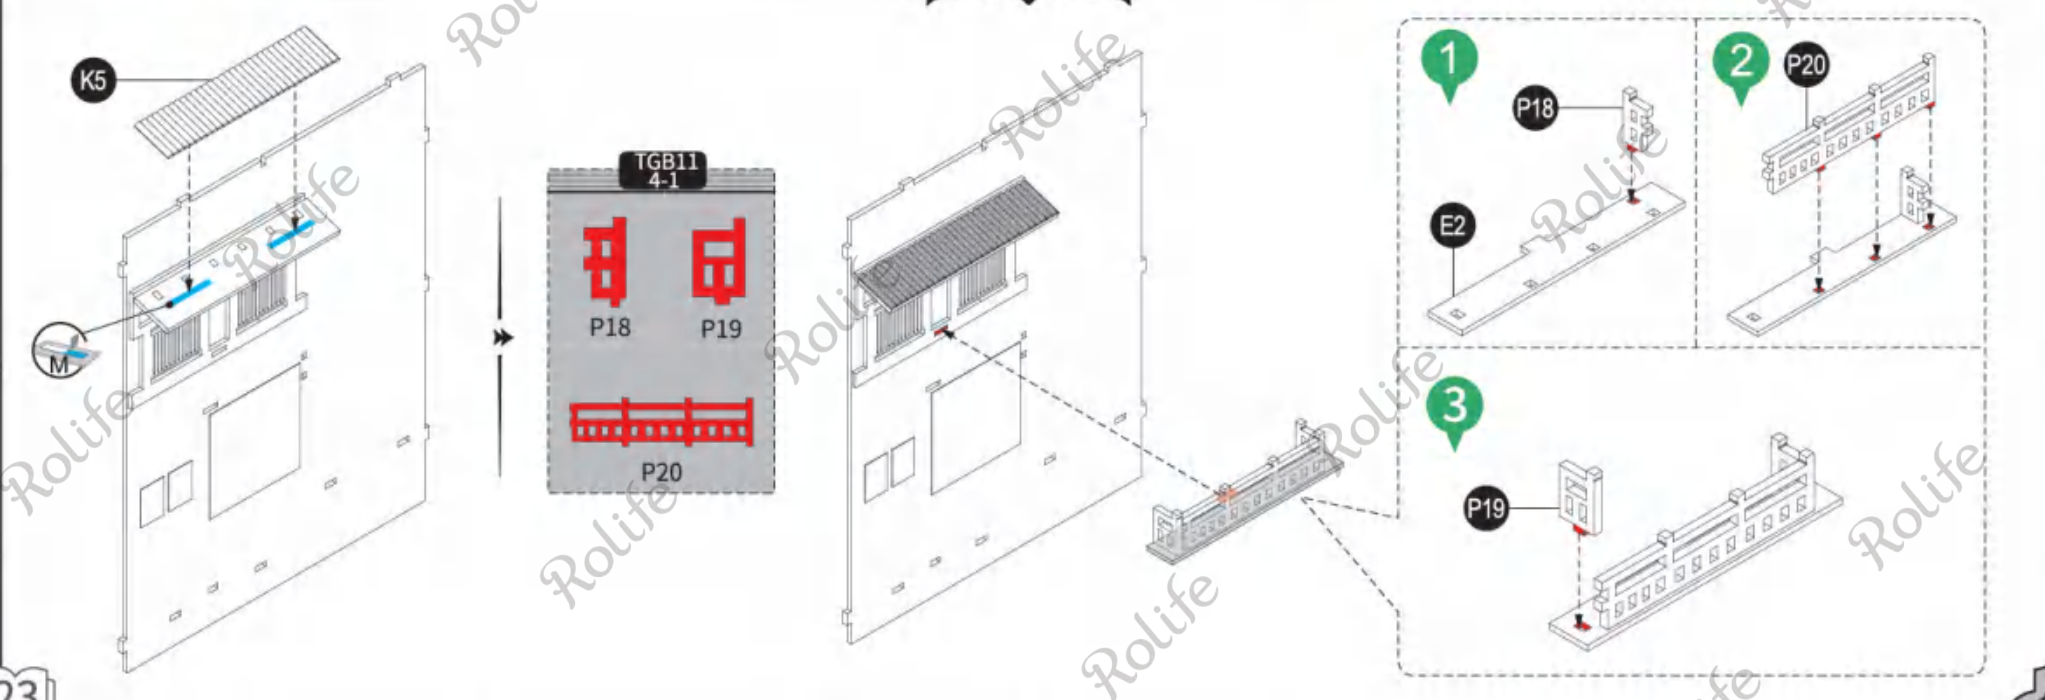


24







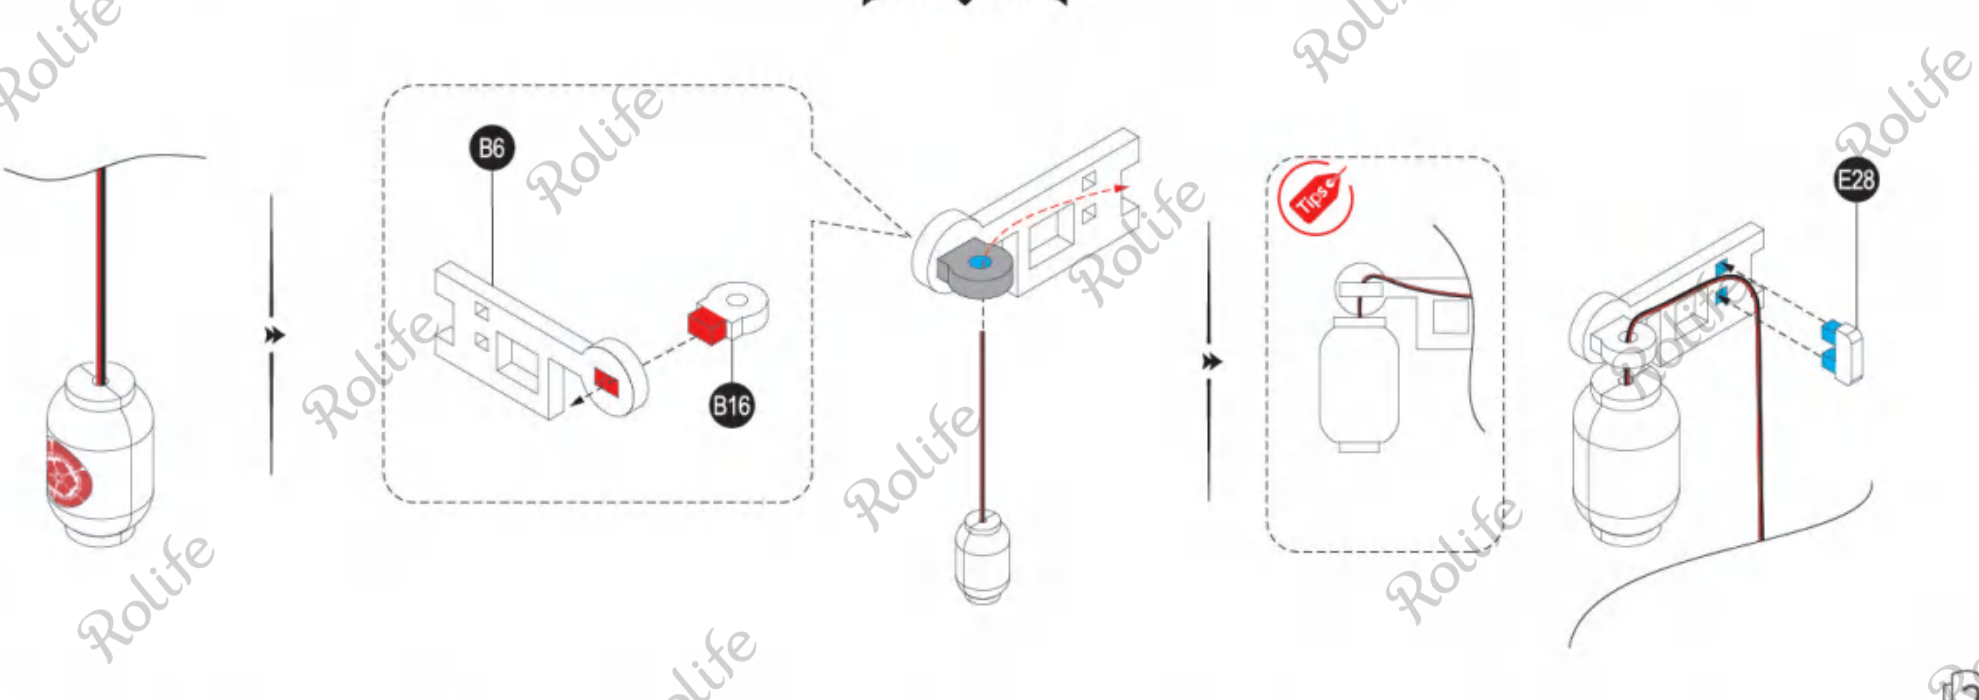


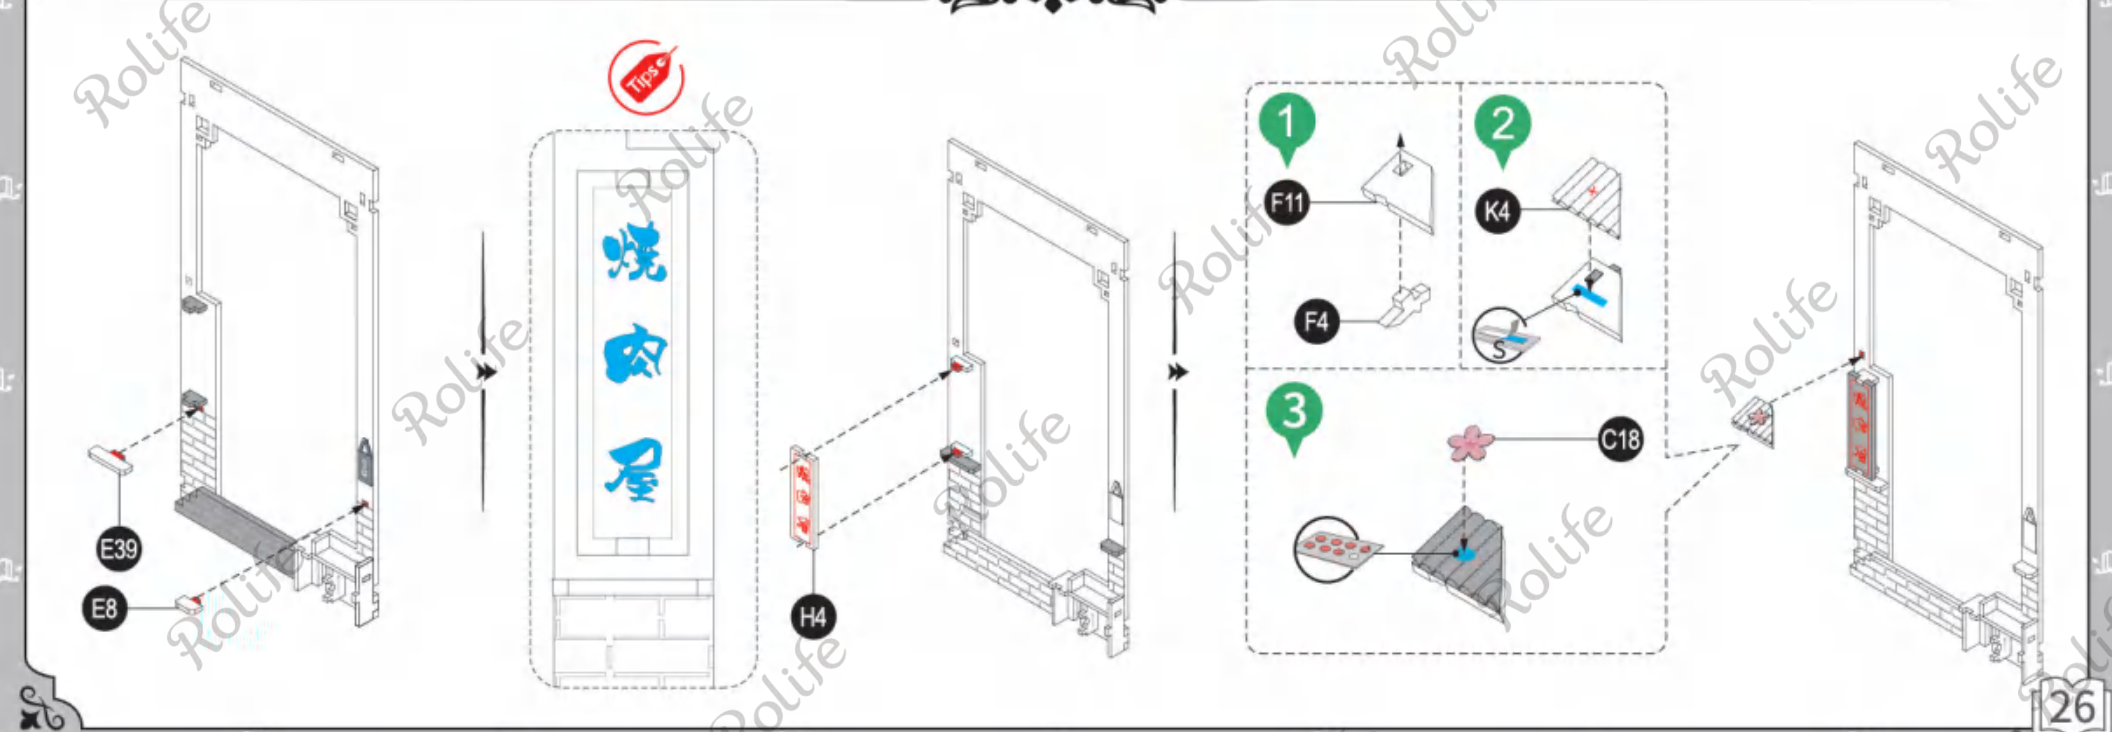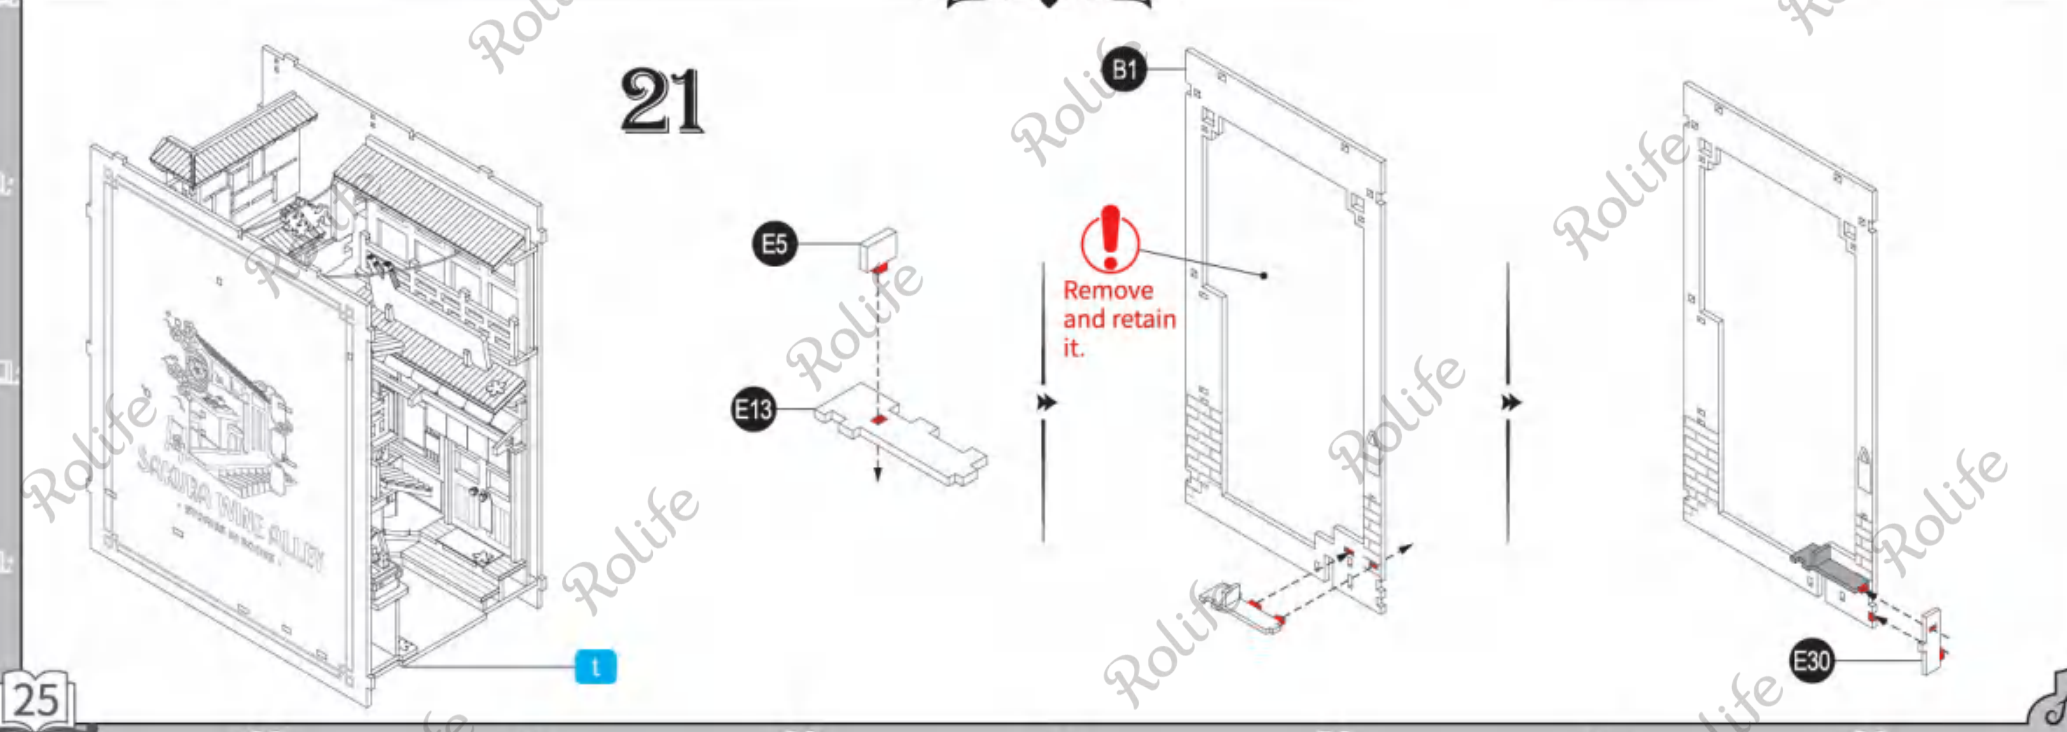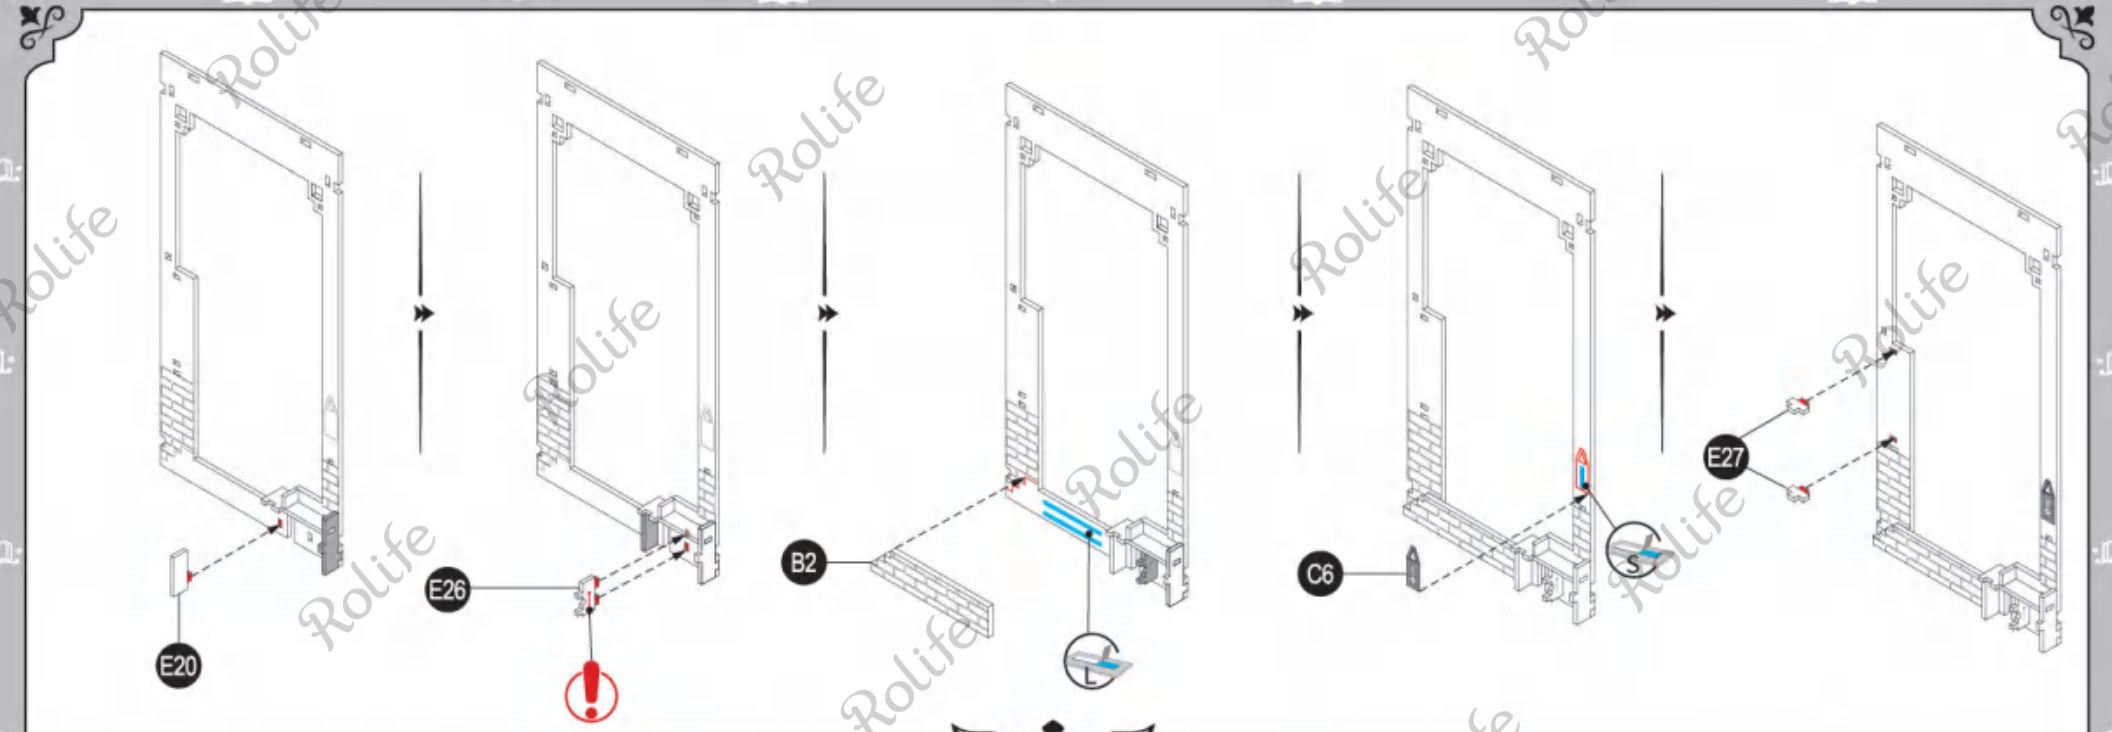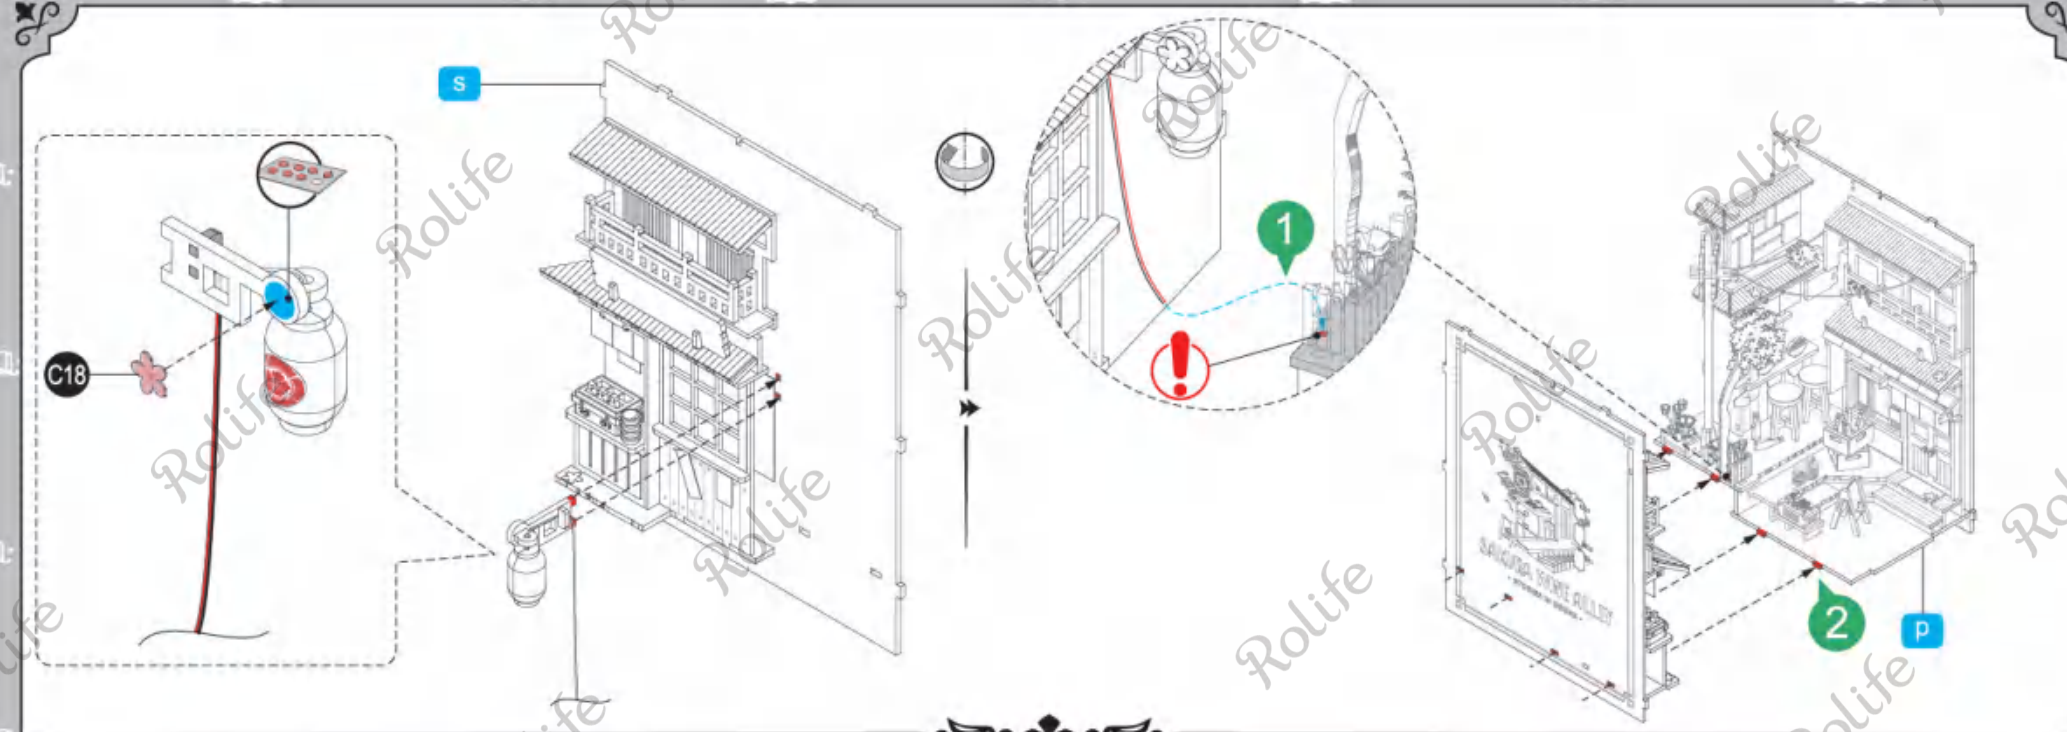





22

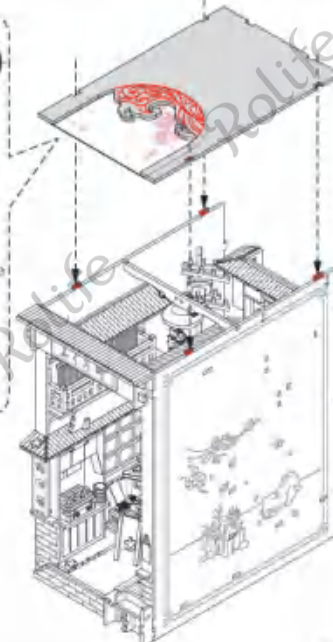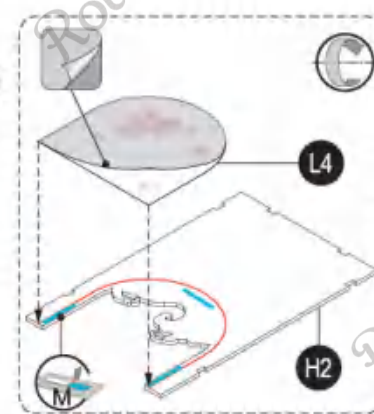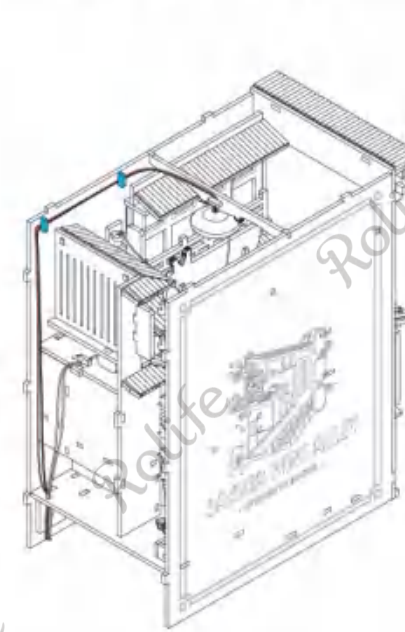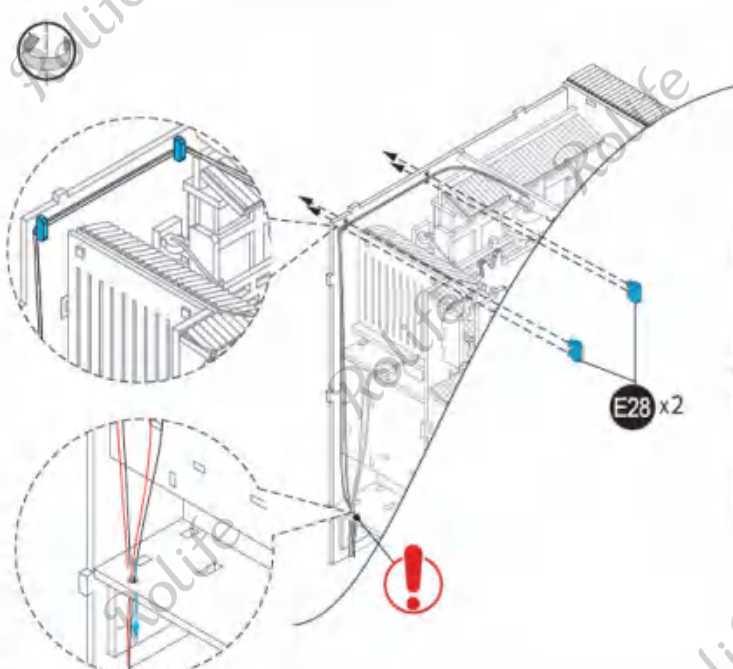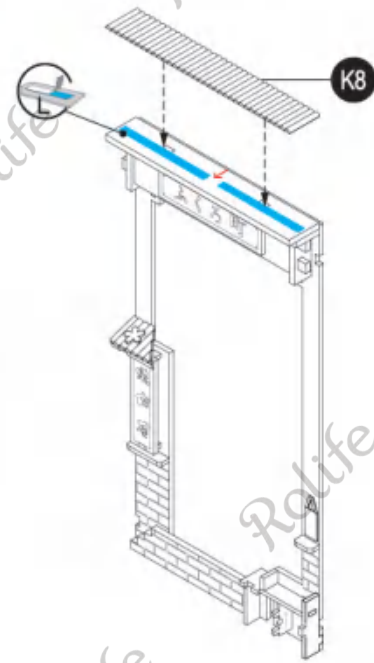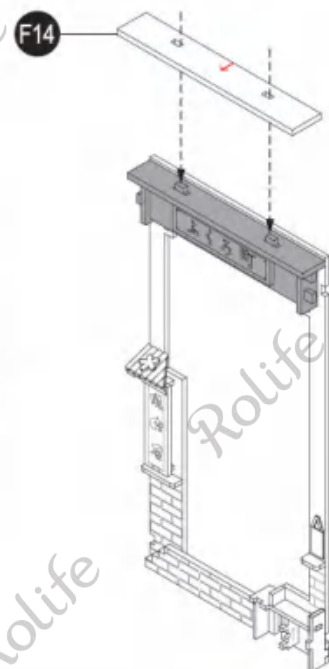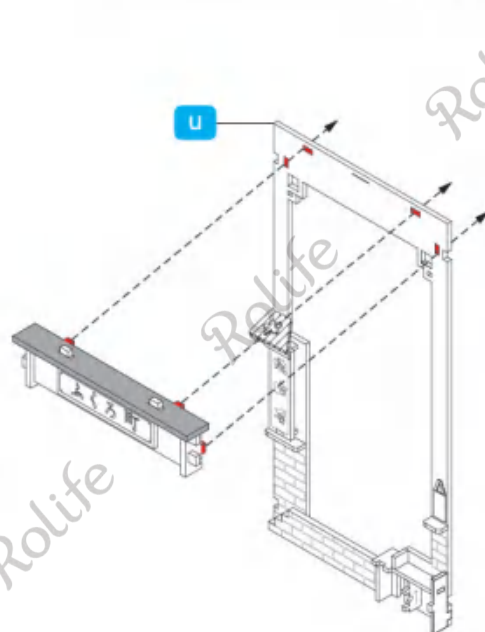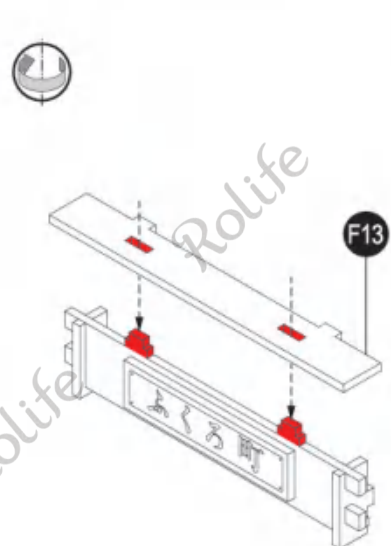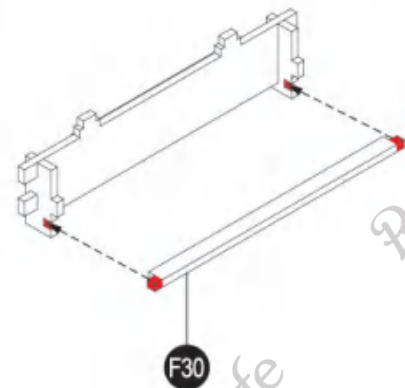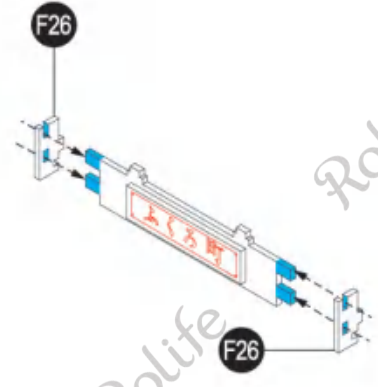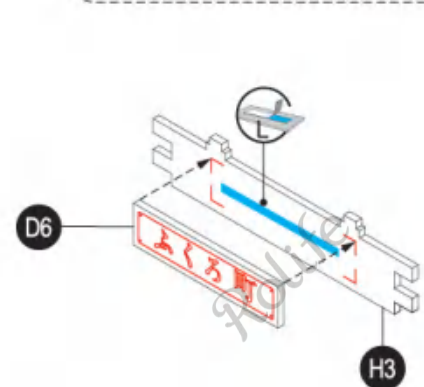


23

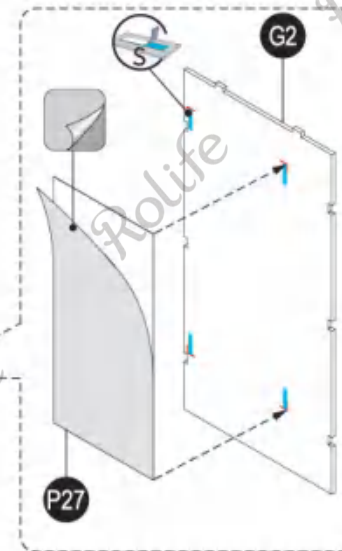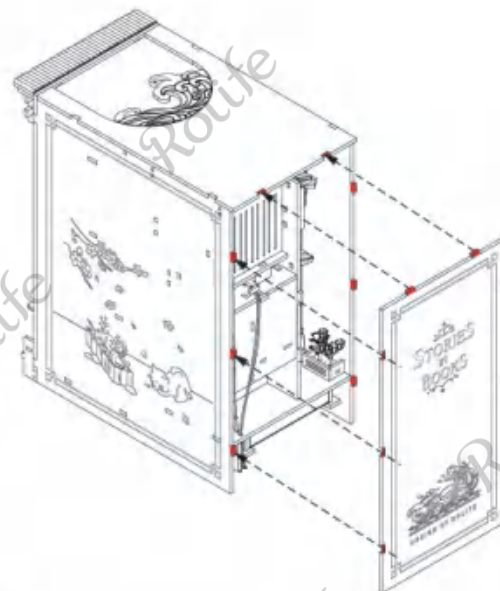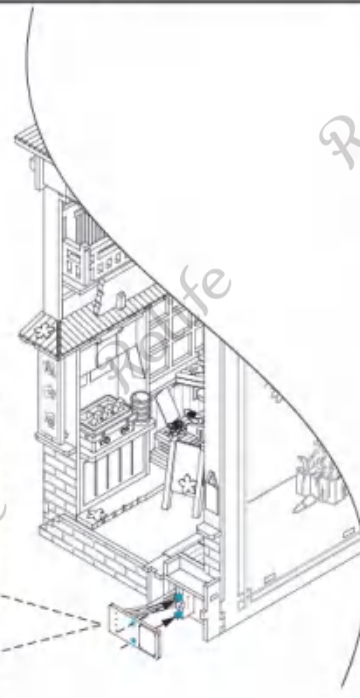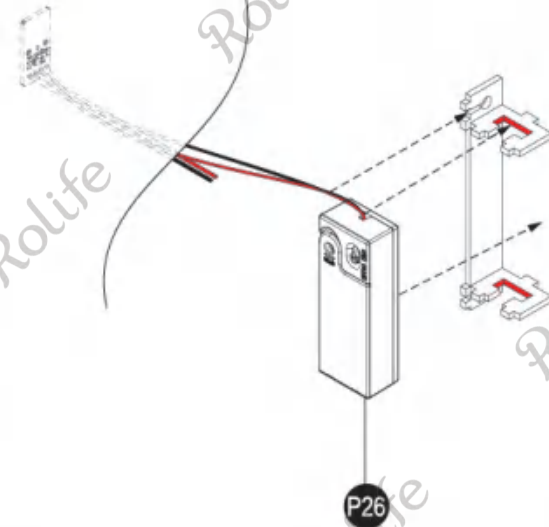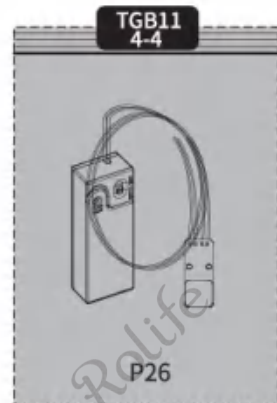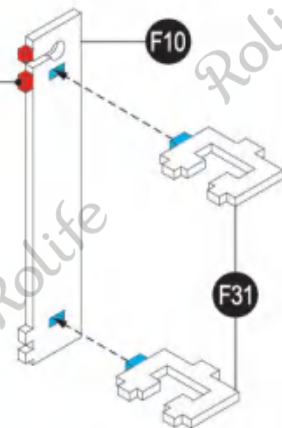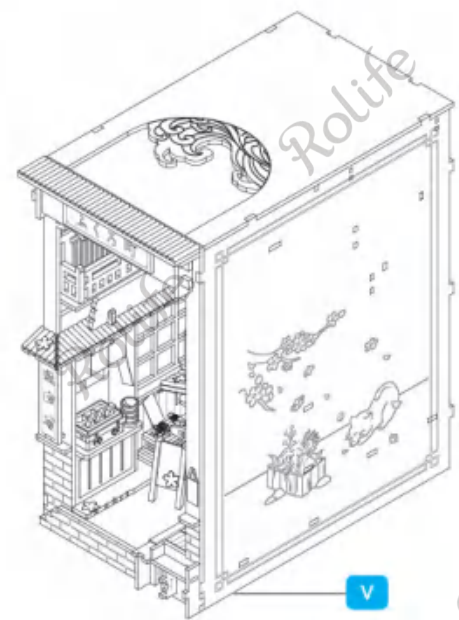

29

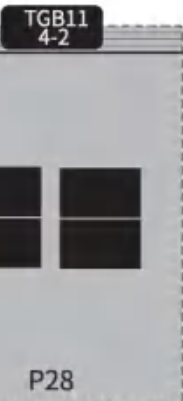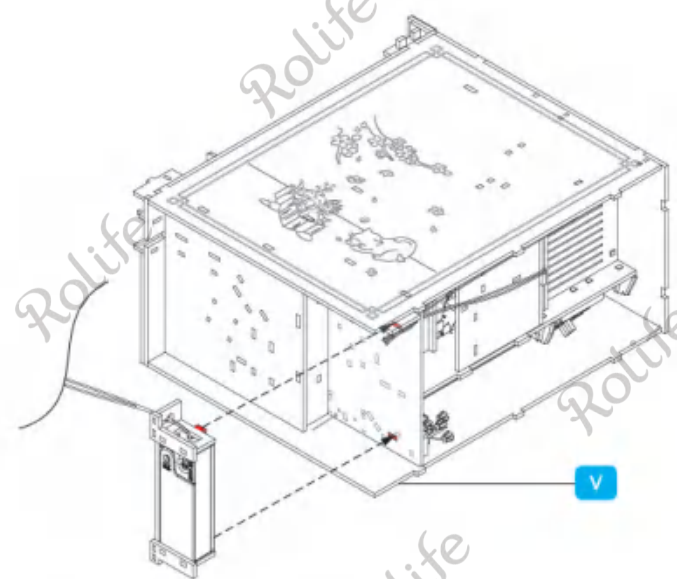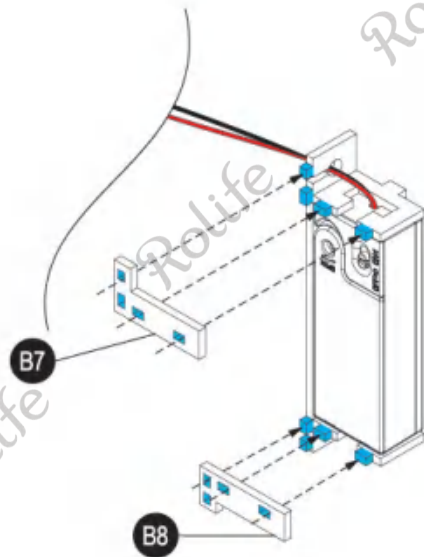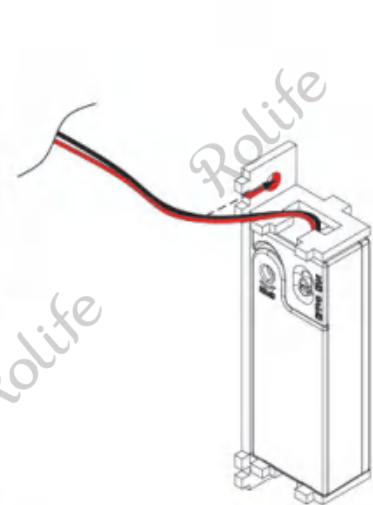

Remove the red and black wire terminals before connecting.

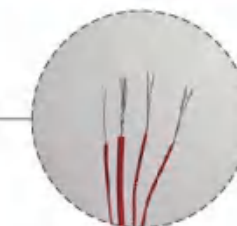


Distinguish between the red and black wires.





Tighten the wire ends of the same color.



Wrap insulating tape around the wire ends to prevent short circuits.

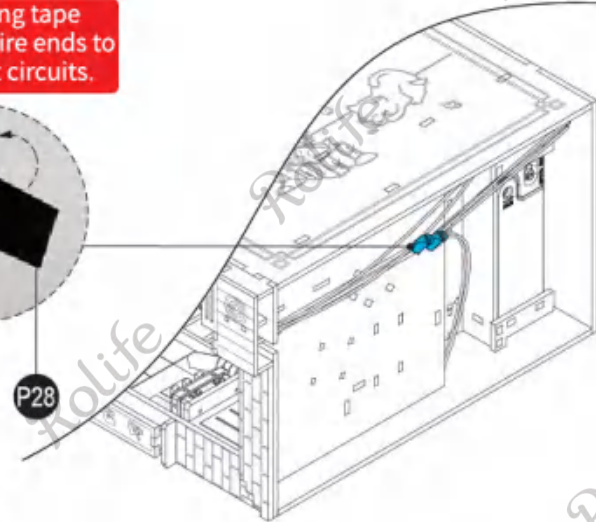

30

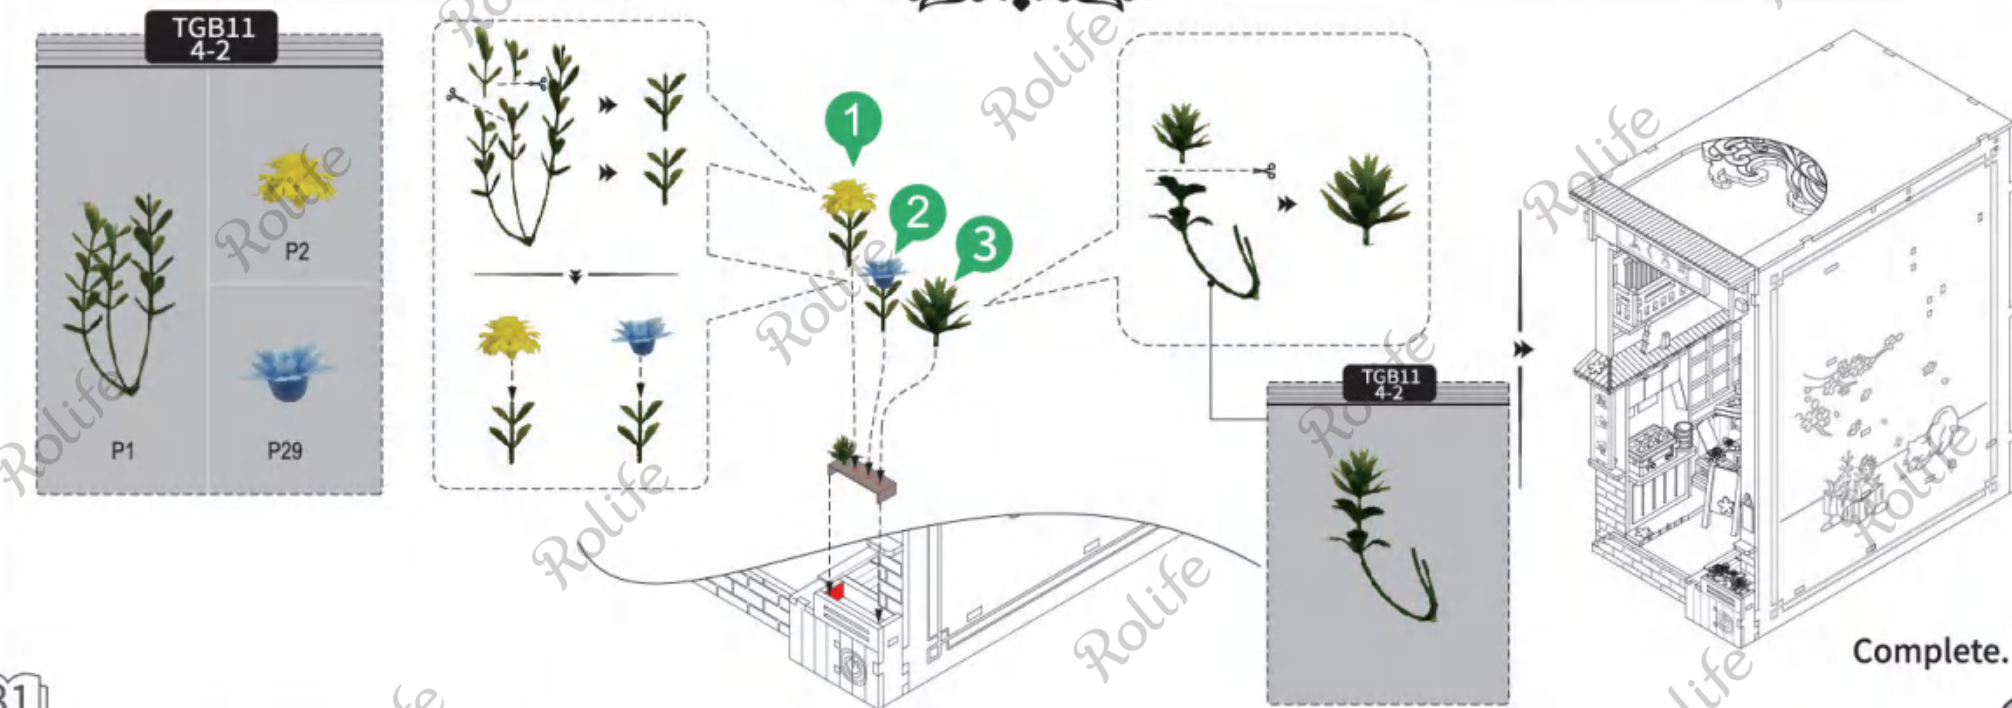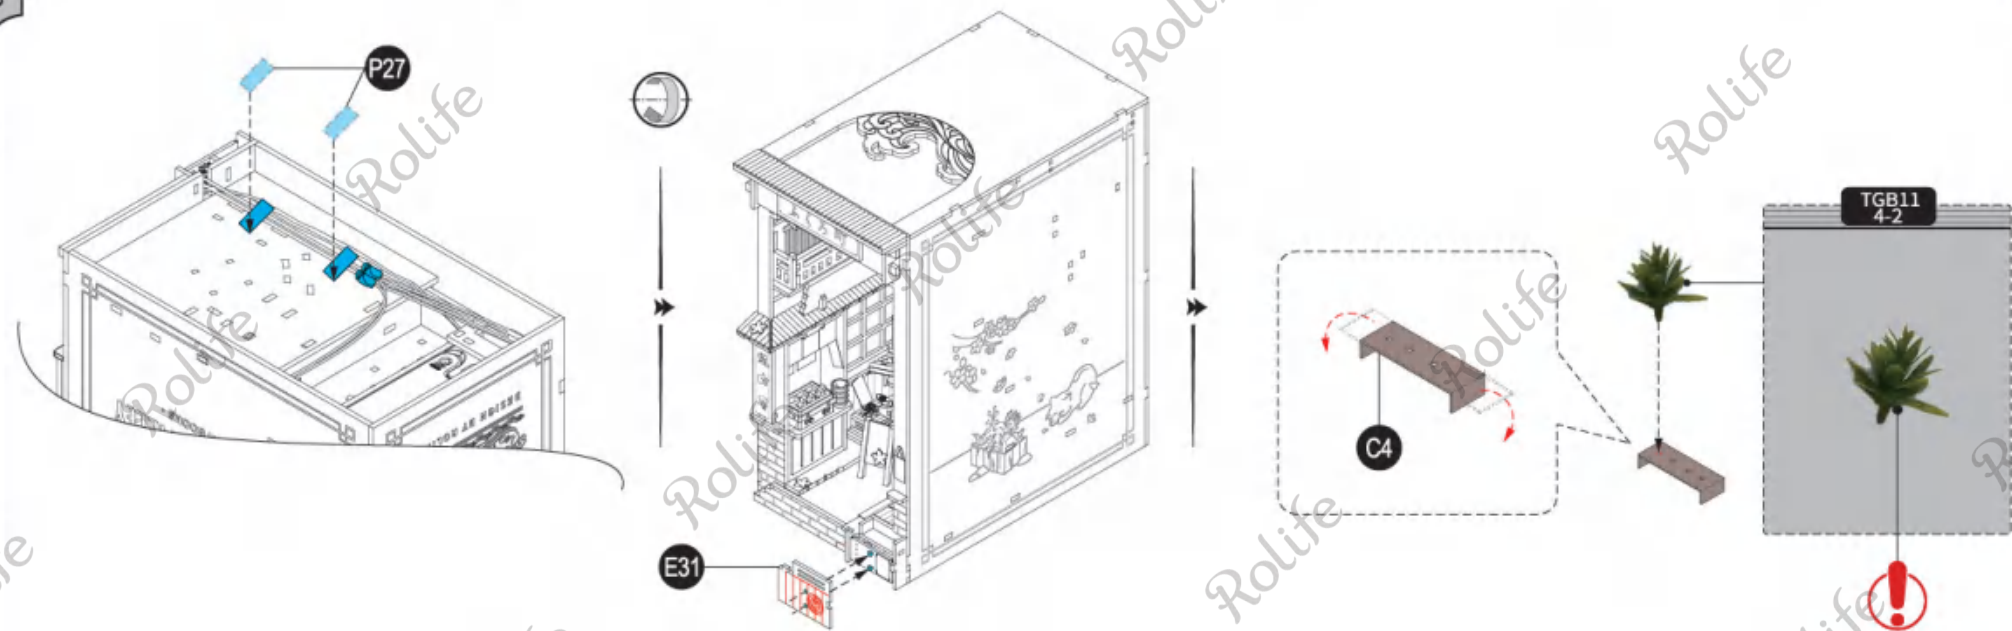


Light test

1. Self-prepare 2 "AAA/LR03/AM4 1.5V" batteries before testing.


2.



3.

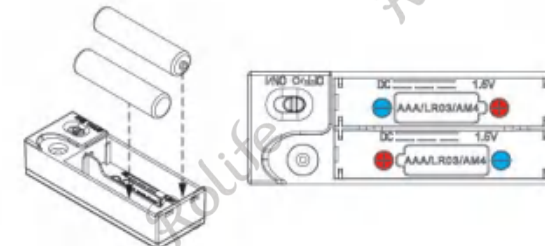


4.

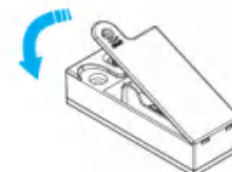

5. OFF→ON





6. Touch the switch to check if the light bead works.

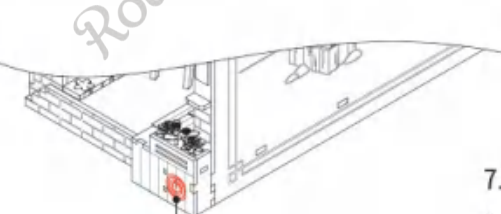

7. ON→OFF




Problem shooting instructions

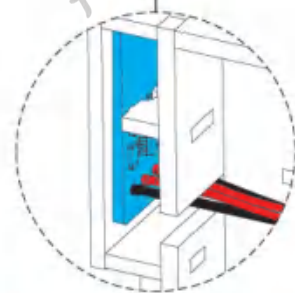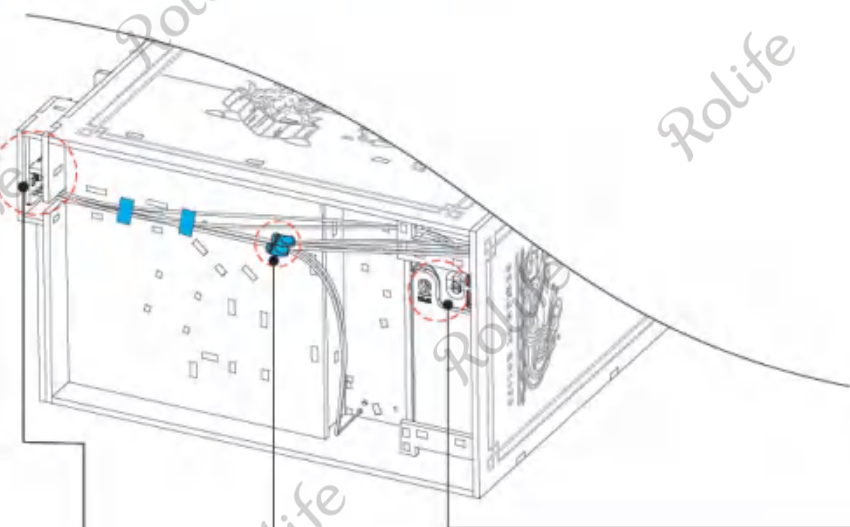


Check if the touch switch is securely attached to the board.
Check if there is wire breakage.



Check if the twined wires are the same color.
Check if the copper wire is exposed.
Check if the insulating tape wraps tightly.

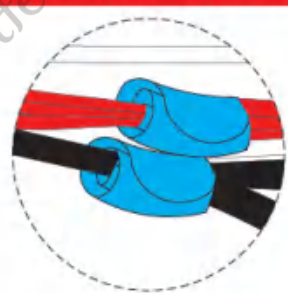

Check if the switch is "ON".
Check if the batteries are correctly installed.
Check if the batteries have power.

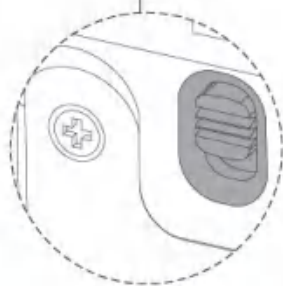

**BOOK NOOK
& WONDERLAND**

**SAKURA
WINE ALLEY**
• TGB11



ROLIFE Facebook



rolife.robotime.com/



TGB01
Sakura Densya



TGB02
Sunshine Town



TGB06
Garden House



TGB07
Bookstore



TGB09
Floral Corner



TGB10
Arcade Dating