49.1AF02S.100

Minty Camellia Lamp

AF02S / 73PCS

Minty Camellia Lamp

ROKR

⚠ WARNING:

- This product is powered by USB connection and does not contain Type-C power cable, which must be provided by yourself(Input: 5V⎓1A).
- Not suitable for children under 3 years old.
- The product shall only be used with a transformer for product or a power supply for it.
- The transformer or power supply is not a toy or model.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Do not connect the wire to output socket.
- The product is not to be connected to more than the recommended number of power supplies.
- The product contains motor, motor may be a hot component. Do not touch it to avoid burns while operating.
- This product does not need liquid cleaning, and please clean the product with clean soft cloth.
- This product contains functional edges and points that are sharp and hazardous. To prevent puncture injuries, adult supervision is required.
- This product is only to be connected to equipment bearing either of the following symbols:⊟or ⊕
- The product shall be used with the power supply supplied, if the transformer is supplied with the product.
- Misuse of transformer can cause electrical shock.
- The instruction must be retained since it contains important information.

NOTICE:

- The product contains small parts and electronic components. Adults should guide and supervise children in the correct use of the product to prevent ingestion or choking.
- Please read the instructions carefully before assembly to confirm that the parts are not damaged or missing.
- Take off the pieces from the board according to each step before assembling and place them properly in case of missing.
- Please install the electronic components correctly and test whether the circuit is normal after completion.
- Please don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- Please clean the product with clean soft cloth, and sand the board burr lightly with sandpaper.
- Please keep the product away from substances flammable and humid environments to prevent damage.

2 P5 Part P5 in Bag No. 2

Perspective changed

Special attention in assembly

Cut leftover cutting points

Grease with cotton swabs

Assembly tips

1 Step 1 2 Step 2

www.rokrtims.com store.rokrtims.com

1

Scan for assembling videos

Disassemble the shell first.

H1 H2

P5	P6	P7
5mm M2×5 ✓	5mm M1.4×5 ✗	4mm M1.4×4 ✗

H2

T1 2 P5 x2 1 P1 H2

1 P2 4 P19

Press the gear to the end by aligning with the notch.

P5 5mm M2×5

The gear should face downward.

4 P18

Note the direction of the terminal.

Use a screwdriver to press the wire into the slot.

T1

5 P30 1 P3

2

Put the wire into this.

5 P35 2 P9 2-1

4 P23 3 P12 4 P23 2-1

Grease with cotton swabs

3 P13

T5 T4 T4 T5 can be placed here.

3 P13

P5 5mm M2×5 P5 x4

Check

1. Whether 3 P13 is assembled reversely.
2. Whether the screws are tightened.

P5 x2 P5 5mm M2×5 4 P22

T6 T1 T6 T1

P5	P6	P7
5mm M2×5 ✗	5mm M1.4×5 ✓	4mm M1.4×4 ✗

2 P6

Check if the wire is tucked inside.

P5 5mm M2×5 P5

Note the direction of the terminal.

Rotate the gear counterclockwise to the end.

2-2

3

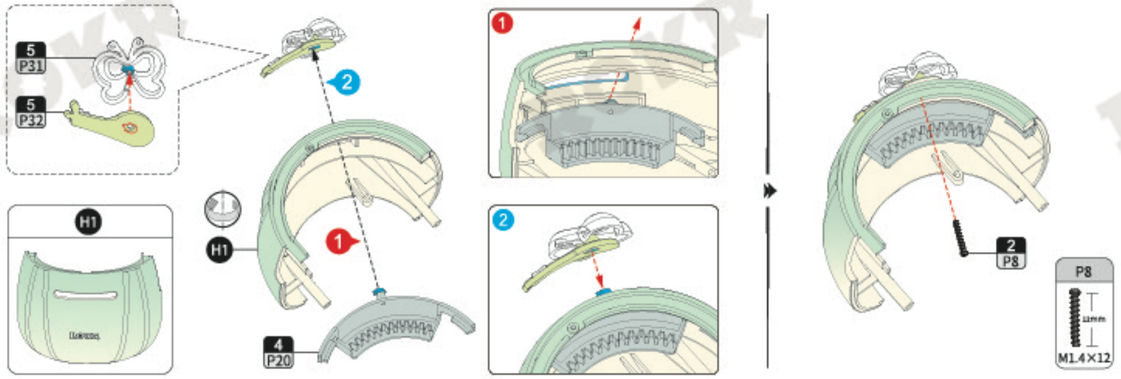

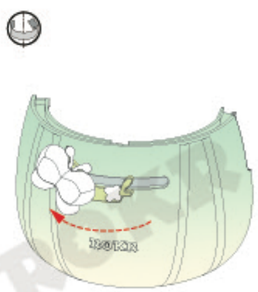

Slide the butterfly to the leftmost position.

Check

1. Whether the gear is rotated counterclockwise to the end.
2. Whether the butterfly is slid to the leftmost position.

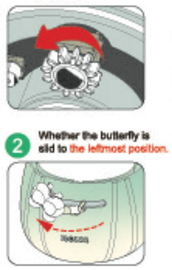

Assembly post illustration

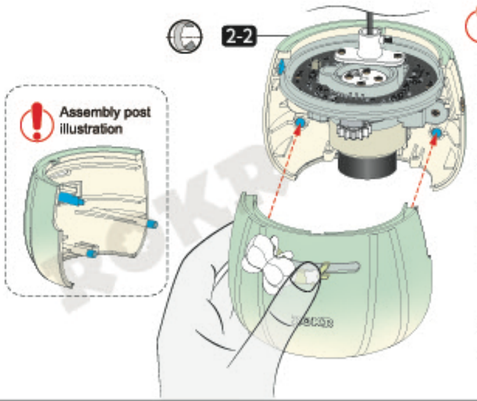

Be careful with the wires when pressing.

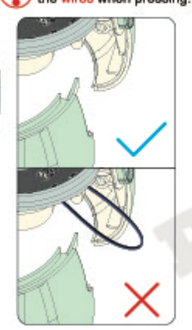

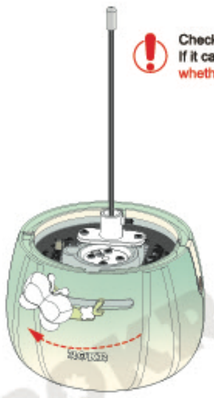

Check if the butterfly slides smoothly. If it cannot be slid, please check whether 1 2 are correct.

1. Rotate the gear counterclockwise to the end.
2. Slide the butterfly to the leftmost position.



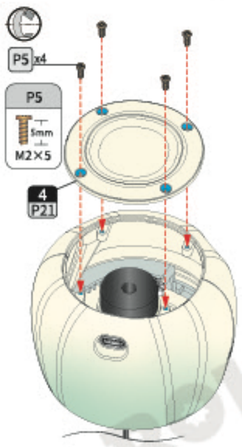

Note the direction of the terminal.

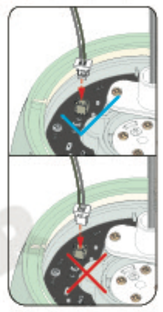

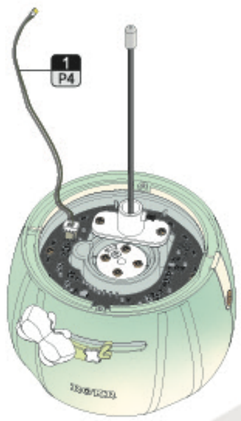

Electronic parts test

1. Connect to the power supply.
   Note: Self-prepare a Type-C cable.
   Input power supply: 5V⎓1000 mA
   Note: Over-current protection provided, adapters ≥ 1000 mA are acceptable.



2. Single click: Constant-on light + Motor rotation
   (Adjust brightness by sliding the butterfly only in the constant-on mode.)



3. Single click to switch modes:
   ① Breathing light + Motor rotation ② Constant-on light ③ Constant-on light + Motor rotation



4. Long press: Power off



5. Unplug the power supply.

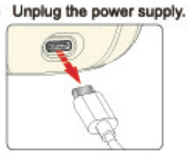

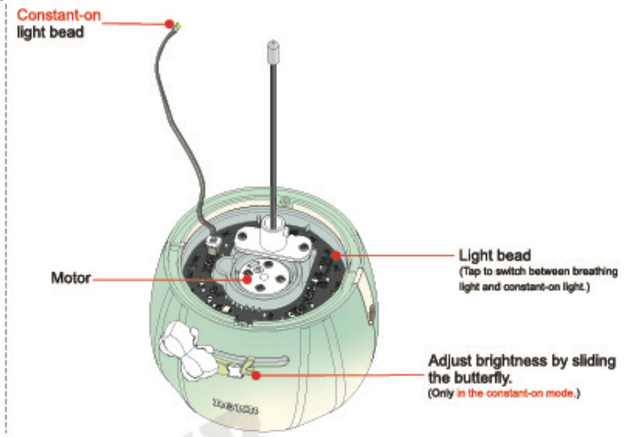

4

Scan for assembling videos

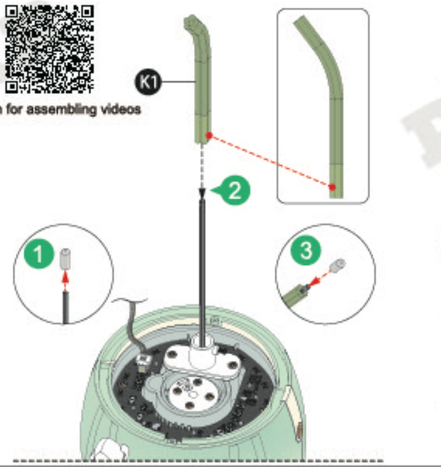

1 Reference for flower stem angle
(Tighten the screws after adjusting the angle.)



2 The flower stem shouldn't move up and down after tightening the screws.
(Both of the following states are right.)

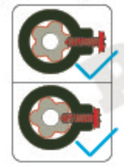

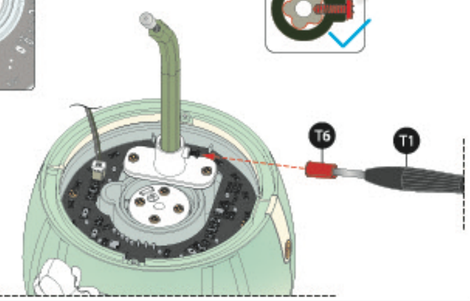

Note: Thread the wire through.

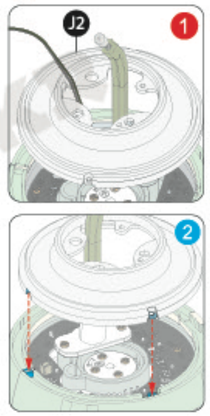

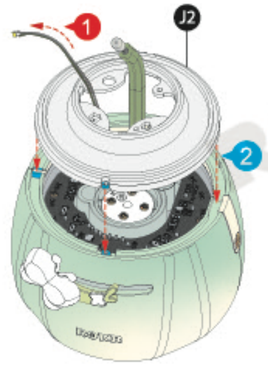

P5	P6	P7
5mm M2×5	5mm M1.4×5	4mm M1.4×4
✗	✗	✓

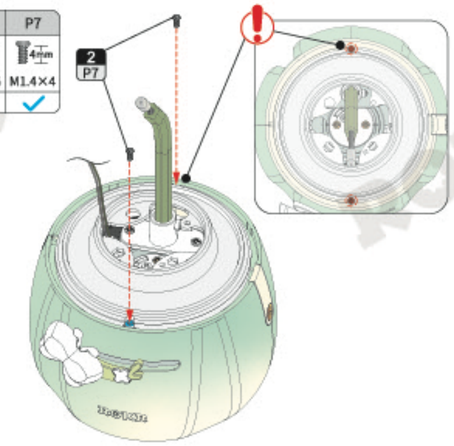

Note: Thread the wire through.

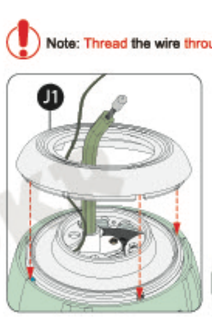

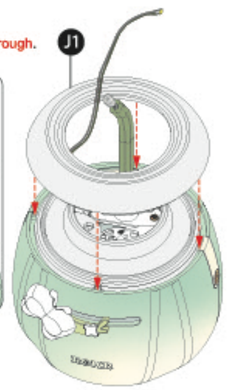

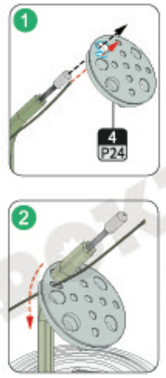

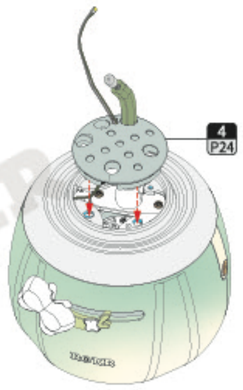

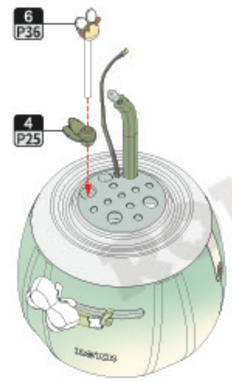

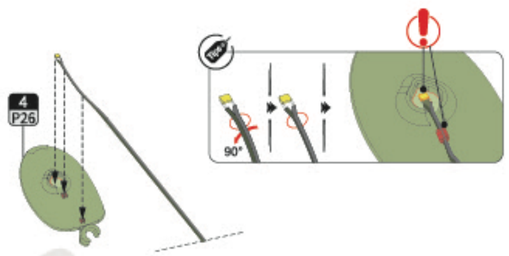

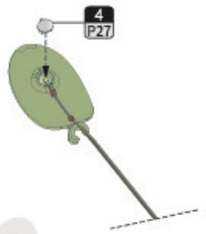

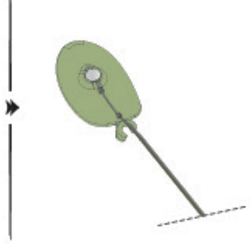

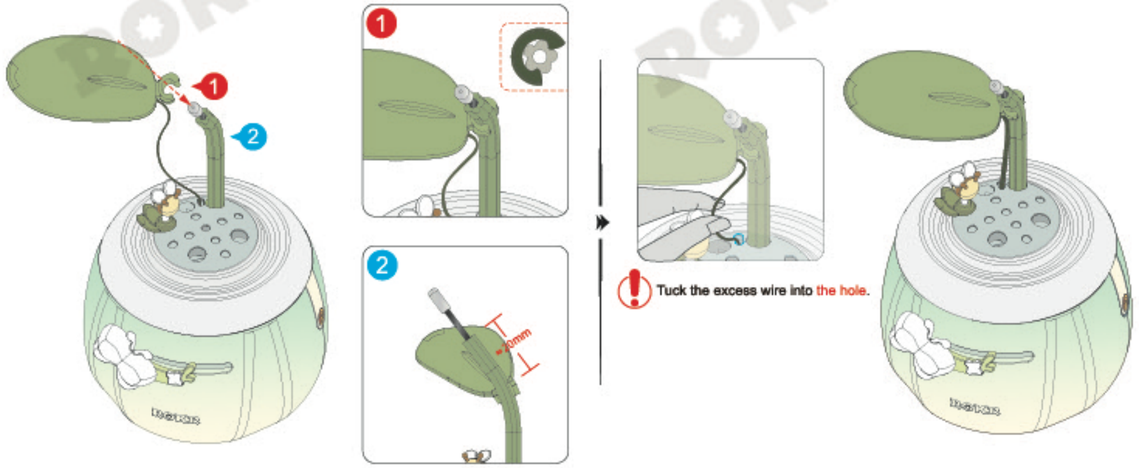
1
2
10mm
Tuck the excess wire into the hole.

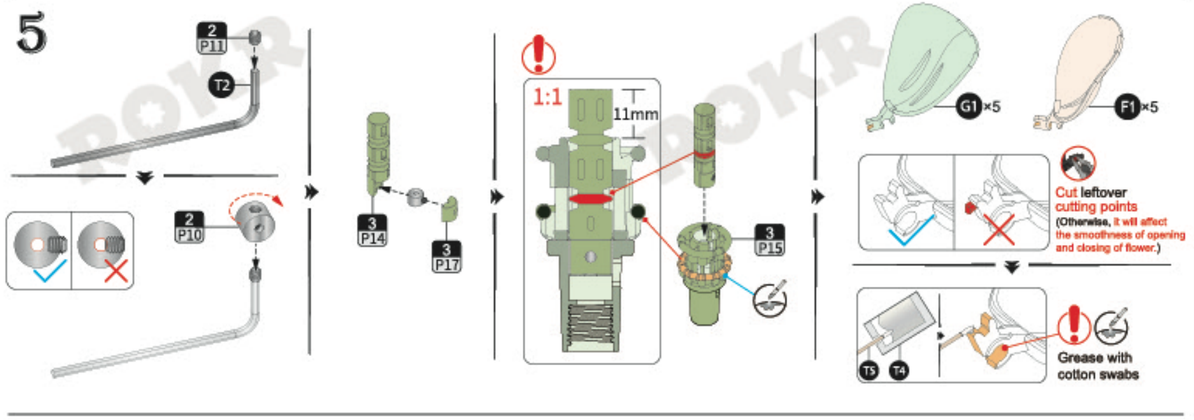
5
2 P11
T2
2 P10
3 P14
3 P17
1:1
11mm
3 P15
G1 ×5
F1 ×5
Cut leftover cutting points
(Otherwise, it will affect the smoothness of opening and closing of flower.)
T5
T4
Grease with cotton swabs

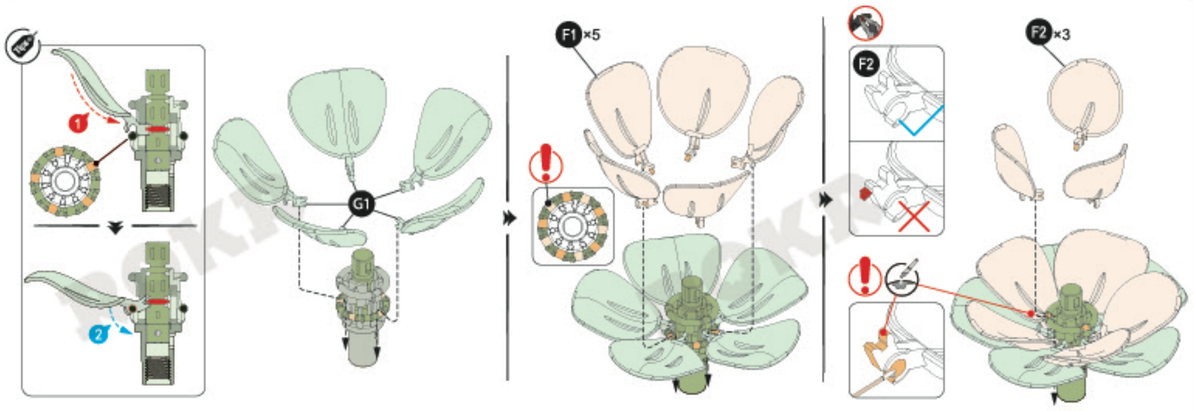
F1 ×5
G1
F2
F2 ×3

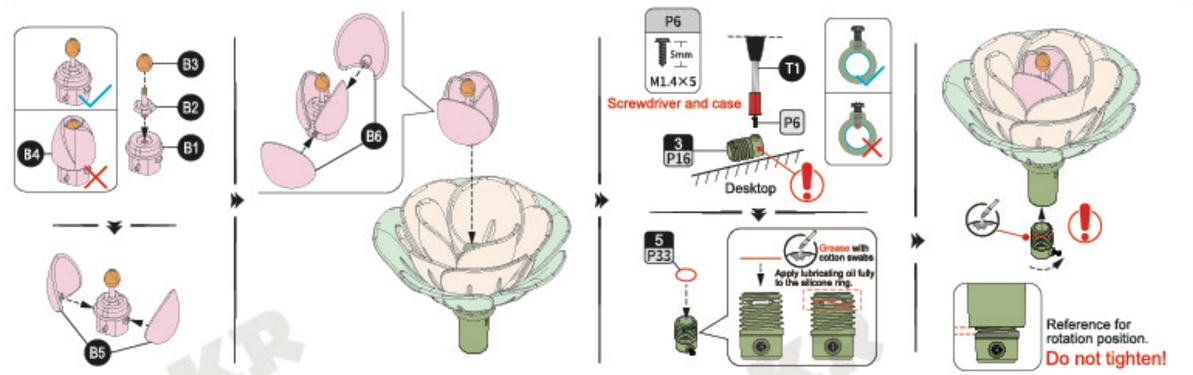
B4
B3
B2
B1
B5
B6
P6
5mm
M1.4×5
T1
Screwdriver and case
3 P16
Desktop
5 P33
Grease with cotton swabs
Apply lubricating oil fully to the silicone ring.
Reference for rotation position.
Do not tighten!

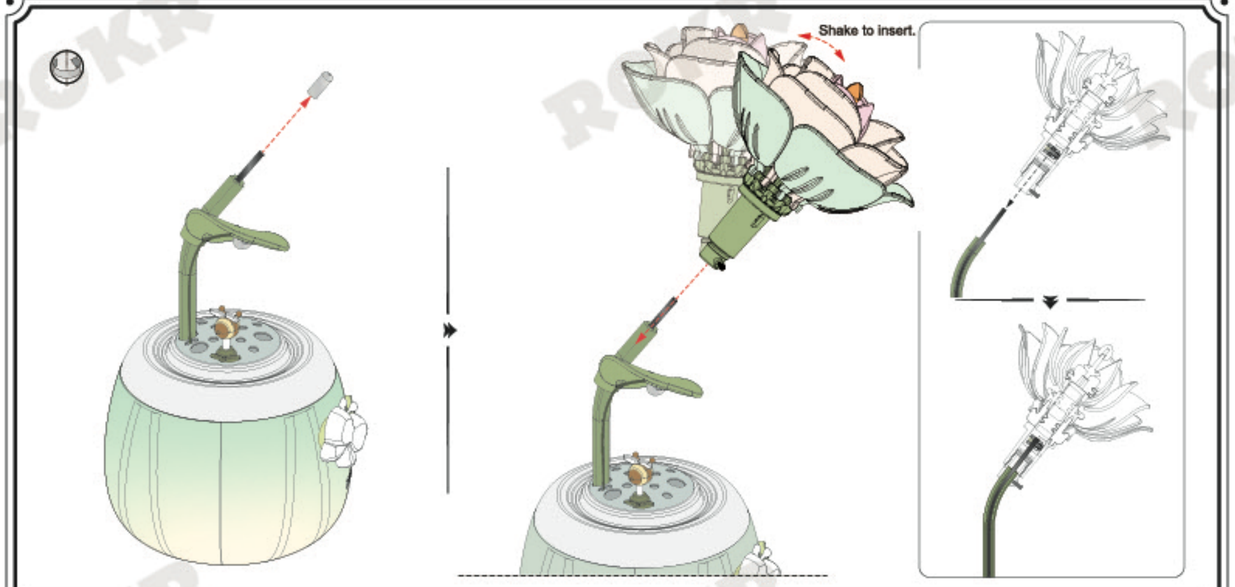
Shake to insert.

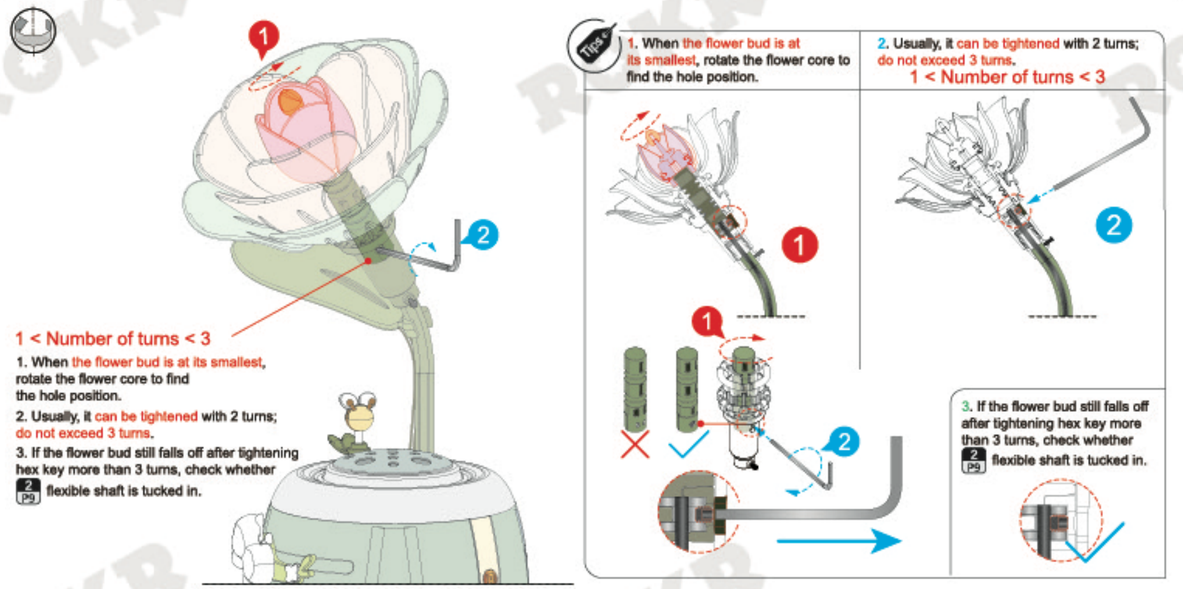
1 < Number of turns < 3
1. When the flower bud is at its smallest, rotate the flower core to find the hole position.
2. Usually, it can be tightened with 2 turns; do not exceed 3 turns.
3. If the flower bud still falls off after tightening hex key more than 3 turns, check whether 2 P9 flexible shaft is tucked in.
Tips:
1. When the flower bud is at its smallest, rotate the flower core to find the hole position.
2. Usually, it can be tightened with 2 turns; do not exceed 3 turns.
1 < Number of turns < 3
3. If the flower bud still falls off after tightening hex key more than 3 turns, check whether 2 P9 flexible shaft is tucked in.

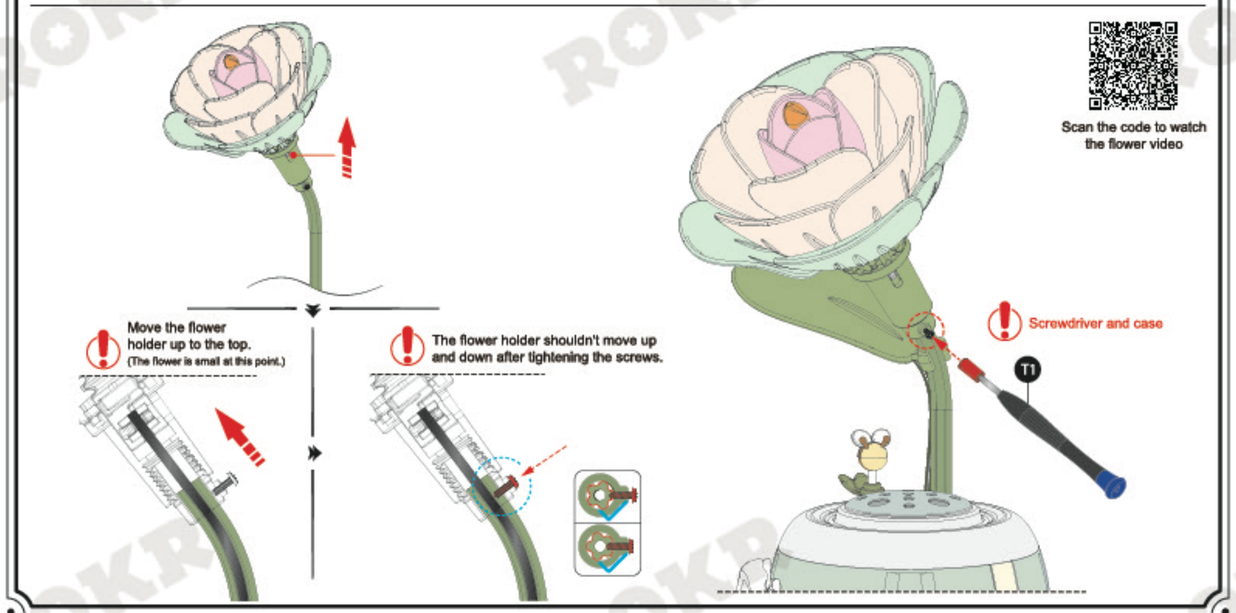
Move the flower holder up to the top.
(The flower is small at this point.)
The flower holder shouldn't move up and down after tightening the screws.
Scan the code to watch the flower video
Screwdriver and case
T1

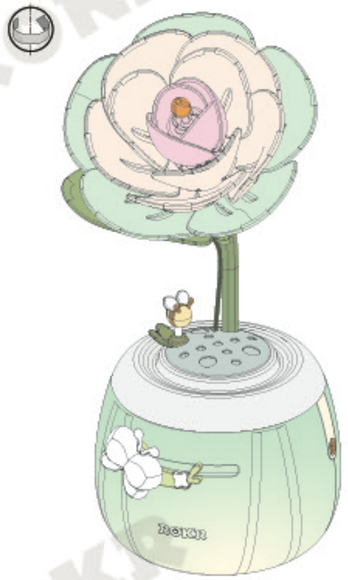

Connect to the power supply, then observe and adjust the flower bud (no need to power off / modes can be switched, multiple adjustments allowed).

a: If the flower bud is too big / remains in the maximum state,rotate the flower holder counterclockwise.

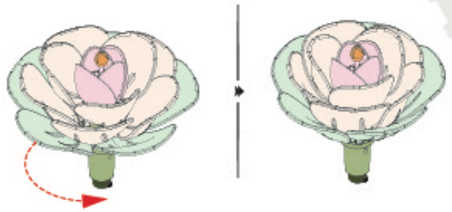

b: If flower bud is too small / remains in the minimum state, rotate the flower holder clockwise.

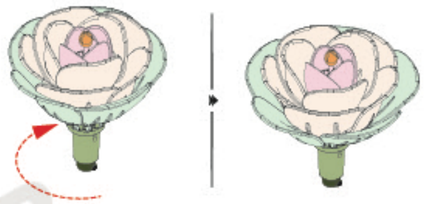

6

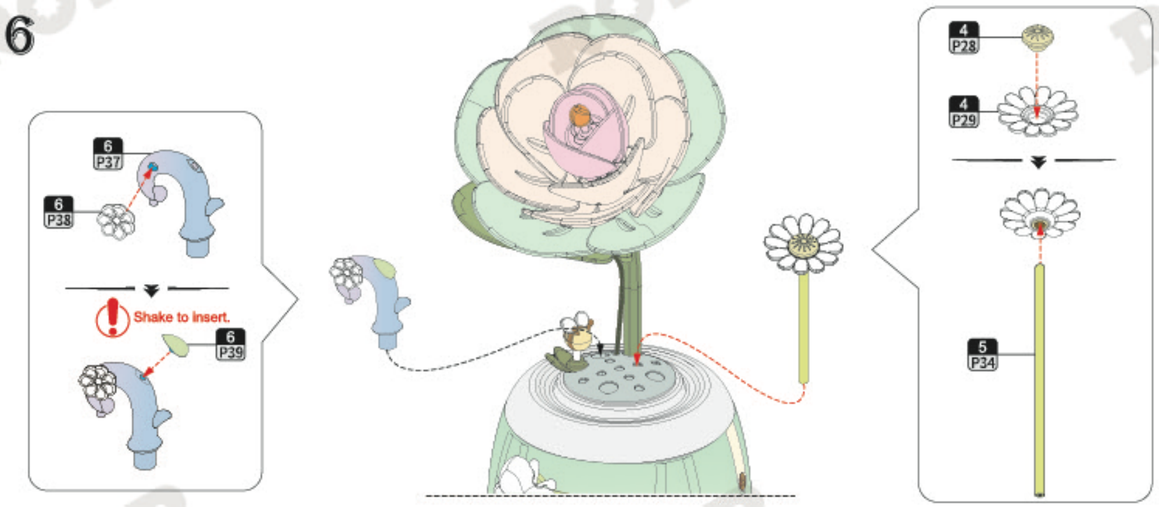

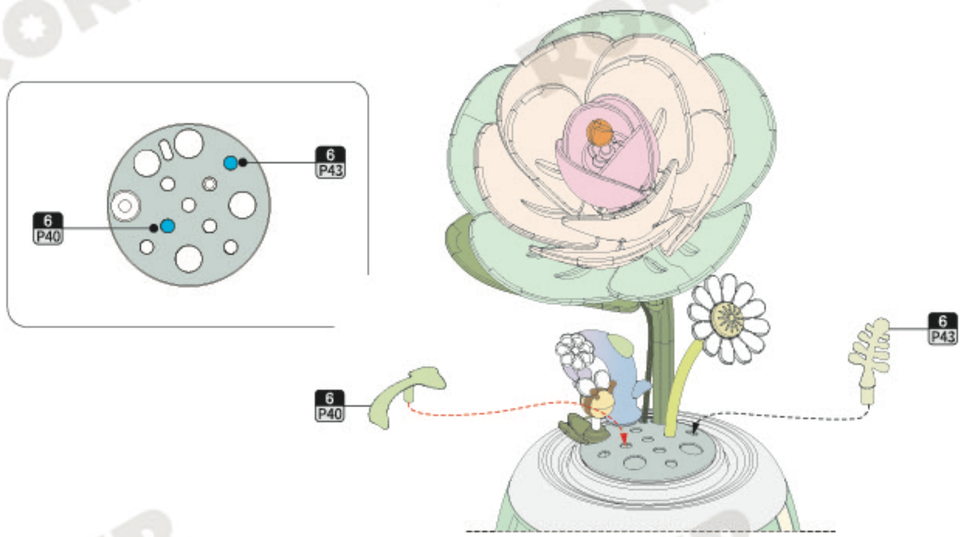

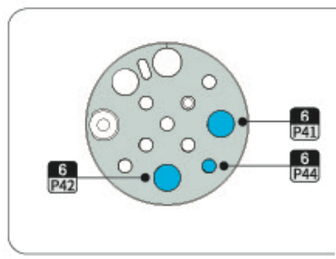

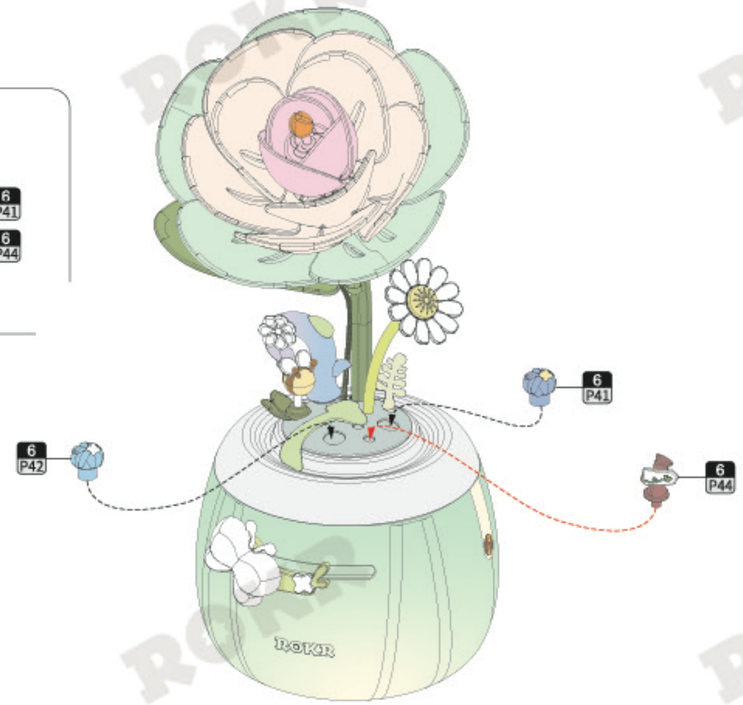

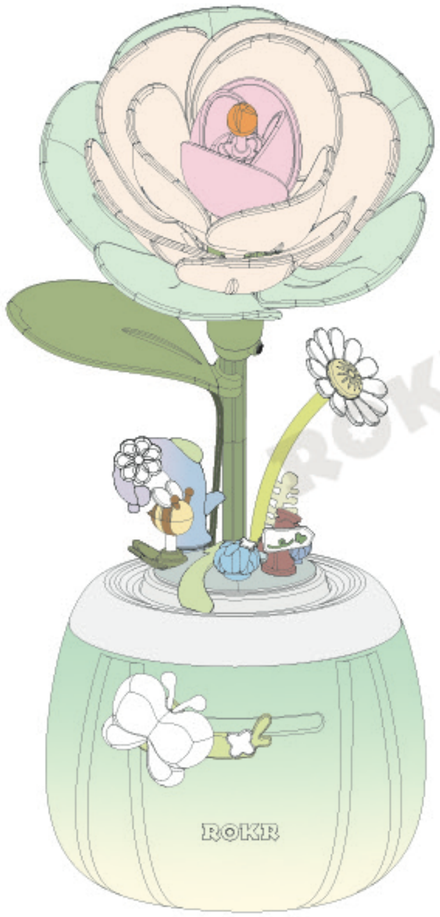

1 Connect to the power supply.
Note: Self-prepare a Type-C cable.
Input power supply: 5V⎓1000 mA
Note: Over-current protection provided, adapters ≥ 1000 mA are acceptable.

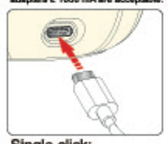

Single click:
Constant-on light + Blooming Flower
(Can run continuously for 20 minutes.)
(Adjust brightness by sliding the butterfly only in the constant-on mode.)



3 Single click to switch modes:
① Breathing light + Motor rotation ② Constant-on light ③ Constant-on light + Motor rotation



4 Long press: Power off



5 Unplug the power supply.

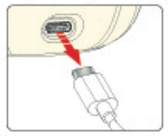

Complete.